
Eureka!

INSTRUCTIONS | NoBugZone 3in1 (2624531)


1 Identify all tent components (see list below).

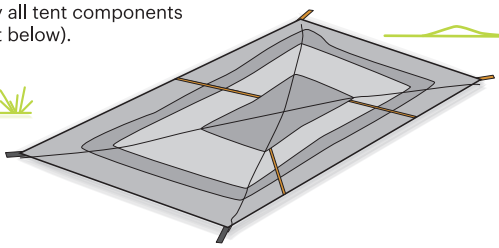

2 Spread out tent body and identify the front (2 zippers) and rear (1 zipper) of the tent.


3 Assemble all poles.

4 Orient peak hub assembly so that the wider angles are facing the front and rear of screenhouse.

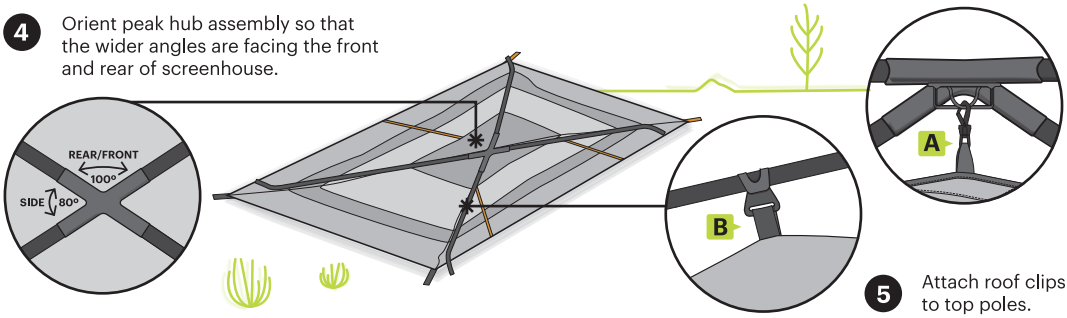

5 Attach roof clips to top poles.

WARNING **Ensure that peak hub, roof pole, and leg pole sticker colors match the corner webbing. Improper hub/frame alignment will damage the frame.**

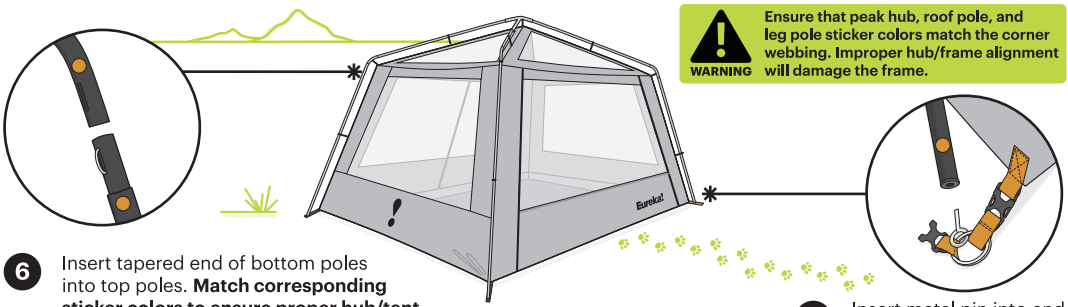


6 Insert tapered end of bottom poles into top poles. **Match corresponding sticker colors to ensure proper hub/tent alignment**. Ensure that locking clips have engaged.

7 Insert metal pin into end of each bottom pole.

8 Attach all remaining clips to poles and stake down 4 corners. **NOTE: 4 corners of tent must be staked down to ensure stability and operation.**

10 Secure fly to screenhouse by connecting buckles on fly at 4 corners of screenhouse.

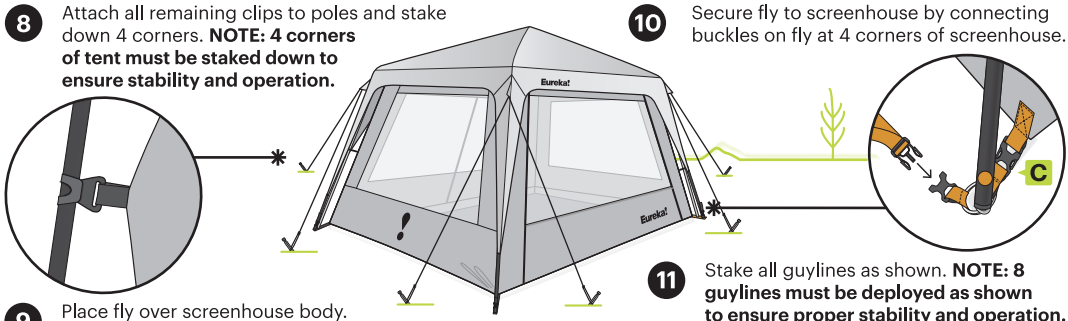

9 Place fly over screenhouse body. Match **YELLOW** and **BLACK** webbing on fly and tent for correct orientation. Locate hook and loop fasteners on underside of fly and attach to poles.

11 Stake all guylines as shown. **NOTE: 8 guylines must be deployed as shown to ensure proper stability and operation.**

12 **Open Shelter Conversion:** (**A**) Detach peak hook, (**B**) all pole clips, and (**C**) 4 corner buckles to remove inner shelter.

TENT CONTENTS

Screenhouse body + fly
Peak hub + top pole assembly (1)
Steel bottom poles (4)
Plastic stakes (9)
Steel stakes (8)
Guy lines (8)

QUESTIONS?

Johnson Outdoors Gear, Inc.
USA: 1-800-572-8822
www.eurekacamping.com

Johnson Outdoors Canada
Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.