
Eureka!

INSTRUCTIONS | NoBugZone CT13 (2599470)

SET UP USING POLES

1. Identify all tent components (see list below).

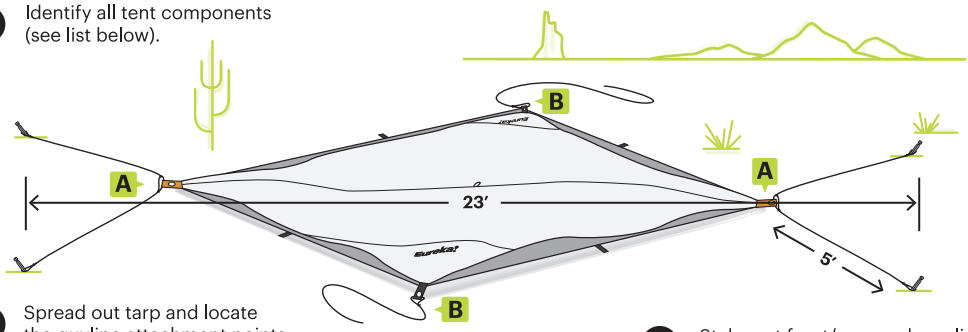


2. Spread out tarp and locate the guyline attachment points at front/rear peaks (**A**) (**YELLOW**) and side eaves (**B**) (**BLACK**).

3. Stake out front/rear peak guylines in a V orientation. (5 ft from the foot of tarp, 23 ft from each other).

4. Assemble poles and adjust length to 7.5 ft.


5. Insert support pole tip into grommet at front peak. Adjust the guylines and lift pole into angled position (as shown) so that the pole is self-standing.

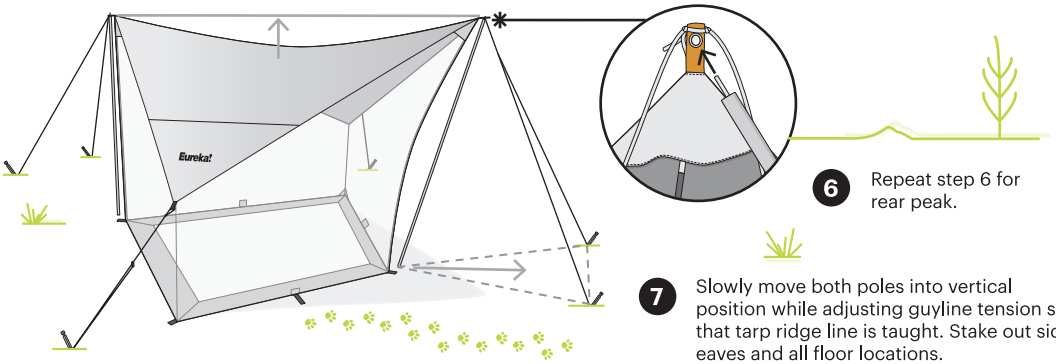

6. Repeat step 6 for rear peak.

7. Slowly move both poles into vertical position while adjusting guyline tension so that tarp ridge line is taught. Stake out side eaves and all floor locations.

SET UP USING TREES

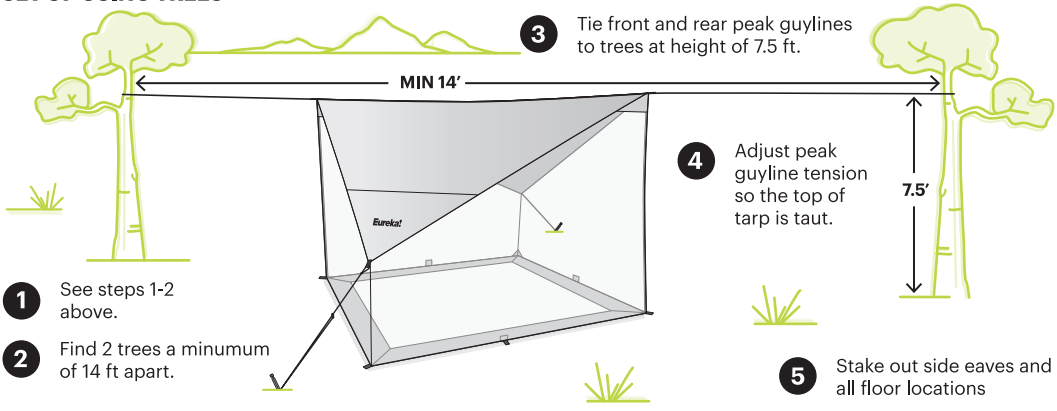

1. See steps 1-2 above.
2. Find 2 trees a minumum of 14 ft apart.
3. Tie front and rear peak guylines to trees at height of 7.5 ft.
4. Adjust peak guyline tension so the top of tarp is taut.
5. Stake out side eaves and all floor locations

TENT CONTENTS

Tarp
Poles (2) SOLD SEPARATELY
Stakes (14)
Guylines (6)

QUESTIONS?

Johnson Outdoors Gear, Inc.
USA: 1-800-572-8822
www.eurekacamping.com

Johnson Outdoors Canada
Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

TENT CARE

- Connect all hook and loop fasteners before packing tent to avoid snagging and damaging the mesh.
- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.

rev 1 - 2/2020