

Eureka!

INSTRUCTIONS | Timberline 2 (2627700)


1. Identify all tent components (see list below).

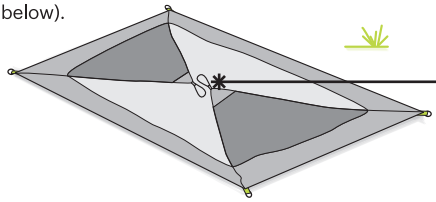



2. Spread out tent body and locate 4 corners and peak shockcord.

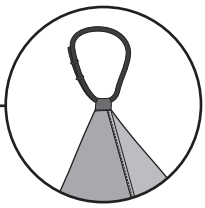

3. Assemble 4 leg poles and ridge pole.

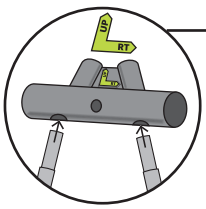

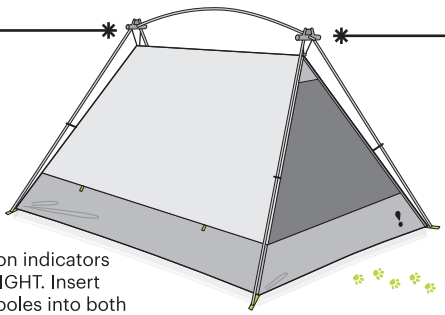


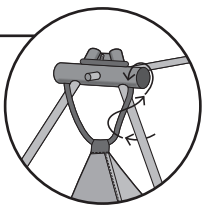



4. Verify hub orientation indicators are facing UP and RIGHT. Insert tapered end of leg poles into both peak hubs.

5. Insert ridge pole into both peak hubs. Hook peak shockcord around peak hubs

6. Insert metal pins into bottom of each leg pole.

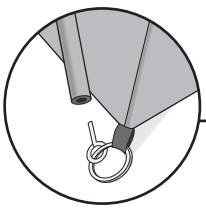

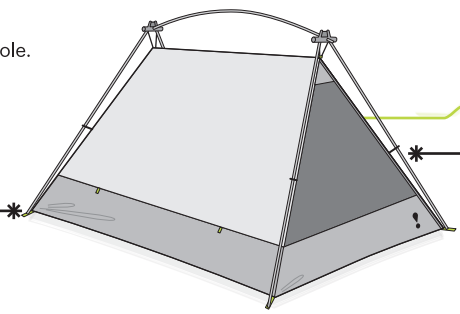


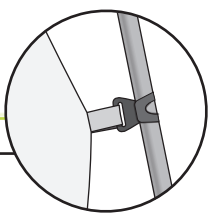



7. Attach all clips to poles and stake down 4 corners.


8. Slide eave pole extension onto end of ridge poles at peak hubs.

9. Place fly over tent body.

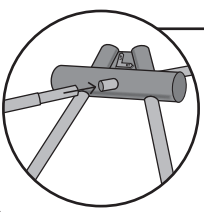

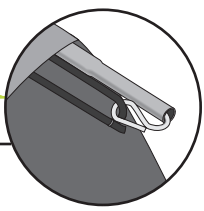

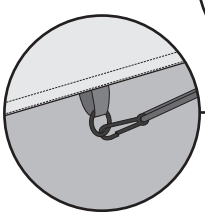

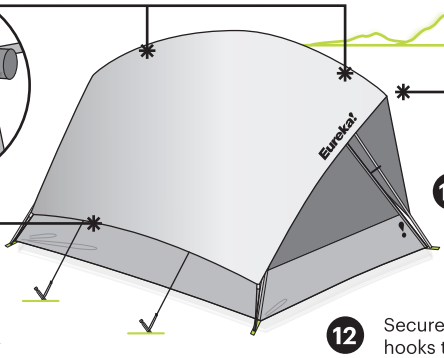

10. Insert 2 hooks on underside of fly into end of eave pole extensions.

11. Attach 4 hooks on underside of fly to tent body rings.

12. Secure fly to tent by attaching fly hooks to metal rings at tent corners. Stake down 4 side guylines.

TENT CONTENTS

Tent body
Tent fly
Leg poles (4) medium
Ridge pole (1) long
Eave pole extensions (2) short
Steel stakes (8)

QUESTIONS?

Johnson Outdoors Gear, Inc.
USA: 1-800-572-8822
www.eurekacamping.com

Johnson Outdoors Canada
Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.