

Eureka!

INSTRUCTIONS | Timberline 4 (2627800)


1 Identify all tent components (see list below).

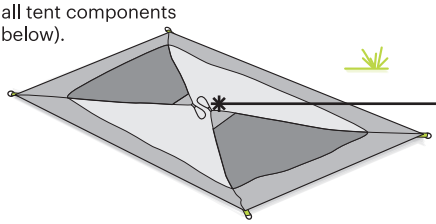



2 Spread out tent body and locate 4 corners and peak shockcord.

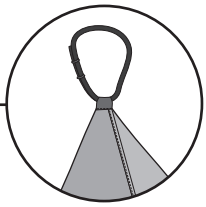

3 Assemble 4 leg poles and ridge pole.

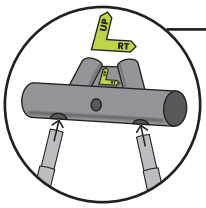

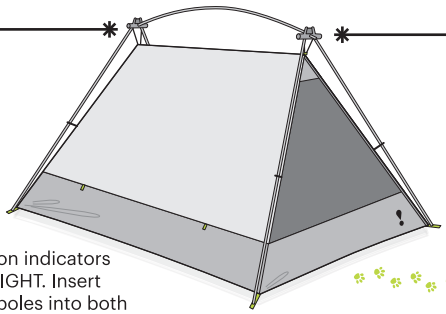


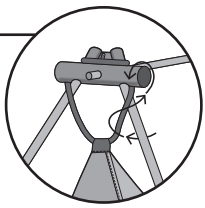



4 Verify hub orientation indicators are facing UP and RIGHT. Insert tapered end of leg poles into both peak hubs.

5 Insert ridge pole into both peak hubs. Hook peak shockcord around peak hubs

6 Insert metal pins into bottom of each leg pole.

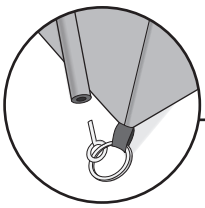

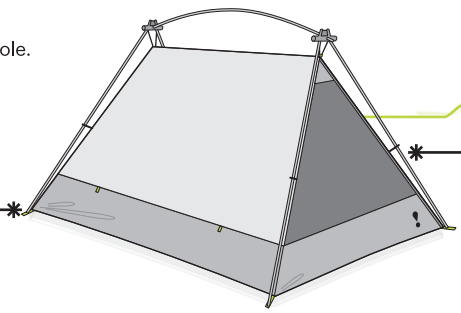


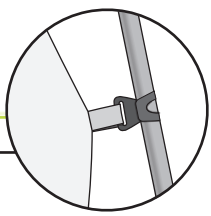



7 Attach all clips to poles and stake down 4 corners.

8 Slide eave pole extension onto end of ridge poles at peak hubs.


9 Place fly over tent body.

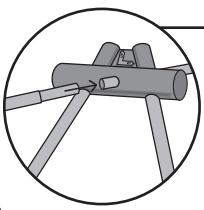

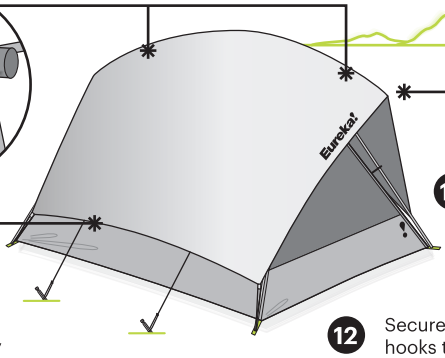

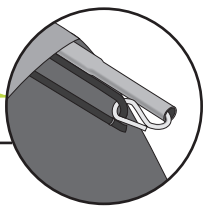

10 Insert 2 hooks on underside of fly into end of eave pole extensions.

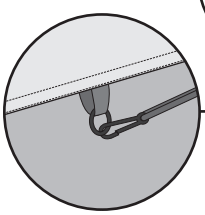

11 Attach 4 hooks on underside of fly to tent body rings.

12 Secure fly to tent by attaching fly hooks to metal rings at tent corners. Stake down 4 side guylines.

TENT CONTENTS

Tent body
Tent fly
Leg poles (4) medium
Ridge pole (1) long
Eave pole extensions (2) short
Steel stakes (8)

QUESTIONS?

Johnson Outdoors Gear, Inc.
USA: 1-800-572-8822
www.eurekacamping.com

Johnson Outdoors Canada
Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.