
Eureka!


INSTRUCTIONS | Timberline SQ Outfitter 4 (2627814)


1. Identify all tent components (see list below).

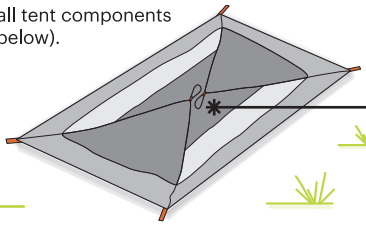



2. Spread out tent body and locate 4 corners and peak shockcord.

3. Assemble 2 leg poles and ridge pole.

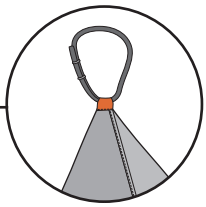

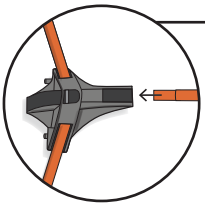

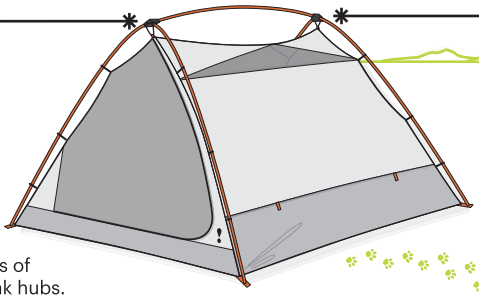


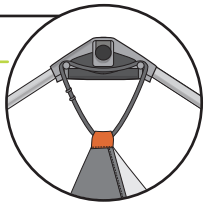

4. Verify hub orientation and insert opposite ends of ridge pole into both peak hubs.


5. Hook peak shockcord around peak hubs as shown.

6. Insert spreader pole into webbing pockets located on tent roof.

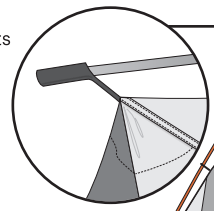





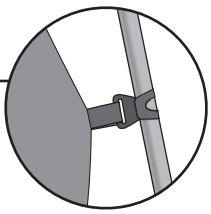


7. Insert leg pole tips into webbing grommets at 4 corners.


8. Attach all clips to poles and stake down 4 corners using plastic stakes.

9. Place fly over tent body. Insert spreader pole pockets into webbing pockets located on underside of fly.

11. Attach 4 toggles on underside of fly to tent body rings.

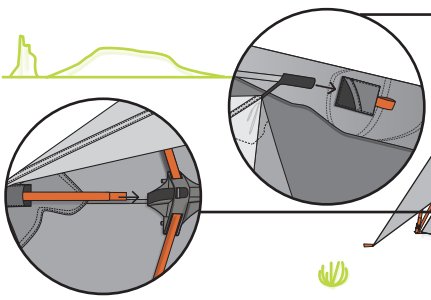



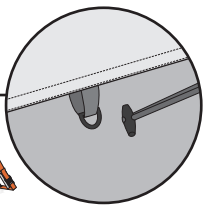

10. Insert eave pole extensions into webbing pockets located on underside of fly and insert opposite ends into peak hubs.

12. Secure fly to tent by attaching corresponding buckles on tent fly and body. Stake down side pullouts and vestibules using 8 steel stakes.

TENT CONTENTS

Tent body + Tent fly
Leg poles with hub (2)
Ridge pole (1) long
Spreader pole (1) short
Eave pole extensions (2) short
Frame field repair sleeve (1)
Steel stakes (8) + Plastic stakes (4)
Guylines (4)

QUESTIONS?

Johnson Outdoors Gear, Inc.
USA: 1-800-572-8822
www.eurekacamping.com

Johnson Outdoors Canada
Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.