

Eureka!


INSTRUCTIONS | Trail Fly 10/14 (2670004/2670007)

SUGGESTED PITCH OPTIONS

The Eureka Trail Fly is a versatile, multipurpose camping accessory. See below for a variety of suggested pitch options. Please note that some pitch options may require additional guylines, tarp poles, and/or stakes. The attached carry bag doubles as an integrated paddle pocket for pitching with kayak/canoe paddles.

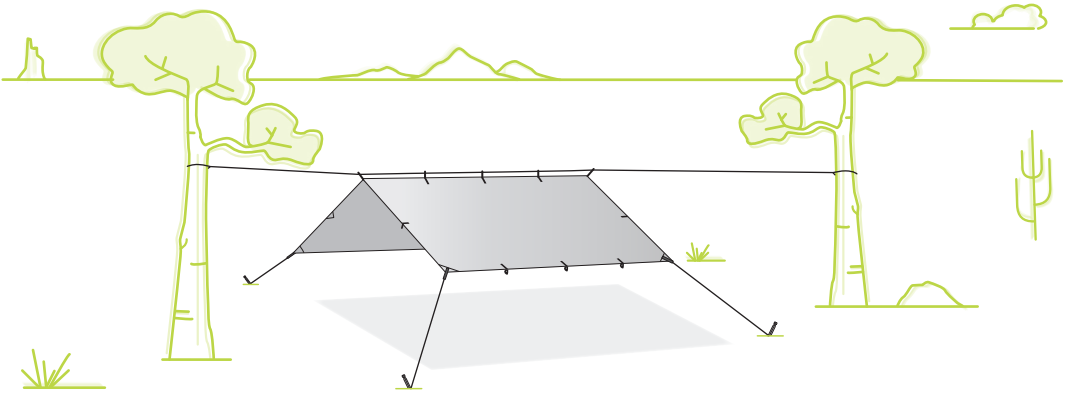

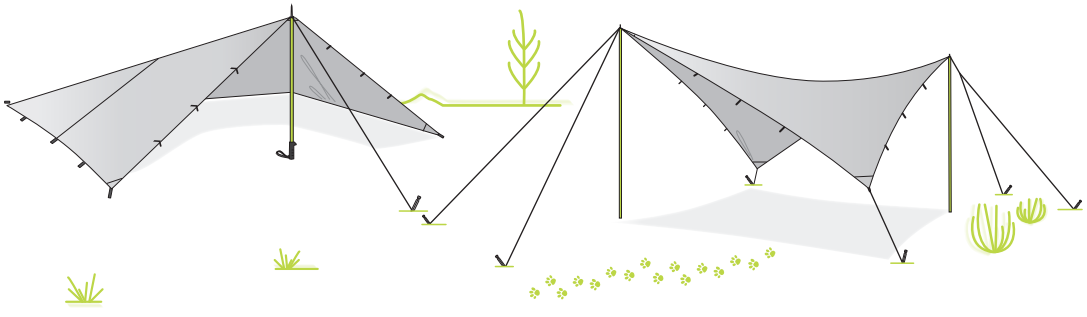

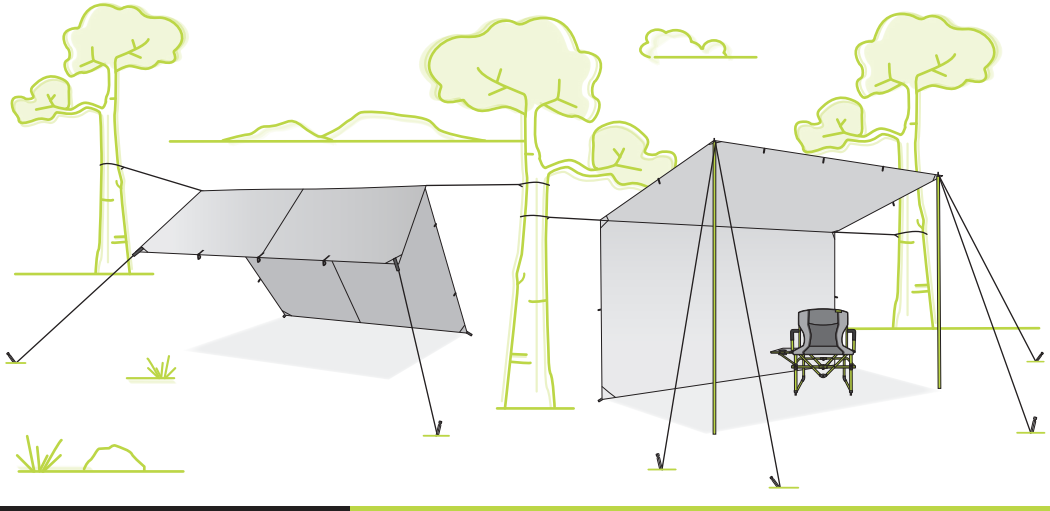

TENT CONTENTS

Tarp
Stakes (8)
Guylines (8)

QUESTIONS?

Johnson Outdoors Gear, Inc.
USA: 1-800-572-8822
www.eurekacamping.com

Johnson Outdoors Canada
Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tarp, including all guyout points.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.