One-Year Limited Warranty

Bass Pro Shops® will repair or replace (at our discretion) any Johnny Morris reel which proves to be defective in workmanship or materials within one year from the original date of purchase. You must save your dated sales receipt for warranty validation. This warranty gives you special legal rights, and you may have other rights which vary from state to state.

For reels purchased through our catalogs or Bass Pro Shops® online:

For reel replacement only: Return your reel **postage prepaid with your dated sales receipt** to the Return Center address listed on your receipt.

For reel repair only: Return you reel **postage prepaid with a copy of your dated sales receipt** as proof of purchase and warranty validation to the Outdoor World Rod & Reel Repair address listed under Care and Lubrication.

For reels purchased through Bass Pro Shops® retail locations:

For reel replacement only: Return your reel (**postage prepaid if sending by mail**) to the store from which it was purchased along with your dated sales receipt.

For reel repair only: Return your reel **postage prepaid with a copy of your dated sales receipt** as proof of purchase and warranty validation to the Outdoor World Rod & Reel Repair address listed under Care and Lubrication.

This warranty does not cover lost parts, malfunctions or damage due to abuse, accidents, normal wear, or cleaning and relubrication required due to the owner's failure to provide reasonable and necessary maintenance.

Repairs needed to your reel due to abnormal use, modification, or reels past the one-year warranty period are available, for a reasonable charge, providing the reel is returned **postage prepaid**, from Outdoor World Rod & Reel Repair.

Except to the extent prohibited by applicable law, there are no warranties or conditions, express or implied, other than those expressly set out herein. Bass Pro Shops® shall not, under any circumstances, be liable for an amount greater than the actual purchase price of the product nor for any special, incidental or consequential damages suffered or incurred in connection with the product and Bass Pro Shops® does not assume, and does not authorize any person to assume for it, any obligation or liability other than those expressly set out herein.

Garantie Limitée d'Une Année

Bass Pro Shops® réparera ou remplacera (à notre discrétion) n'importe quel moulinet à lance-appât à Johnny Morris qui s'avère être défectueux de fabrication ou de matériaux avant qu'une année passe après la date du premier achat. Il faut que vous gardiez votre reçu daté pour vérifier votre garantie. Cette garantie vous donne des droits légaux spéciaux, et vous pouvez avoir d'autres droits qui varient selon votre province.

Pour les moulinets achetés à nos catalogues ou à Bass Pro Shops® en ligne:

Pour le remplacement du moulinet seulement: Envoyez votre moulinet **avec le tarif payé d'avance et avec votre reçu daté** à l'adresse qui se trouve à votre reçu.

Pour la réparation du moulinet seulement: Envoyez votre moulinet **avec le tarif payé d'avance et avec votre reçu daté** comme justification d'achat et vérification de garantie à l'adresse de Outdoor World Rod & Reel Repair ci-dessus.

Pour les moulinets achetés à des détaillants de Bass Pro Shops®:

Pour le remplacement du moulinet seulement: Envoyez votre moulinet (**avec le tarif payé d'avance si vous l'envoyez par la poste**) au magasin où vous l'avez acheté avec votre reçu daté.

Pour la réparation du moulinet seulement: Envoyez votre moulinet **avec le tarif payé d'avance et avec votre reçu daté** comme justification d'achat et vérification de garantie à l'adresse de Outdoor World Rod & Reel Repair ci-dessus.


Cette garantie ne s'applique pas: aux pièces perdues, aux défaillances ou aux dégâts en raison de mauvais traitement, d'accident, ou d'usure normale, ou aux nettoyages et aux graissages qu'il faut à cause de l'incapacité du propriétaire de entretenir le moulinet raisonnablement.

Vous pouvez faire réparer un moulinet auquel la garantie ne s'applique pas à un prix raisonnable. Envoyez votre moulinet **avec le tarif payé d'avance** à Outdoor World Rod & Reel Repair.

Sauf dans la mesure interdite par la loi qui s'y applique, il n'y a pas de garanties ou conditions, expresses ou implicites, en plus de ceux expressément établies ici. Bass Pro Shops® ne sera pas, en aucun cas, responsable d'un prix en plus du prix de l'achat du produit, ni de n'importe quels dommages-intérêts, indirects ou directs, que l'on souffre ou encourt à propos du produit. Bass Pro Shops® ni assume, ni autorise personne à assumer au nom de Bass Pro Shops®, aucune obligation ou engagements en plus de ceux expressément établies ici.

Johnny Morris

JMX10HC / JMX10SC
JMX10SHA / JMX20HA

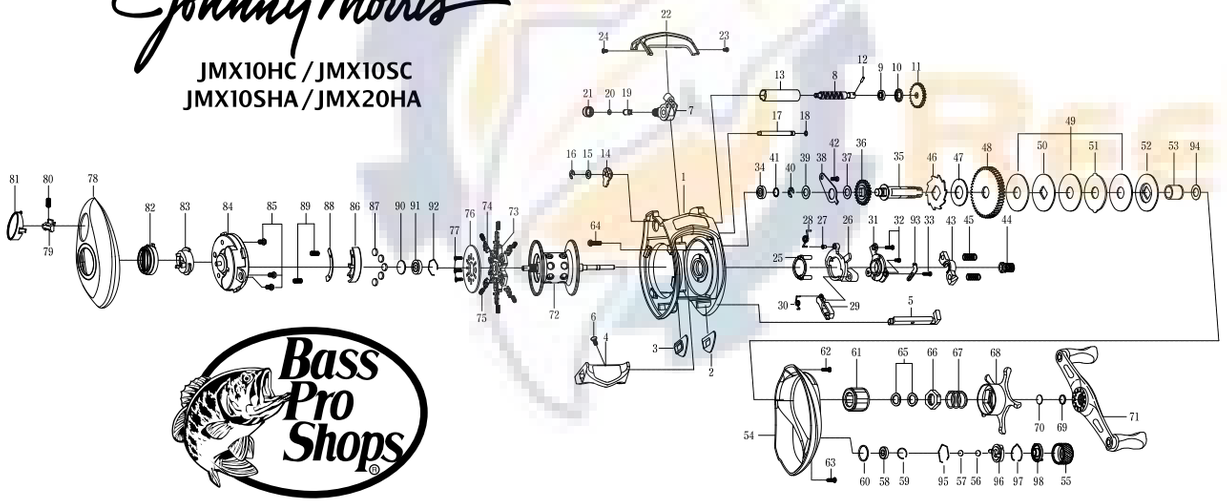


Bass Pro Shops®

basspro.com

Johnny Morris

JMX10HLC / JMX10SHLA

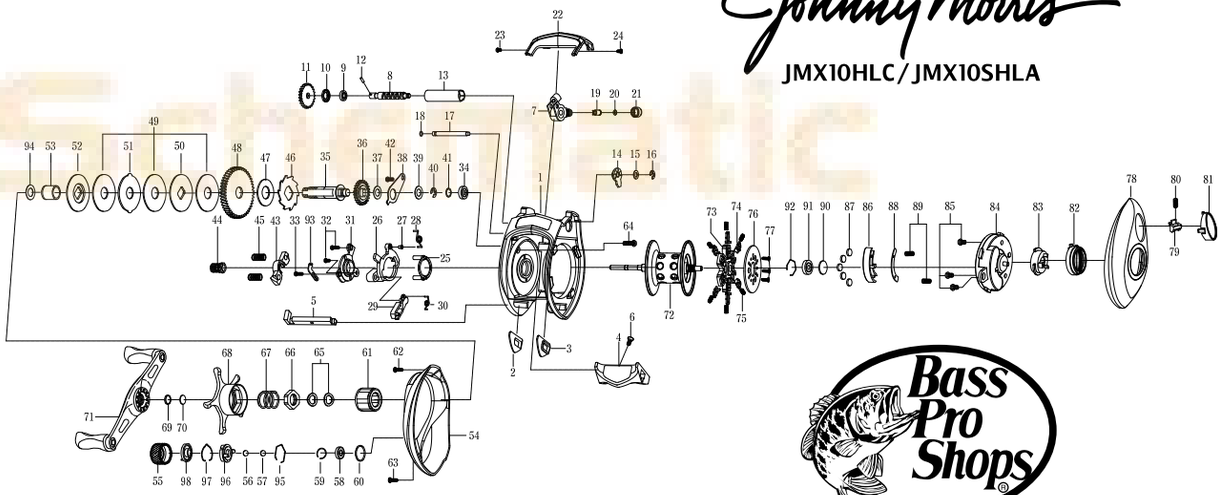

Bass Pro Shops®

basspro.com

NO	PART NAME	NO	PART NAME	NO	PART NAME	NO	PART NAME	NO	PART NAME	NO	PART NAME
1	FRAME ASSEMBLY	18	O-RING	35	CRANK SHAFT	52	DRAG WASHER (D2)	69	CUSHION WASHER	86	MAGNET HOLDER
2	CLUTCH BAR PLATE (A)	19	LINE GUIDE PAWL	36	IDLER(L)	53	SLEEVE	70	HANDLE SPACER	87	MAGNET(*5)
3	CLUTCH BAR PLATE (B)	20	SPACER(OPTIONAL)	37	IDLER(L) WASHER (A)	54	RIGHT SIDE COVER ASSEMBLY	71	HANDLE ASSEMBLY(INCL.4BB)	88	MAGNET HOLDER PLATE
4	CLUTCH BAR ASSEMBLY	21	PAWL CAP	38	BEARING PLATE	55	CAST CONTROL CAP	72	SPOOL ASSEMBLY(INCL.1BB)	89	MAGNET HOLDER SPRING(*2)
5	CLUTCH LINK	22	FRONT COVER	39	IDLER(L) WASHER (B)	56	TENSION WASHER	73	BRAKE SHOE HOLDER	90	SPOOL SPACER (A)
6	CLUTCH BAR SCREW	23	FRONT COVER SCREW (A)	40	E-RING	57	SPOOL SPACER (B)	74	BRAKE SHOE(WHITE)(*6)	91	BALL BEARING
7	LINE GUIDE ASSEMBLY	24	FRONT COVER SCREW (B)	41	CRANK SHAFT SPACER(OPTIONAL)	58	BALL BEARING	75	BRAKE SHOE SPRING(*6)	92	BEARING RETAINER
8	WORM SHAFT	25	YOKE HOLDER	42	BEARING PLATE SCREW	59	BEARING RETAINER	76	BRAKE HOLDER PLATE	93	CLUTCH SPRING HOLDER
9	BALL BEARING	26	CLUTCH CAM	43	PINION YOKE	60	O-RING	77	BRAKE HOLDER PLATE SCREW(*3)	94	SLEEVE WASHER(OPTIONAL)
10	WORM SHAFT BUSHING (A)	27	CLUTCH SPRING BUSHING	44	PINION GEAR	61	ONE WAY CLUTCH	78	LEFT SIDE COVER	95	RETAINER
11	IDLER(S)	28	CLUTCH SPRING	45	PINION YOKE SPRING(*2)	62	RIGHT SIDE COVER SCREW (A)	79	LOCKING PIN	96	CLICK SPRING HOLDER
12	WORM SHAFT PIN	29	RETURN PAWL	46	RATCHET	63	RIGHT SIDE COVER SCREW (B)	80	LOCKING PIN SPRING	97	CLICK SPRING
13	LINE GUIDE PIPE	30	RETURN PAWL SPRING	47	RATCHET WASHER	64	RIGHT SIDE COVER SCREW (C)	81	PUSH BUTTON ASSEMBLY	98	CLICKER
14	WORM SHAFT BUSHING (B)	31	CAM PLATE	48	DRIVE GEAR	65	DRAG SPRING WASHER(*2)	82	CONTROL DIAL ASSEMBLY		
15	WORM SHAFT WASHER	32	CAM PLATE SCREW (A)-(*2)	49	DRAG WASHER (L)	66	DRAG NUT	83	SLIDE CAM		
16	E-RING	33	CAM PLATE SCREW (B)	50	DRAG WASHER (D1)	67	STAR DRAG SPRING	84	SPOOL COVER ASSEMBLY		
17	PILLAR	34	BALL BEARING	51	DRAG WASHER (A)	68	STAR DRAG ASSEMBLY	85	SPOOL COVER SCREW(*3)		

NO	PART NAME	NO	PART NAME	NO	PART NAME	NO	PART NAME	NO	PART NAME	NO	PART NAME
1	FRAME ASSEMBLY	18	O-RING	35	CRANK SHAFT	52	DRAG WASHER (D2)	69	CUSHION WASHER	86	MAGNET HOLDER
2	CLUTCH BAR PLATE (A)	19	LINE GUIDE PAWL	36	IDLER(L)	53	SLEEVE	70	HANDLE SPACER	87	MAGNET(*5)
3	CLUTCH BAR PLATE (B)	20	SPACER(OPTIONAL)	37	IDLER(L) WASHER (A)	54	RIGHT SIDE COVER ASSEMBLY	71	HANDLE ASSEMBLY(INCL.4BB)	88	MAGNET HOLDER PLATE
4	CLUTCH BAR ASSEMBLY	21	PAWL CAP	38	BEARING PLATE	55	CAST CONTROL CAP	72	SPOOL ASSEMBLY(INCL.1BB)	89	MAGNET HOLDER SPRING(*2)
5	CLUTCH LINK	22	FRONT COVER	39	IDLER(L) WASHER (B)	56	TENSION WASHER	73	BRAKE SHOE HOLDER	90	SPOOL SPACER (A)
6	CLUTCH BAR SCREW	23	FRONT COVER SCREW (A)	40	E-RING	57	SPOOL SPACER (B)	74	BRAKE SHOE(WHITE)(*6)	91	BALL BEARING
7	LINE GUIDE ASSEMBLY	24	FRONT COVER SCREW (B)	41	CRANK SHAFT SPACER(OPTIONAL)	58	BALL BEARING	75	BRAKE SHOE SPRING(*6)	92	BEARING RETAINER
8	WORM SHAFT	25	YOKE HOLDER	42	BEARING PLATE SCREW	59	BEARING RETAINER	76	BRAKE HOLDER PLATE	93	CLUTCH SPRING HOLDER
9	BALL BEARING	26	CLUTCH CAM	43	PINION YOKE	60	O-RING	77	BRAKE HOLDER PLATE SCREW(*3)	94	SLEEVE WASHER(OPTIONAL)
10	WORM SHAFT BUSHING (A)	27	CLUTCH SPRING BUSHING	44	PINION GEAR	61	ONE WAY CLUTCH	78	LEFT SIDE COVER	95	RETAINER
11	IDLER(S)	28	CLUTCH SPRING	45	PINION YOKE SPRING(*2)	62	RIGHT SIDE COVER SCREW (A)	79	LOCKING PIN	96	CLICK SPRING HOLDER
12	WORM SHAFT PIN	29	RETURN PAWL	46	RATCHET	63	RIGHT SIDE COVER SCREW (B)	80	LOCKING PIN SPRING	97	CLICK SPRING
13	LINE GUIDE PIPE	30	RETURN PAWL SPRING	47	RATCHET WASHER	64	RIGHT SIDE COVER SCREW (C)	81	PUSH BUTTON ASSEMBLY	98	CLICKER
14	WORM SHAFT BUSHING (B)	31	CAM PLATE	48	DRIVE GEAR	65	DRAG SPRING WASHER(*2)	82	CONTROL DIAL ASSEMBLY		
15	WORM SHAFT WASHER	32	CAM PLATE SCREW (A)-(*2)	49	DRAG WASHER (L)	66	DRAG NUT	83	SLIDE CAM		
16	E-RING	33	CAM PLATE SCREW (B)	50	DRAG WASHER (D1)	67	STAR DRAG SPRING	84	SPOOL COVER ASSEMBLY		
17	PILLAR	34	BALL BEARING	51	DRAG WASHER (A)	68	STAR DRAG ASSEMBLY	85	SPOOL COVER SCREW(*3)		