
KASTKING®

BASSINATOR ELITE

Silver

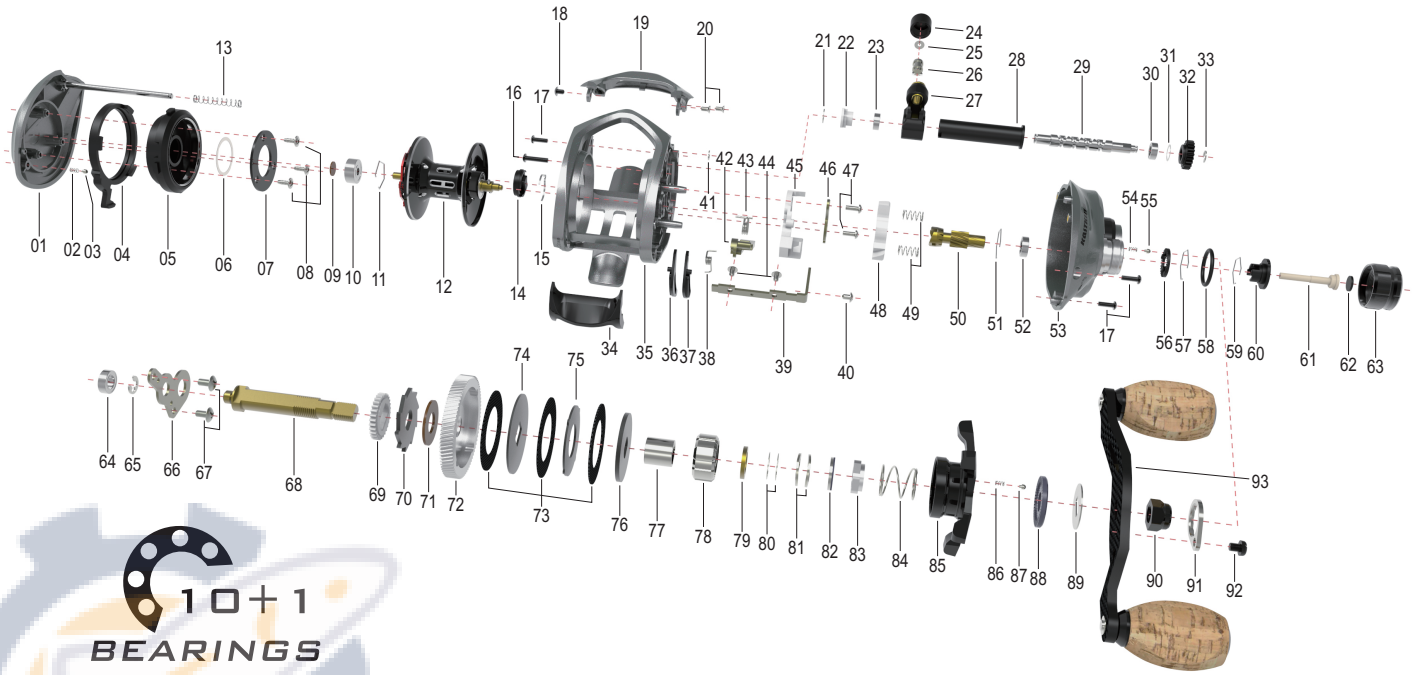

RealSchematic

KEY NO. PARTS NAME	KEY NO. PARTS NAME	KEY NO. PARTS NAME
01. PALM SIDE COVER	32. WORM PINION	63. TENSION KNOB
02. COIL SPRING	33. RETAINER	64. BALL BEARING
03. PIN	34. THUMB BAR	65. RETAINER
04. LOCK LEVER	35. FRAME	66. BEARING PLATE
05. SPOOL COVER ASS'Y	36. CLUTCH LEVER L-PLATE	67. SCREW
06. WASHER	37. CLUTCH LEVER R-PLATE	68. GEAR METAL
07. PLATE	38. SPRING	69. GEAR
08. TAP SCREW	39. CLUTCH LINK	70. RATCHET
09. WASHER	40. TAP SCREW	71. WASHER
10. BALL BEARING	41. RETAINER	72. DRIVE GEAR
11. RING	42. KICK LEVER	73. WASHER-L
12. SPOOL ASSEMBLY (1BALL BEARING)	43. SPRING	74. WASHER-D
13. COIL SPRING	44. TAP SCREW	75. WASHER-A
14. LINE MEMORY KNOB	45. CLUTCH CAM	76. WASHER-D
15. CLICK SPRING	46. CAM PLATE	77. SLEEVE
16. SCREW	47. SCREW	78. ONE WAY CLUTCH
17. SCREW	48. CLUTCH	79. COLLAR
18. SCREW	49. COIL SPRING	80. WASHER
19. FRONT SUPPORT	50. PINION	81. SPRING WASHER
20. SCREW	51. RING	82. DU WASHER
21. RETAINER	52. BALL BEARING	83. DRAG NUT
22. BUSH	53. GEAR SIDE COVER ASSEMBLY	84. COIL SPRING
23. BALL BEARING	54. COIL SPRING	85. STAR DRAG ASSEMBLY
24. NUT	55. CLICK PIN	86. COIL SPRING
25. WASHER	56. CLICK PLATE	87. CLICK PIN
26. LEVEL WIND PIN	57. RING	88. CLICK PLATE
27. LEVEL WIND ASSEMBLY	58. O-RING	89. WASHER
28. PIPE	59. RING	90. NUT
29. WORM SHAFT	60. CONTROL PLATE	91. RETAINER
30. BALL BEARING	61. TENSION SHAFT	92. SCREW
31. WASHER	62. WASHER	93. HANDLE ASSEMBLY