
OCEAN CITY "TOPSAIL" REELS NOS. 922 AND 923

(Model A)

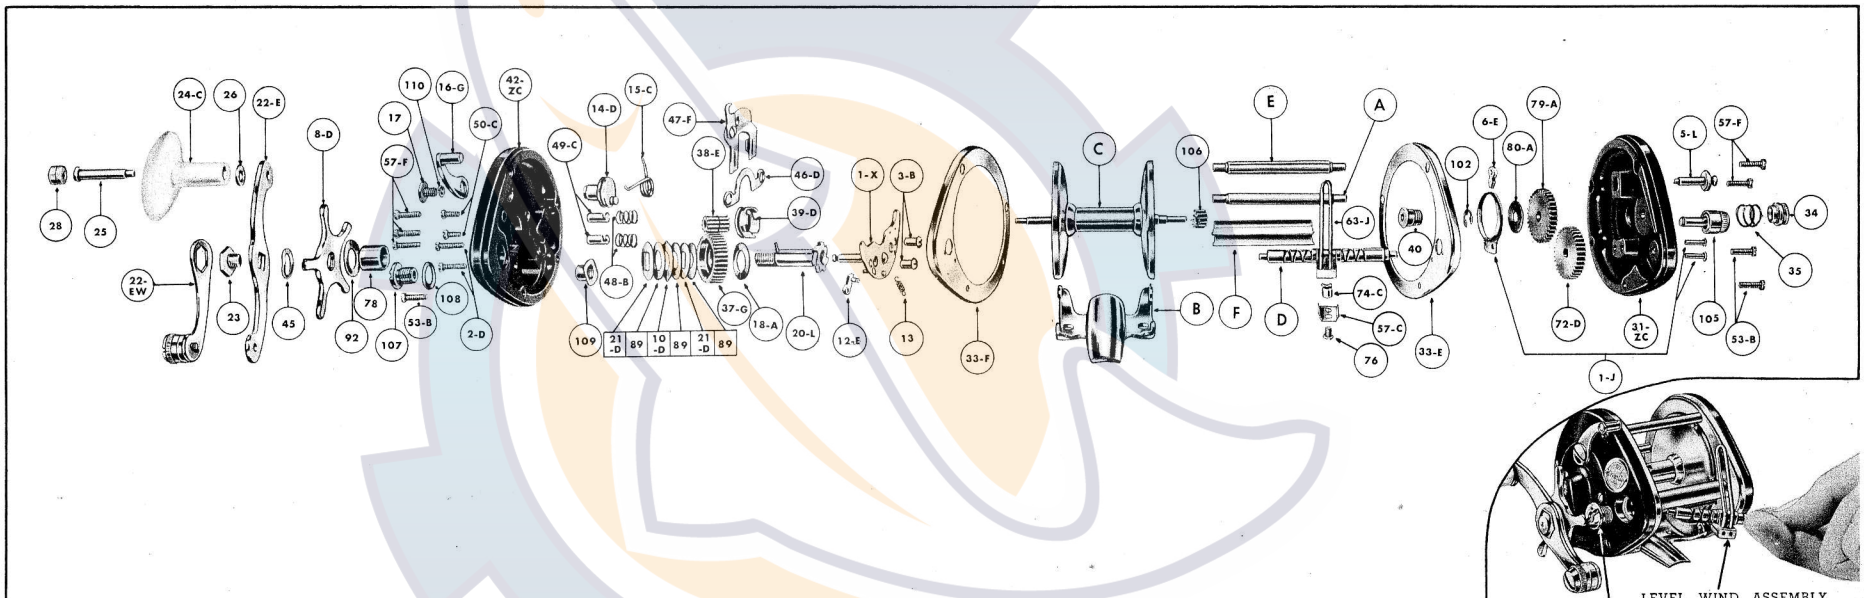

LEVEL WIND ASSEMBLY

WORM ADJUSTMENT BEARING

QUICK CHANGE LEVEL WIND FEATURE

It's easy to replace the level wind parts on your TOPSAIL reel, or remove the level wind feature if you wish to do so.

With a coin remove the WORM ADJUSTMENT BEARING "A." The LEVEL WIND ASSEMBLY consisting of the Worm, Guide, Pawl, Pawl Cover and Pawl Cover Screw can then be lifted out of position as shown.

When replacing, install LEVEL WIND ASSEMBLY first. Turn handle to make sure worm has engaged slots in gear in left plate. Install WORM ADJUSTMENT BEARING "A" and screw in with coin to remove end play in worm.

CAUTION: DO NOT SCREW IN WORM BEARING TOO TIGHTLY OR WORM WILL BIND AND INTERFERE WITH FREE OPERATION OF REEL. Always be sure to keep LEVEL WIND ASSEMBLY CLEAN AND WELL LUBRICATED WITH OIL. When parts show signs of wear replace with new parts.

HOW TO ORDER PARTS FOR YOUR REEL—Locate the part desired in the illustration above and note part number. **When ordering,** state quantity, part number, part name and model letter which you will find on underside of reel stand. Enclose money order, stamps or check. Our minimum charge for one order is $.25; please add $.15 on each order for return postage and insurance.

	PART No.	PART NAME	PRICE
	1-X	Bridge	.30
	2-D	Bridge Screw	.02
	3-B	Bridge Screw Nut	.04
	5-L	Click Button	.14
	6-E	Click Pawl	.08
	7-J	Click Spring and Rivets	.14
	8-D	Drag Star	.32
	10-D	Drag Eared Washer	.05
	12-E	Drag Dog	.10
	13	Drag Dog Spring	.03
	14-D	Eccentric	.50
	15-C	Eccentric Spring	.12
	16-G	Free Spool Lever	.24
	17	Free Spool Lever Screw	.05
	18-A	Drag Fiber Washer	.01
A	19-S	Frame Post For Model 922	.12
A	19-T	Frame Post For Model 923	.14
	20-L	Gear Sleeve and Lock Pin	.60
	21-D	Drag Lock Washer	.05

PART No.	PART NAME	PRICE
22-E	Handle Complete with Part Nos. 24-C, 25, 26, 28 and 22-EW	1.00
22-EW	Handle Wrench	.30
23	Handle Screw	.16
24-C	Handle Knob	.24
25	Handle Knob Rivet	.06
26	Handle Knob Felt Washer	.01
28	Handle Knob Oiler	.24
31-ZC	Left Side Plate Complete With Part Nos. 5-L, 6-E and 7-J	1.25
33-E	Left Side Plate Ring	.40
33-F	Right Side Plate Ring	.40
34	Left Side Oil Cap	.12
35	Left Side Oil Cap Spring	.04
37-G	Main Gear	.75
38-E	Pinion Gear	.30
39-D	Pinion Gear Clutch	.26
40	Left Side Bearing	.20
42-ZC	Right Side Plate	1.25

	PART No.	PART NAME	PRICE
	43-R	Stand, For Salt Water Rod Reel Seats, For No. 922	.60
B	43-Z	Stand, For Fresh Water Rod Reel Seats, For No. 922	.60
B	43-N	Stand, For No. 923	.80
C	44-ZW	Spool, For No. 922	1.00
C	44-ZX	Spool, For No. 923	1.20
	45	Star Top Washer	.04
	46-D	Yoke	.16
	47-F	Yoke Plate	.30
	48-B	Yoke Spring	.04
	49-C	Yoke Guide Stud	.06
	50-C	Yoke Guide Stud Screw	.02
	53-B	Right and Left Side Stand Screw	.02
	57-F	Right and Left Side Plate Screw	.02
	63-J	Line Guide	.40
D	71-H	Worm, For No. 922	.40
D	71-J	Worm, For No. 923	.50

	PART No.	PART NAME	PRICE
	72-D	Worm Gear	.24
	74-C	Worm Pawl	.10
	75-C	Worm Pawl Cover	.02
	76	Worm Pawl Cover Screw	.02
	78	Gear Sleeve Bushing	.08
	79-A	Intermediate Gear	.25
	80-A	Intermediate Gear Spacer Wsher	.02
	89	Friction Washer	.02
	92	Star Bottom Washer	.05
E	94-D	Slotted Frame Post For No. 922	.20
E	94-E	Slotted Frame Post For No. 923	.25
F	100-F	Worm Guard For No. 922	.20
F	100-G	Worm Guard For No. 923	.25
	102	Intermediate Gear Retaining Ring	.02
	105	Anti-Backlash Control Knob	.60
	106	Spool Pinion (Includes Lock Ring Not Shown)	.40
	107	Worm Adjusting Screw Bearing	.50

PART No.	PART NAME	PRICE
108	Worm Bearing Tension Washer	.03
109	Worm Bearing Insert	.25
110	Eccentric Screw Lock Washer	.02

FORM 162

www.reelschematic.com