# Adjusting the Drag Range on a Cimarron Reel


## DRAG RANGE ADJUSTMENT PROCEDURE

Although the factory drag range is appropriate for most fishing situations, it may occasionally be necessary to adjust the drag range. A #1 Phillips screwdriver is needed to accomplish this adjustment.

1. Remove the two Drag Knob Cap Screws (1) securing the “RR” Drag Knob Cap (2) to the Drag Knob (7).

2. To raise the range, remove the Detent Plunger Assembly (5) and turn the Drag Knob (7) counterclockwise until the Drag Nut (3) is free. Lift the Drag Nut (3) out of the Drag Knob (7) and rotate it one flat (one side of the Drag Nut (3)) clockwise. Place the Drag Nut (3) into the Drag Knob (7) and rotate the Drag Knob (7) clockwise until the drag first engages. If with the tighter setting, the Detent Plunger Assembly (5) hole does not reach the 5-6 o'clock position, you must continue to rotate the Drag Knob (7) past the point of the drag's first engagement until the Detent Plunger Assembly (5) hole is at the 5-6 o'clock position before you reinsert the Detent Plunger Assembly (5).

3. To loosen the range, follow the same procedure, but instead of rotating the Drag Nut (3) clockwise after you have removed it from the Drag Knob (7), rotate it counter clockwise to achieve a lighter drag setting.

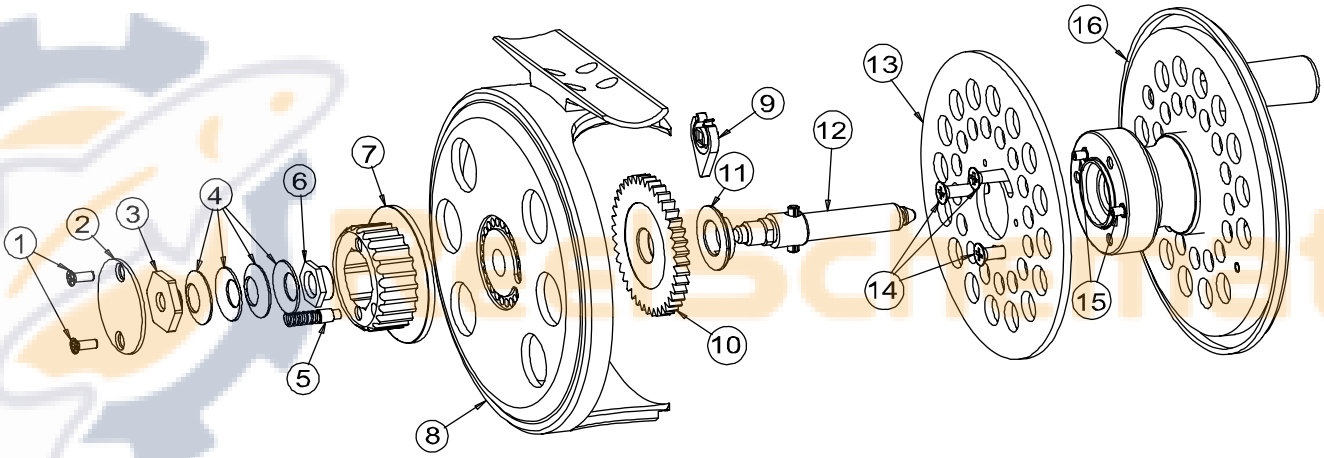


| | | | |
|---|---|---|---|
| 1 | DRAG KNOB CAP SCREWS (2) | 9 | CLICKER (2 PIECE) |
| 2 | DRAG KNOB CAP | 10 | DRAG DISK |
| 3 | DRAG NUT | 11 | THRUST WASHER |
| 4 | BELLEVILLE SPRING WASHERS | 12 | SPINDLE ASSEMBLY |
| 5 | DETENT PLUNGER ASSEMBLY | 13 | SPOOL FLANGE |
| 6 | SPINDLE NUT | 14 | SPOOL FLANGE SCREWS |
| 7 | DRAG KNOB | 15 | ONE-WAY PLUNGERS (2) |
| 8 | FRAME | 16 | SPOOL FACE ASSEMBLY |

ALL PRODUCTS AND CONTENT ©2005-2006 ROSS REELS USA. ALL RIGHTS RESERVED.