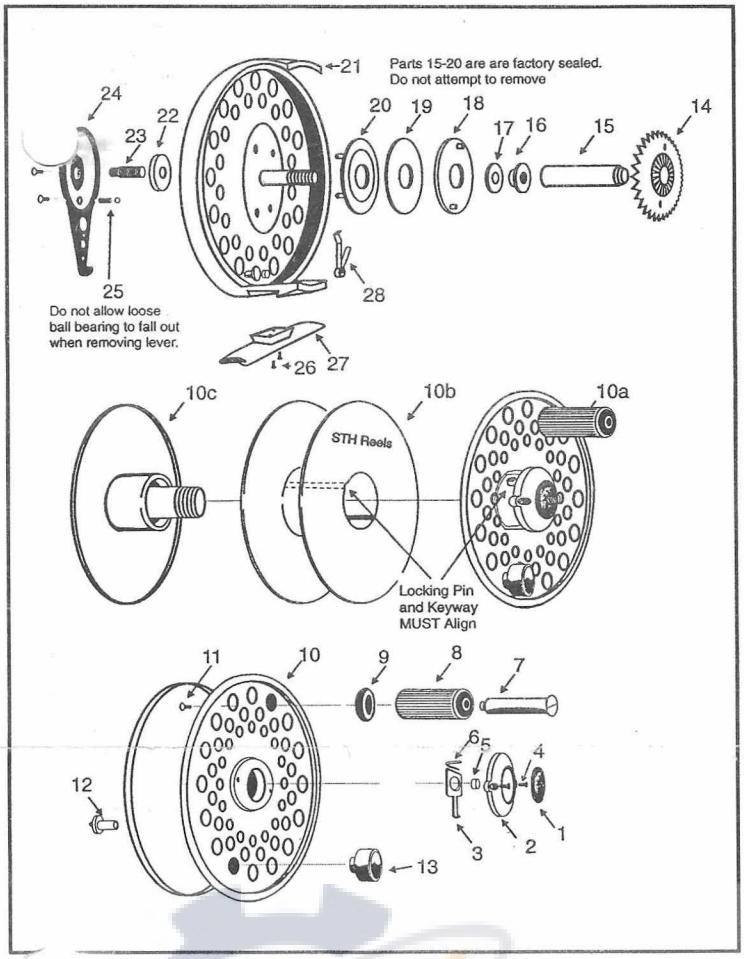


OWNER'S MANUAL
LEVER DRAG CASSETTE REELS

Please take a few minutes to read through this Owner's Manual.

DRAG ADJUSTMENT

The Drag on the Lever Drag Reel features our new advanced Teflon cork disk system. To adjust drag, simply move lever for drag.

TO REMOVE SPOOL

Just push release lever toward handle. (Release lever is located near center of reel next to counterweight. See picture below.) Then pull spool from reel.

RIGHT OR LEFT HAND CONVERSION

To change to right or left hand use, just follow these steps:

1) Move drag to lowest position.
2) Lift off center gear piece on center shaft. See Figure B below.
3) Flip center gear piece **#1 over** and replace.
4) Replace spool.

TO CHANGE CASSETTE

1) Remove spool from reel.
2) Grasp front flange with left hand and UNSCREW rear flange counter-clockwise.
3) Remove cassette from spool.
4) Replace cassette (RH facing out for right-hand wind – LH facing out for left-hand wind).
5) Screw rear flange onto spool. Tighten firmly.
6) Replace spool on reel.

Figure A


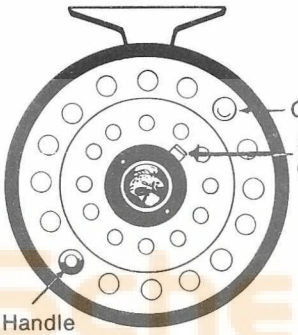


Figure B

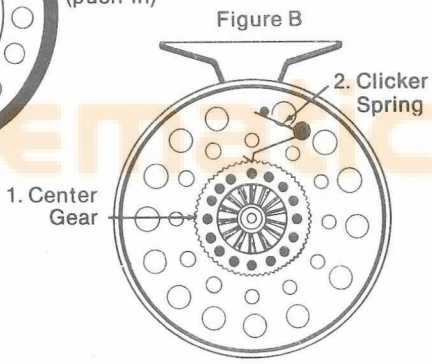

LEVER DRAG REELS PARTS LIST

1. STH Medallion
2. Retainer
3. Retainer Clip
4. Stainless Steel Screws (2)
5. Spacer
6. Retainer Spring
7. Handle Fastener
8. Handle
9. Spacer
10. Spool Housing
10a. Front Flange of Spool
10b. Cassette
10c. Rear Flange of Spool
11. Handle Fastener Screw
12. Stop Pin Assy.
13. Counter Weight
14. Reversible Gear
15. Stainless Steel Shaft
16. Stainless Breaking Washer
17. Teflon Washer
18. Front Disk with Cork Pad
19. Teflon Drag Disk
20. Rear Disk with Cork Pad
21. Reel Frame
22. Teflon Washer
23. Splined Shaft
24. Drag Lever
25. Drag Adjustment Bearing & Spring
26. Foot Fasteners
27. Reel Foot
28. Clicker Spring

STH REELS (USA) INC.
P.O. Box 500816
Marathon, Florida 33050-0816
Phone (305) 743-5971
Fax (305) 743-3519

Steelhead Argentina S. R. L.
STH REELS
Peru 447
(1067) Buenos Aires
Republica Argentina