
# NO. 3 & 4 VISSER SPINNING REEL
# EXPLODED VIEW ROTOR (2)

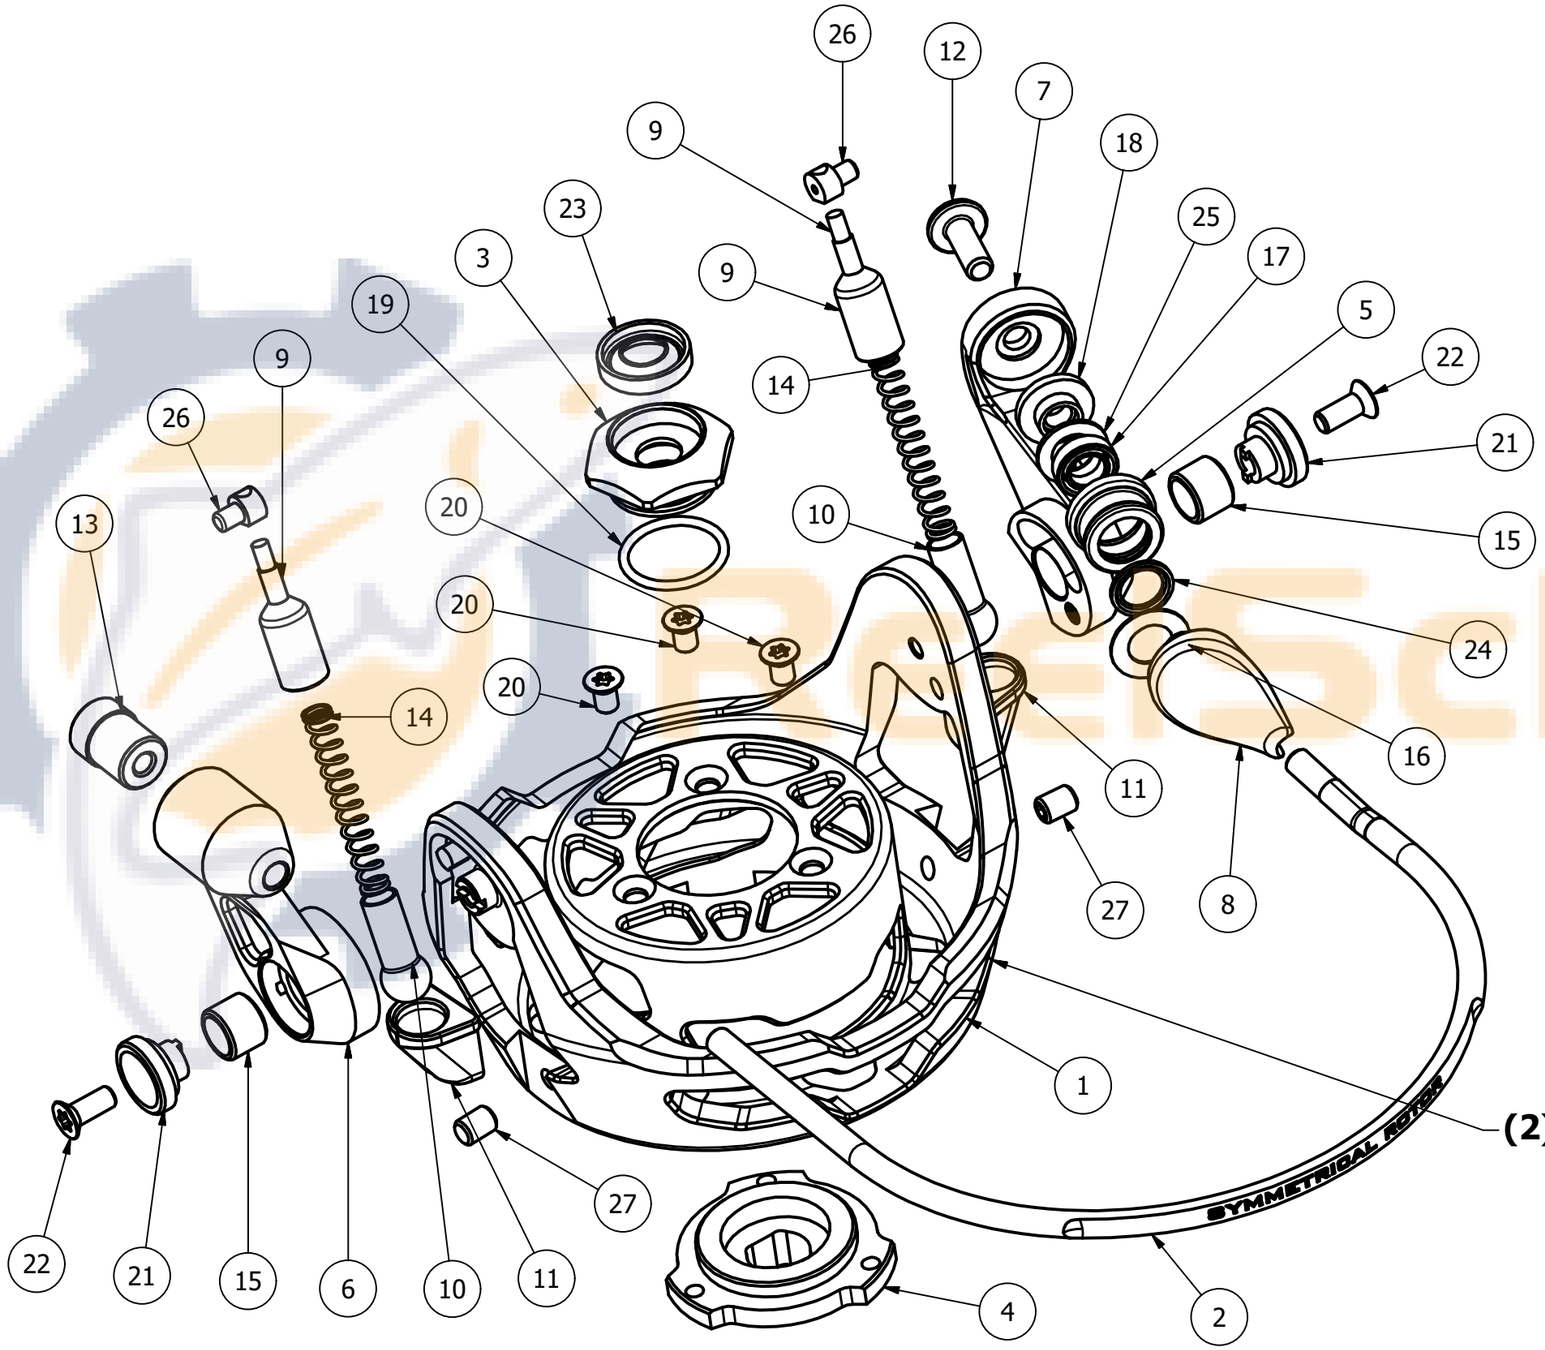


(2) Rotor Assembly

| ITEM | QTY | PART NUMBER | DESCRIPTION |
|---|---|---|---|
| 1 | 1 | UB1028-01 | Rotor |
| 2 | 1 | UB1029 | Bail |
| 3 | 1 | UB1036 | Rotor Nut |
| 4 | 1 | UB1035 | Rotor Base |
| 5 | 1 | UB1034 | Line Roller |
| 6 | 1 | UB1033 | Bail Arm |
| 7 | 1 | UB1032 | Lever Arm |
| 8 | 1 | UB1031 | Bail Cone |
| 9 | 2 | UB1038 | Upper Joint |
| 10 | 2 | UB1039 | Lower Ball Joint |
| 11 | 2 | UB1040 | Ball Socket Insert |
| 12 | 1 | UB1044 | Lever Arm Screw |
| 13 | 1 | UB1043 | Counterweight |
| 14 | 2 | UB1041 | Bail Spring |
| 15 | 2 | UB1042 | Bushing |
| 16 | 1 | UB1045 | Trust Washer |
| 17 | 1 | UB1046 | Line Roller Bearing |
| 18 | 1 | UB1048 | Line Roller Spacer |
| 19 | 1 | UB1050 | Seal Cap O-ring |
| 20 | 3 | UB1071 | Rotor Hub Screw |
| 21 | 2 | UB1037 | Lever Arm Hinge Post |
| 22 | 2 | UB1096 | Lever Arm Hinge Screw |
| 23 | 1 | UB1049-1 | Seal |
| 24 | 1 | UB1034-1 | Line Roller Seal SM |
| 25 | 1 | UB1034-2 | Line Roller Seal |
| 26 | 2 | UB1102 | Pivot |
| 27 | 2 | UB6105 | Stop Screw |