
13 BLACKBETTY FREEFall CARBON

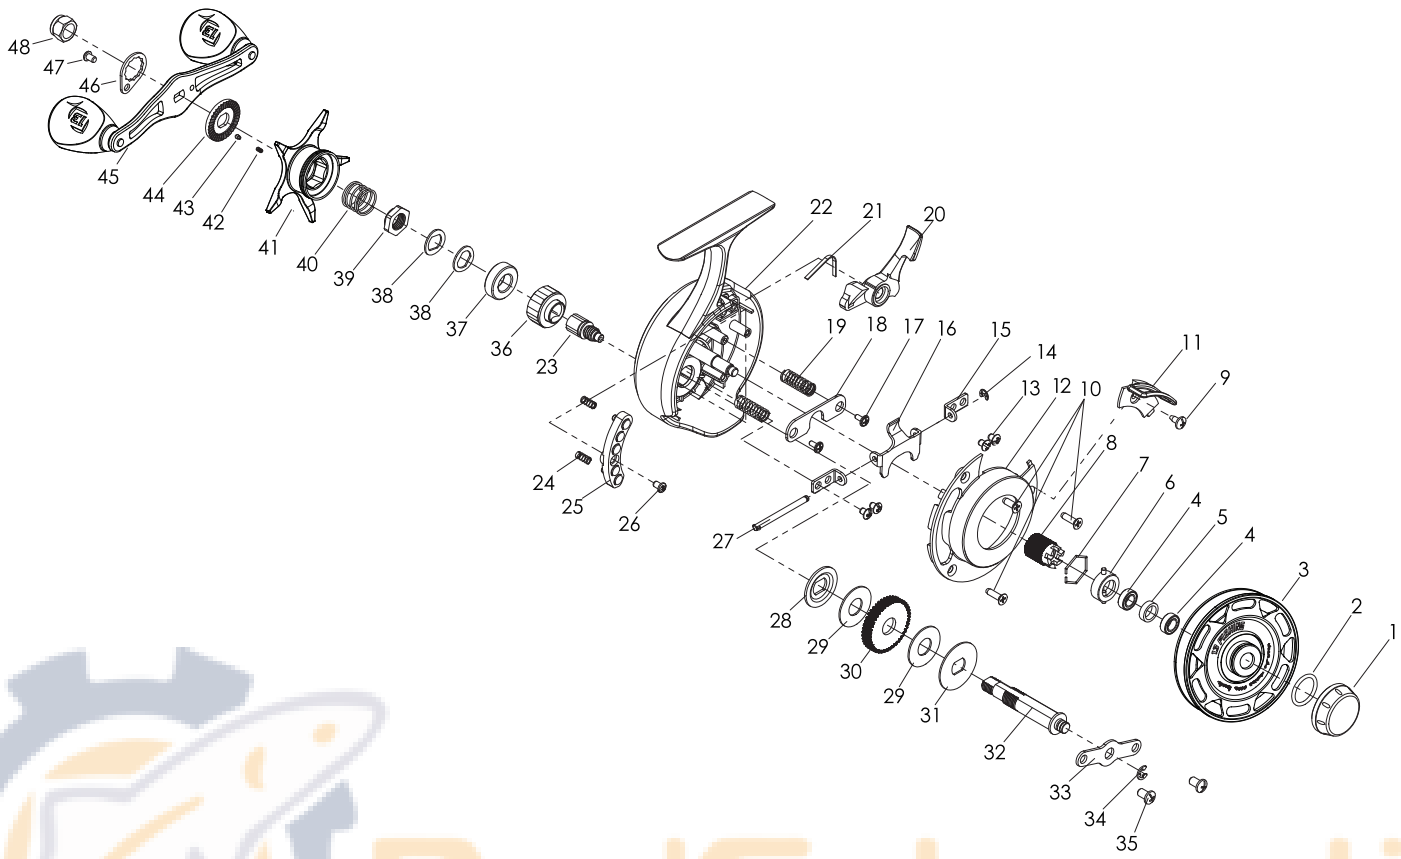

ReelSchematic

BLACKBETTY FREEFall LH CARBON

Key#	Parts Name	Parts #
1	Spool Cap	IR0001
2	O-Ring	IR0009
3	Spool	IR0132
4	Ball Bearing	IR0018
5	Bushing	IR0019
6	Carriage	IR0020
7	C Clip	IR0021
8	Pinion Gear (LH)	IR0022
9	Trigger Screw	IR0026
10	Cover Screw	IR0027
11	Window (LH)	IR0028
12	Cover (LH)	IR0032
13	Screw	IR0038
14	E Clip	IR0039
15	Clutch Support Plate	IR0040
16	Clutch Plate	IR0041
17	Screw	IR0042
18	Yoke	IR0043
19	Yoke Spring	IR0044
20	Trigger (LH)	IR0045
21	Spring Plate	IR0055
22	Body (LH)	IR0133
23	Magnetic Brake knob	IR0072
24	Spring	IR0075
25	Magnet Base (LH)	IR0077
26	Magnet Base Screw	IR0079
27	Clutch Pin	IR0080
28	Tube Washer	IR0081
29	Drag Washer	IR0082
30	Drive Gear(LH)	IR0084
31	Key Washer	IR0088
32	Shaft (LH)	IR0090
33	Shaft Plate	IR0094
34	E Clip	IR0095
35	Shfat Screw	IR0096
36	One Way Roller Ball Bearing	IR0097
37	Ball Bearing	IR0098
38	Spring Washer	IR0099
39	Nut (LH)	IR0100
40	Star Wheel Spring	IR0102
41	Star Drag	IR0135
42	Clicker Spring	IR0109
43	Clicker	IR0110
44	Clicker Plate	IR0111
45	Handle Assembly	IR0136
46	Nut Lock	TS7-2-X
47	Screw	IR0138
48	Handle Nut	TS6-2

BLACKBETTY FREEFall RH CARBON

8	Pinion Gear (RH)	IR0023
11	Window (RH)	IR0029
12	Cover (RH)	IR0033
20	Trigger (RH)	IR0046
22	Body (RH)	IR0134
25	Magnet Base (RH)	IR0078
30	Drive Gear (RH)	IR0085
32	Shaft (RH)	IR0091
39	Nut (RH)	IR0101