NANOOK XL

MODEL 14270

SPECIFICATIONS

- **Part Number: 114270**
- **Set Up Size: 92”L x 61”W x 69”H**
- **Packed Size: 61”L x 35”W x 22”H**
- **Weight: 72 lbs.**
- **Instructions: 106759**
- **Fishable Area: 23sq.ft.**

WARRANTY INFORMATION

Please contact customer service directly at the E-mail or phone number listed below for any quality issues. ***ONCE USED THIS PRODUCT CANNOT BE RETURNED TO STORE.***

Warranty cannot be honored without an original, dated receipt *

***** REGISTER YOUR PURCHASE ONLINE AT CLAMOUTDOORS.COM *****

IMPORTANT-PLEASE READ:

This product is warranted to the original retail purchaser (from an authorized dealer) and is non-transferable. Clam Outdoors has a one-year ***manufacturer’s defect warranty*** from the date of original purchase. Warranty does not cover cracked or worn bases ***(if runner kits have not been installed as recommended)***, cracked windows, tent tears or cuts, or broken or bent hoops due to high wind weather conditions or unattended use. Defective parts will be replaced or repaired (at the manufacturer’s option) if found to be defective within one year from date of original purchase. Warranty will be void if product has been subject to neglect, misuse, improper installation, misapplication, alteration, accident including but not limited to improper maintenance, or use of unauthorized parts or attachments. Please read the entire owner’s manual to ensure proper installation, use, storage and care of your Clam Shelter.

To submit a warranty claim request, please use one of the following methods:

- https://clamoutdoors.com/pages/warranty-form
- Email: customerservice@clamcorp.com

In your request, please include your full name, address, phone number, a copy of your receipt, a brief description of the problem, and pictures to clearly show the area(s) of concern. Our Warranty Department will review your request, and a Clam representative will contact you regarding your claim status. All returns must be shipped to us postage pre-prepaid.

LIMITATION OF LIABILITY

It is expressly understood that Clam Outdoors Inc., liability for its products, whether due to breach of warranty, negligence, strict liability, or otherwise, is limited to the repair of the product as stated above. Clam is not liable for any injury, loss, damage, or expense, whether direct or consequential, including but not limited to loss of use, income, profit, or damage to material arising in connection with the sale, installation, use of, inability to use, or the repair or replacement of Clam products. Clam reserves the right to make alterations or modifications in its products at any time, which in its opinion, may improve the performance and efficiency of the product. Clam shall not be obligated to make such alterations or modifications to products already in service

Clam contact information

Customer Service Hrs: 9am to 4pm, Monday – Friday Central Standard Time

Clam Outdoors

Attn: Customer Service

12135 Brockton Lane

Rogers, MN 55369

Phone: 763-231-4120

PARTS LIST

QTY.	PART NO.	DESCRIPTION
1	106149	BASE, NANOOK, XL
4	105861	HOOP POLE, NANOOK XL
1	106115	TENT, NANOOK NON-THERMAL, XL
2	102759	DELUXE SEAT
1	101074	REAR ADJUSTABLE SPREADER POLE
1	102814	U-CHANNEL
1	101095	TOW ROPE, 9FT
1	106759	INSTRUCTION, NANOOK, NON-THERMAL, XL
1	106757	INNERPACK, NANOOK, XL 1 of 2 (INCLUDES THE FOLLOWING)
2	103834	CANOPY POLE BRACKET
2	103833	MOUNTING BRACKET
8	103770	SMALL RPSX COLLAR, 7/8" POLE
8	101083	CAP TUBE SPACER
2	103835	LARGE PLASTIC WASHER
4	106004	CHAIR LEG
4	106003	CHAIR LEG BASE
2	105478	SEAT SWIVEL
2	106007	SEAT BRACKET
1	105862	KIT, HRDWR, NANOOK XL (INCLUDES THE FOLLOWING)
56	101081	WASHER, 1/4 FLAT REG YZ
27	101486	SCREW, 1/4-20 X 1.75 PTH GR5 YZ
24	101163	NUT, 1/4-20 NYLOCK
9	101470	SCREW, 1/4-20 X 0.50 SER HXFLGHD GR5 YZ
9	101080	SCREW, 1/4-20 X 1.25 PTH GR5 YZ
18	101082	NUT, 1/4-20 THIN NYLOCK YZ
6	101088	SCREW, 1/4-20 X 0.75 PTH GR5 YZ
18	101148	SCREW, #6 X 0.38 PPH BZ
4	103839	WASHER, PLASTIC SMALL
5	105794	BOLT, 1/4-20 X .75, HEX HEAD
1	106752	INNERPACK, NANOOK, XL 2 of 2 (INCLUDES THE FOLLOWING)
8	103836	STRAIGHT CANOPY SUPPORT POLE



- **EXTRA FASTENERS INCLUDED WITH THE HARDWARE KIT #105862**
- **INSTALL ANY RUNNER KIT OPTIONS BEFORE ASSEMBLING SHELTER. REFER TO RUNNER KIT INSTRUCTIONS**
- **USING A DROP OF OIL ON ALL NUTS WILL EASE THE ASSEMBLY**


HARDWARE FASTENERS REFERENCE



18X 101148



18X 101082

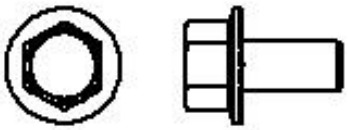

9X 101470



24X 101163



5X 105794




56X 101081




6X 101088




4X 103839

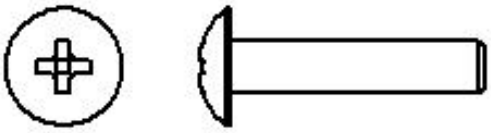

9X 101080

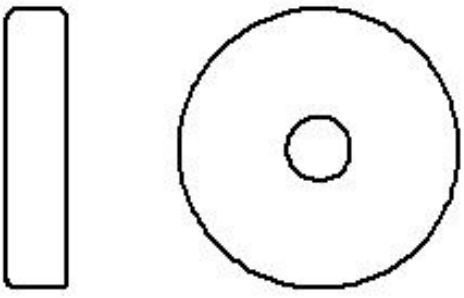

2X 103835

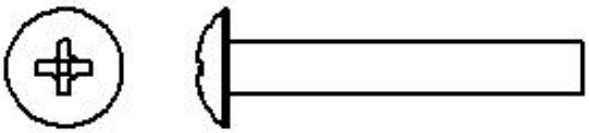

27X 101486

ReelSchematic


STEP 1 – SEAT ASSEMBLY

Parts Needed for Step 1

Part Number	Description	Quantity
106003	CHAIR LEG BASE	4
106004	CHAIR LEG	4
102759	DELUXE SEAT	2
105478	SEAT SWIVEL	2
101470	SCREW, 1/4-20 X 0.50	8
101486	SCREW, 1/4-20 X 1.75	24
101081	WASHER, 1/4 FLAT	24
101163	NUT, 1/4-20, NYLOCK	24


A. Connect the Chair Leg Base #106003 to the Chair Legs #106004, with the base bracket on the INSIDE of the legs (see photo), using #101486 bolts, #101081 washers and #101163 nuts. ***NOTE: HEAD OF BOLTS FACING OUTWARD.***

B. Tighten hardware using a 7/16” wrench or socket.

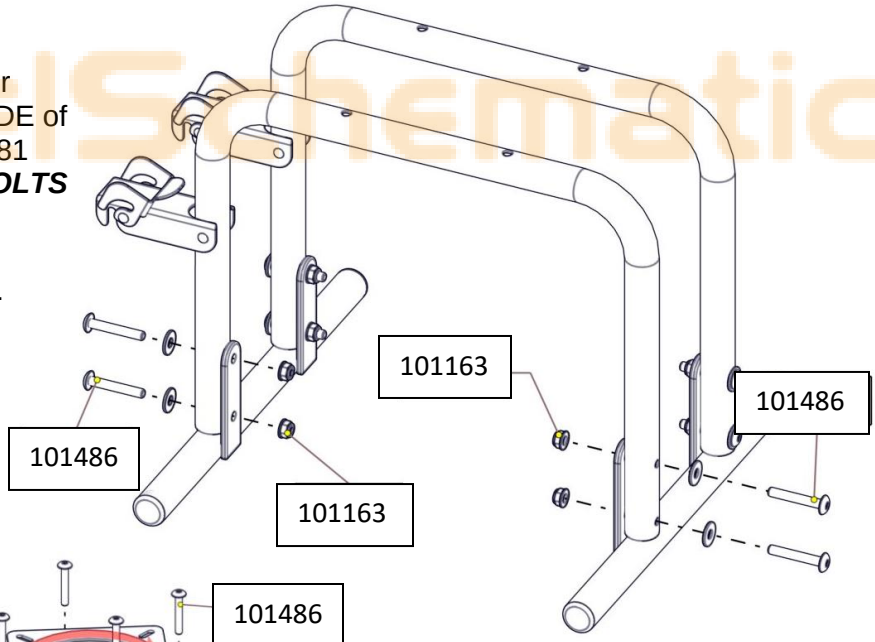


C. Rotate Seat Swivel #105478 45 degrees so its star shaped and all slotted holes are accessible.

D. Secure the Seat Swivel to the Chair Legs using #101486 bolts, #101081 washers and #101163 nuts and tighten.

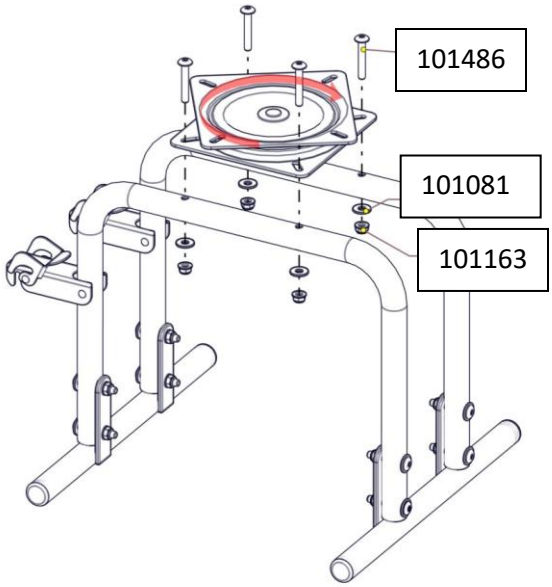

E. Flip the Deluxe Seat #102759 upside down and attach the swivel assembly to the bottom of the seat using #101470 bolts and tighten with a 3/8” wrench or socket.

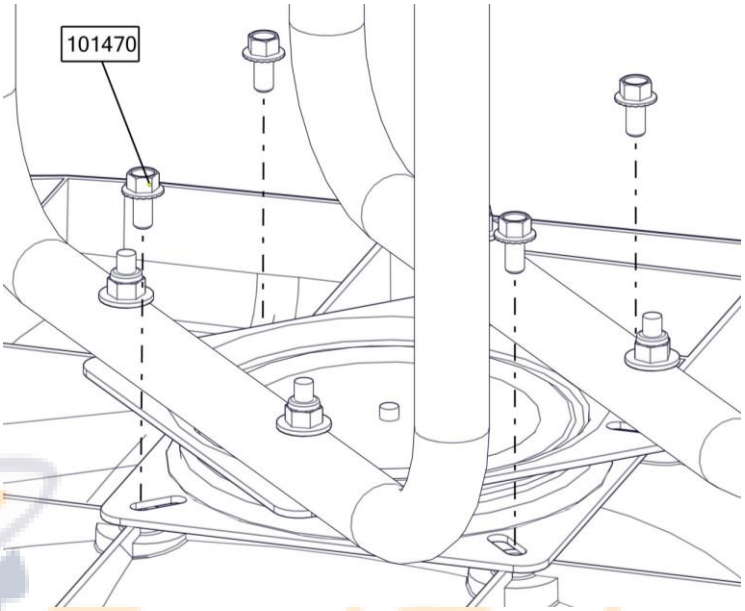


ReelSchematic

F. Repeat Step 1 to complete second seat assembly.

***NOTE:* Seat covers are NOT included with the Nanook XT-model shelters, but can be purchased separately.**

Completed Seat Assembly

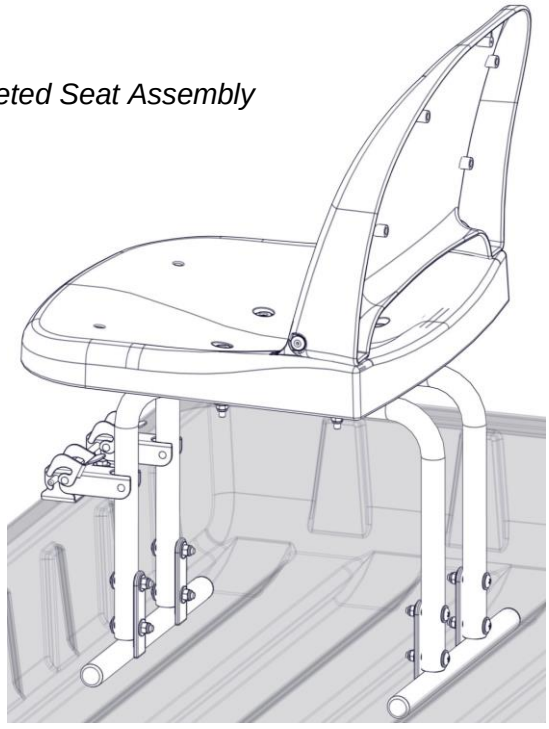

STEP 2 – SEAT BRACKETS


Parts Needed for Step 2

Part Number	Description	Quantity
106007	SEAT BRACKET	2
105794	BOLT, 1/4-20 X .75	4
101081	WASHER, 1/4 FLAT	4
101082	NUT, 1/4-20, THIN NYLOCK	4

A. Line up Seat Bracket #106007 with predrilled holes on front lip of sled.

B. Secure bracket using #105794 bolts, #101081 washers and #101082 nuts.

C. Repeat for second Seat Bracket.

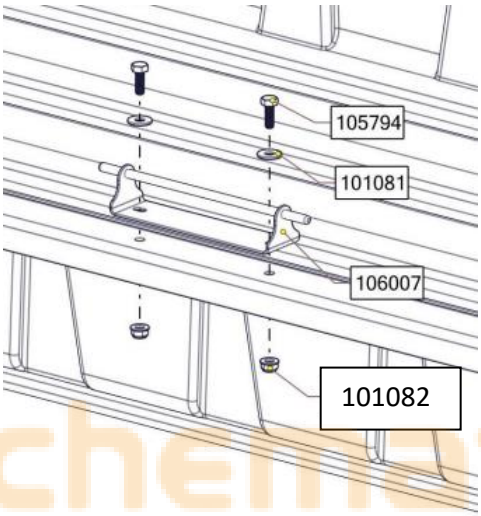

ReelSchematic

STEP 3 – MOUNTING BRACKETS


Parts Needed for Step 3


Part Number	Description	Quantity
103833	MOUNTING BRACKET	2
101088	SCREW, 1/4-20 X 0.75	4
101082	NUT, 1/4-20, THIN NYLOCK	4

A. Line up Mounting Bracket #103833 with predrilled holes on end of sled.

B. Secure bracket using #101088 bolts and #101082 nuts.

C. Repeat for second Mounting Bracket on opposite end of sled.

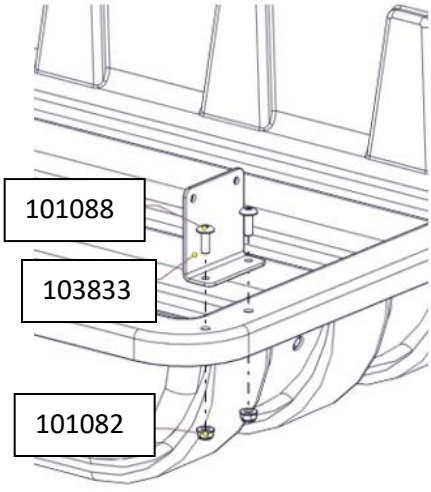

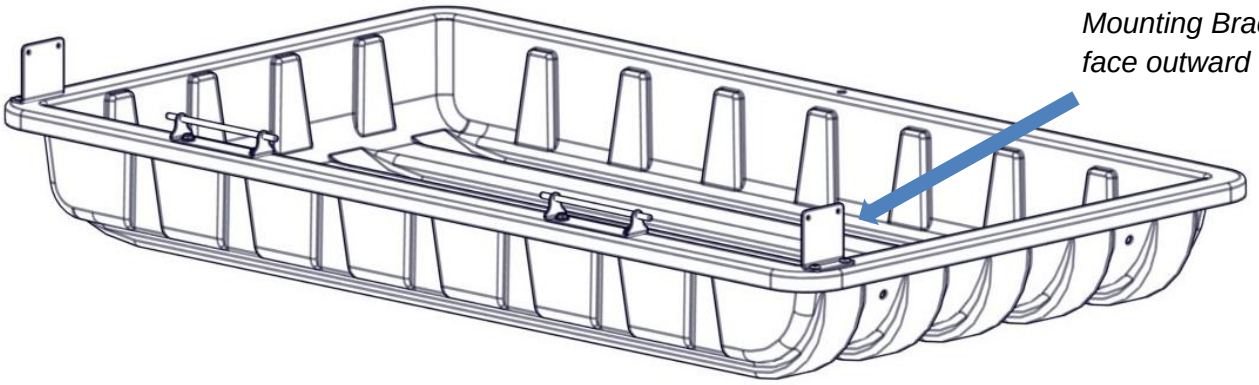

Ensure the "L" of the Mounting Brackets face outward


STEP 4 – CANOPY POLES

Parts Needed for Step 4


Part Number	Description	Quantity
103836	STRAIGHT CANOPY SUPPORT POLE	8
101083	CAP TUBE SPACER	8
103834	CANOPY POLE PLATE	2
101080	SCREW, 1/4-20 X 1.25	8
103839	SMALL PLASTIC WASHER	4
103835	LARGE PLASTIC WASHER	2
101486	SCREW, 1/4-20 x 1.75	2
101081	WASHER, 1/4 FLAT	2
101082	NUT, 1/4-20 THIN NYLOCK	10

A. Insert Cap Tube Spacers #101083 into the ends of the Straight Canopy Support Poles #103836.

Install caps into tube as shown

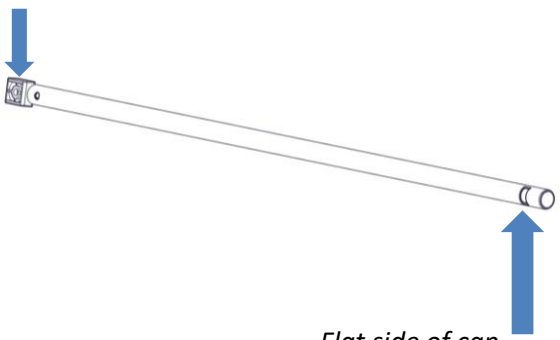


Flat side of cap must align with slot in tube

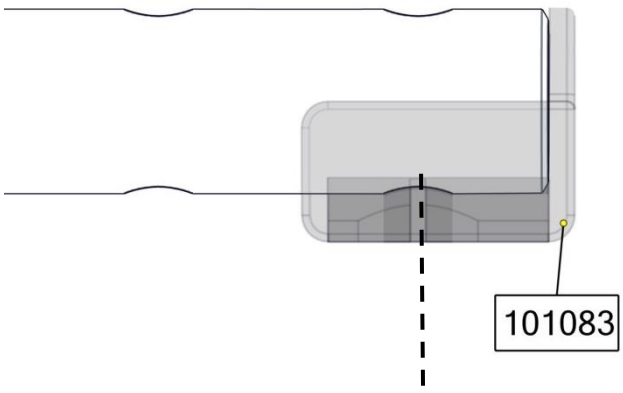


Align cap and pole holes

B. Install the Straight Canopy Support Poles onto the Canopy Pole Plate #103834 with the hardware shown below.

C. Repeat process for the other Canopy Pole Plate.

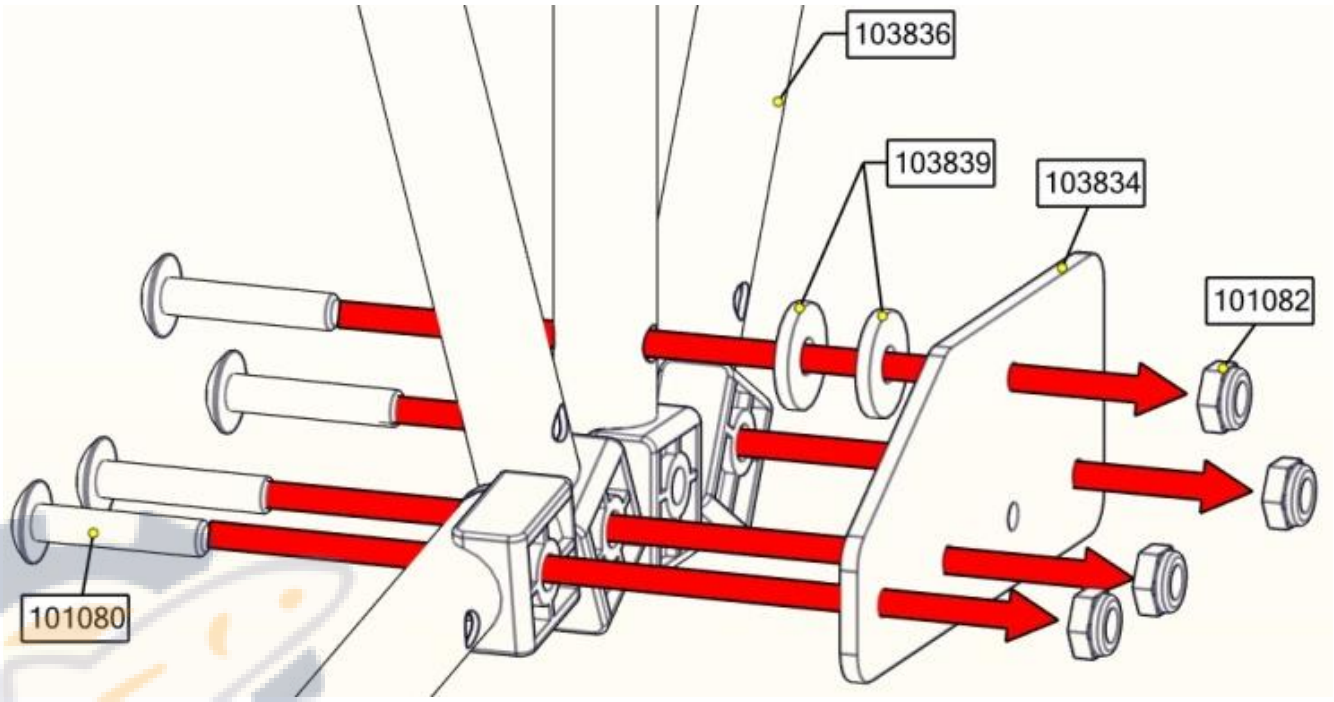


ReelSchematic

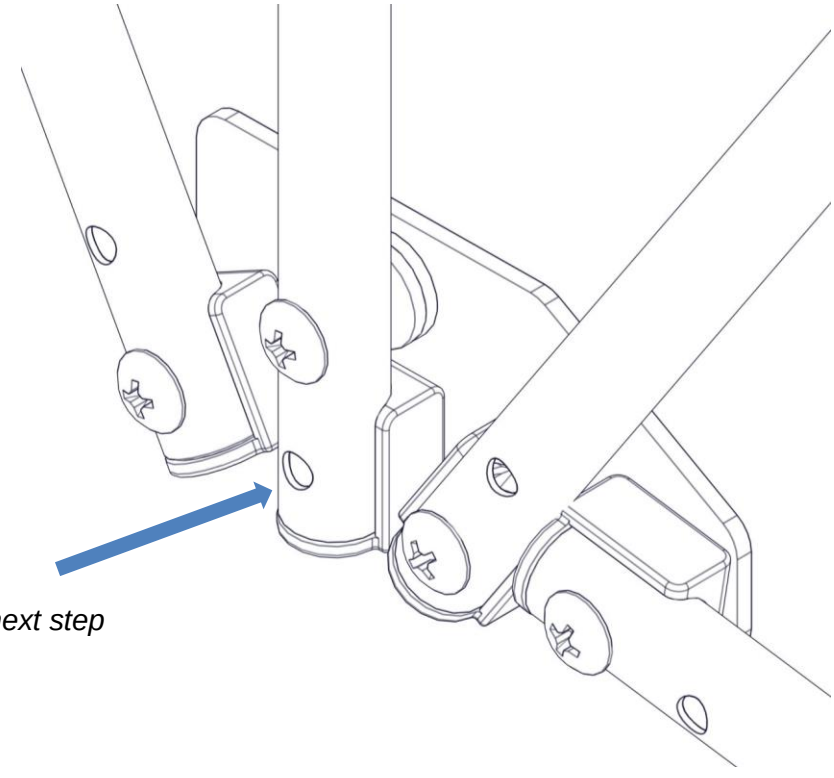


Leave open for next step

D. Install assembly onto the **FRONT** hole of the Mounting Bracket using the #101486 bolt, #103835 large plastic washer, #101010 washer and #101082 nut.


E. Repeat process on the other end of the sled.

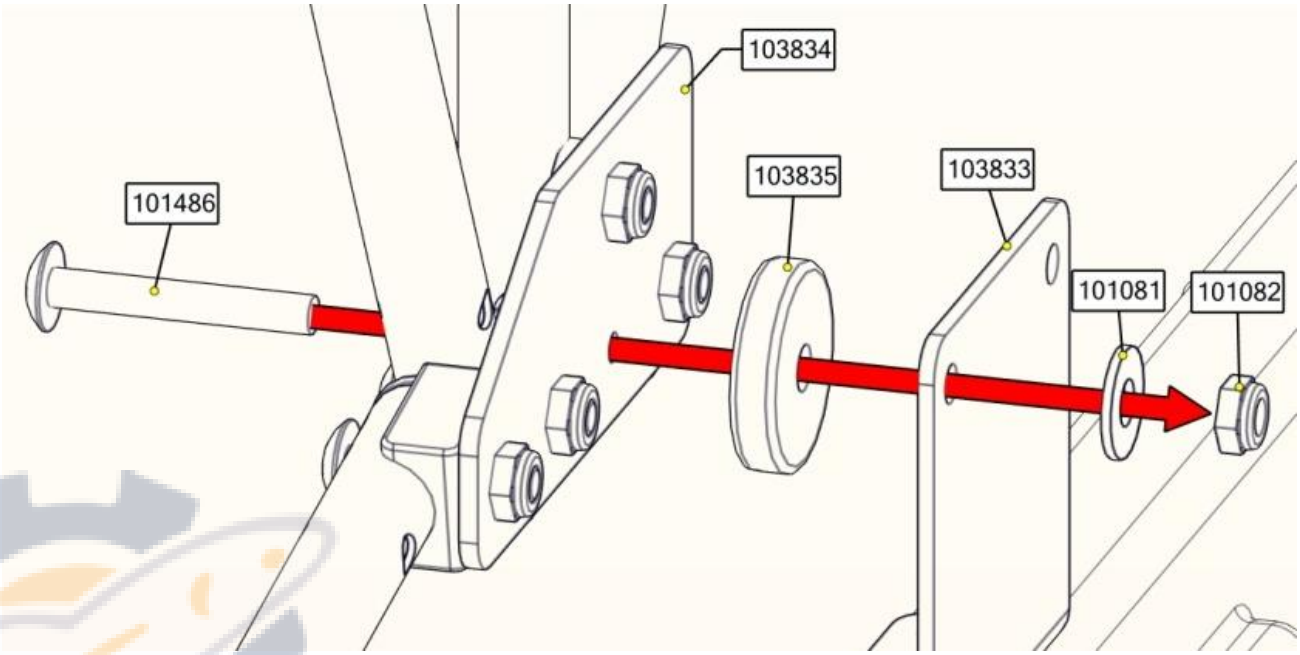

ReelSchematic

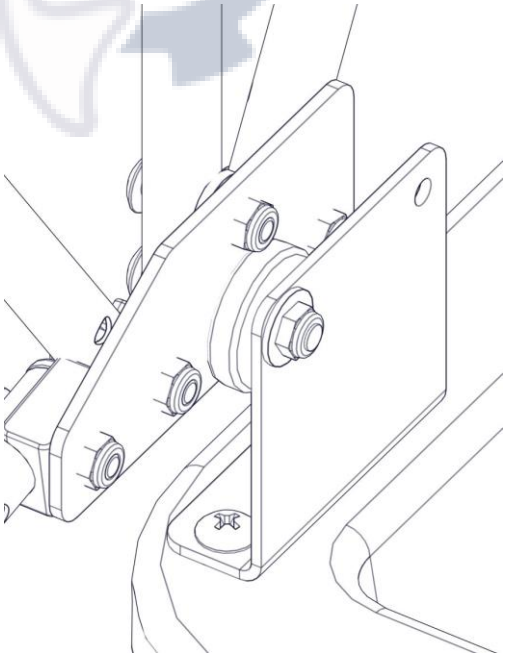

Pole slots must face inward

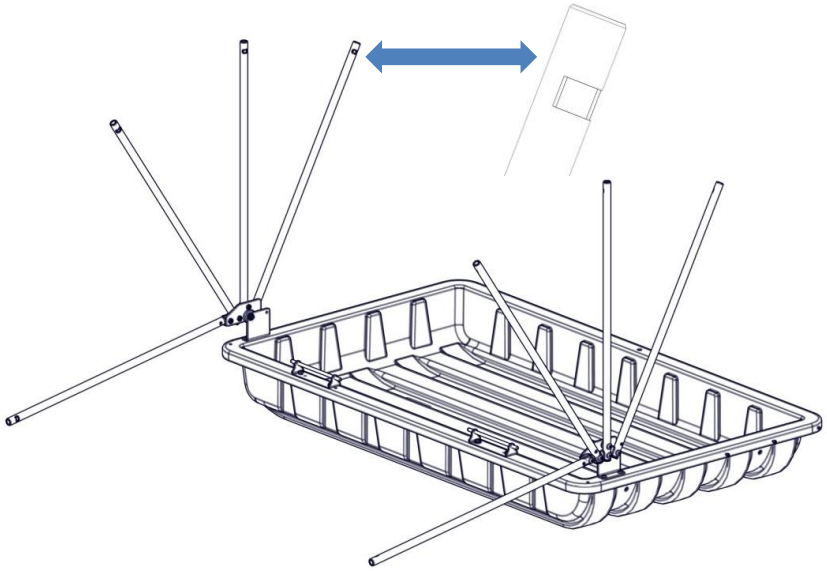



STEP 5 – HOOP POLES

Parts Needed for Step 5

Part Number	Description	Quantity
105861	HOOP POLE	3
103770	SMALL RPSX COLLAR	6
101074	ADJ. SPREADER POLE	1
101095	ROPE	1

A. Install the Small RPSX Collars #103770 onto the Hoop Poles #105861. Cap Tube Spacers #101083 into the ends of the Canopy Support Poles #103836.

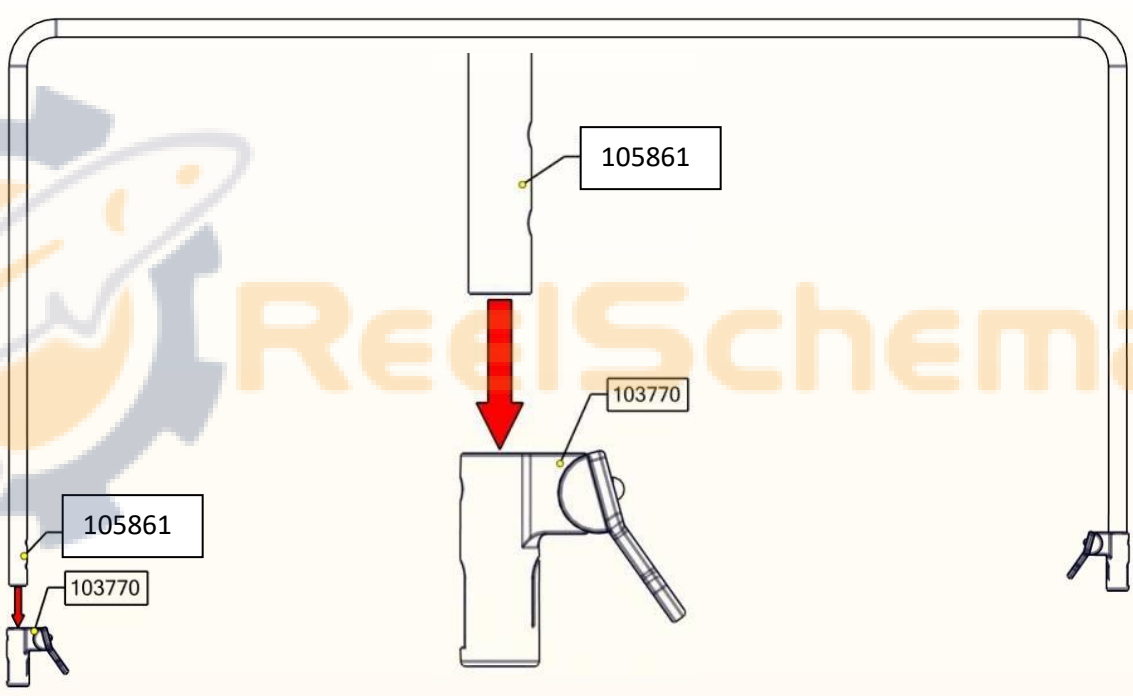

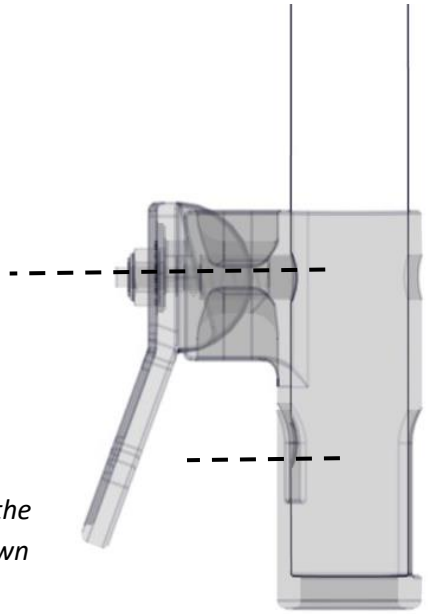


Align RPSX Collar with the holes in the Hoop Pole as shown

ReelSchematic

TIP: Twist the lever on the RPSX Collars 90 degrees to allow for easier installation onto Hoop Pole.





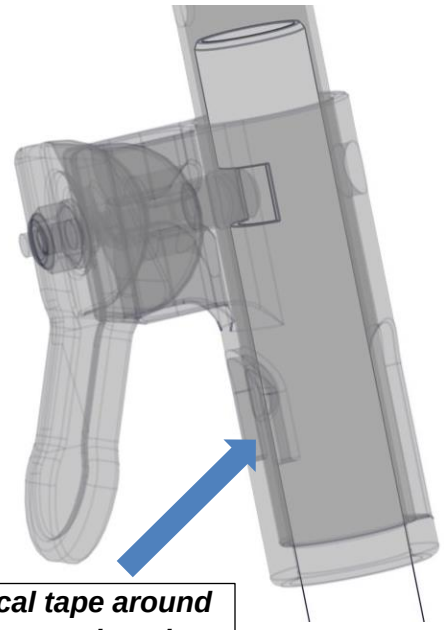


TIP: Run electrical tape around collar to help prevent the tab from twisting or slipping

B. Starting in the back of the shelter, install the Hoop Poles over the Straight Canopy Support Poles.

C. Put the Adjustable Spreader Pole #101074 into shelter.


D. Insert Rope #101095 and tie off each end.

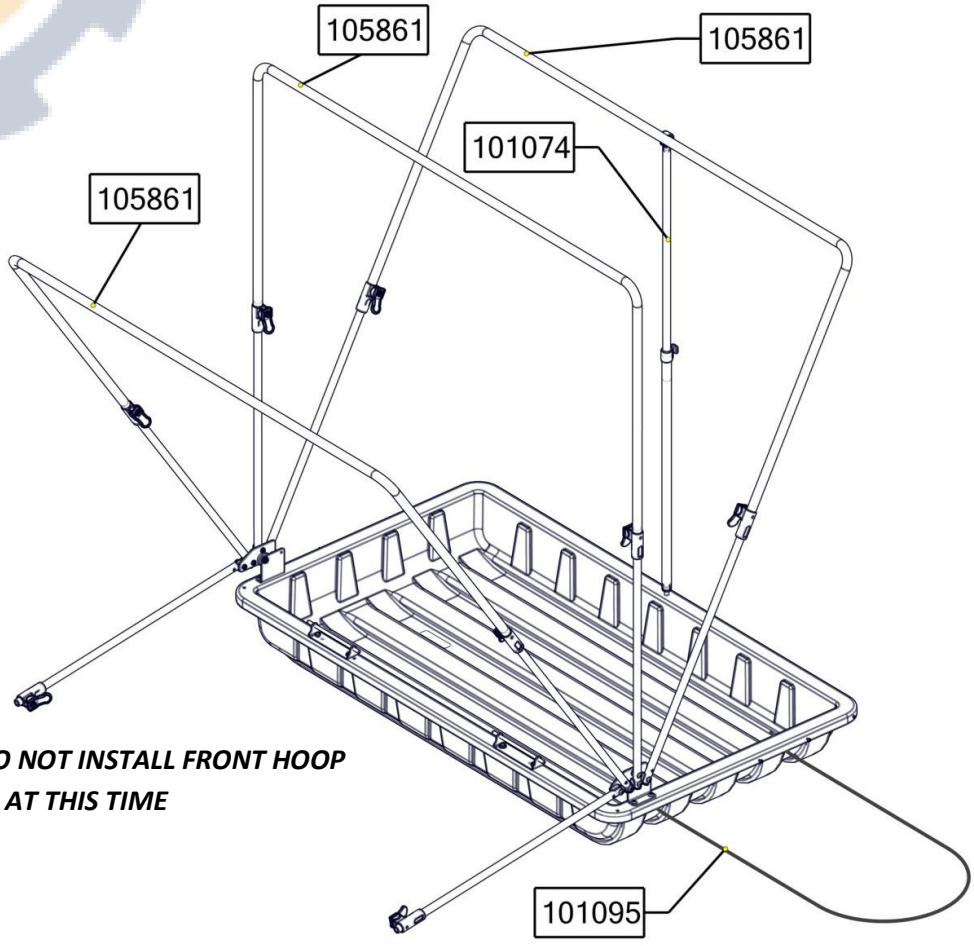



DO NOT INSTALL FRONT HOOP POLE AT THIS TIME

STEP 6 – PUTTING SEATS IN SHELTER


A. Install seat assemblies into shelter as shown, noting the seat latch clip position. Chair needs to be in the lock position when sitting. It's also important to have the seats in place for added weight to help with the tent installation process.

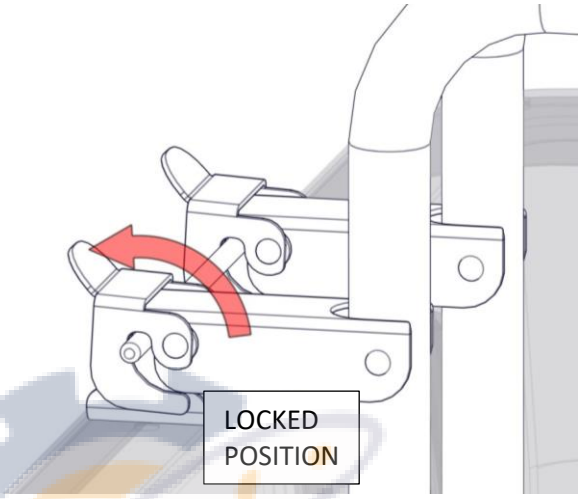

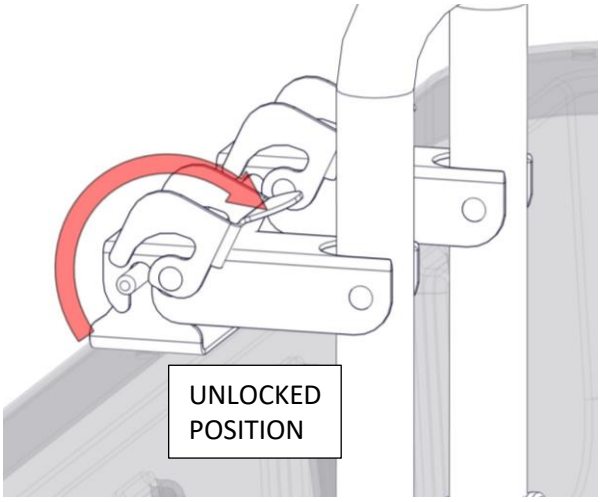

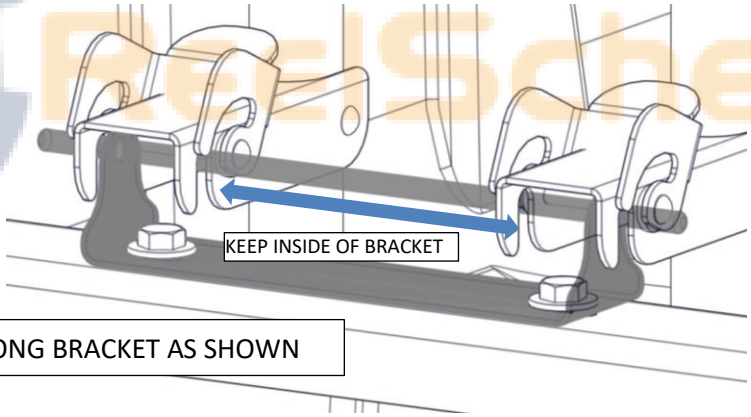

CENTER ALONG BRACKET AS SHOWN

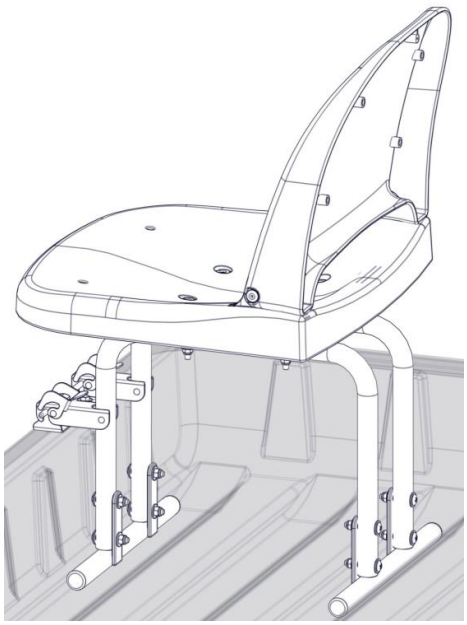

STEP 7– TENT INSTALLATION


Parts Needed for Step 7

Part Number	Description	Quantity
106115	TENT, NANOOK NON-THERMAL, XL	1
102814	U-CHANNEL	1
101148	SCREW, #6 X 0.38	18

A. Drape the tent over the Hoop Poles. Attach the tent to the poles on the inside with the Velcro straps.


B. Slide the remaining front Hoop Pole through the sleeve in the front of the tent.

C. Attach the front Hoop Pole to the Straight Canopy Support Poles.

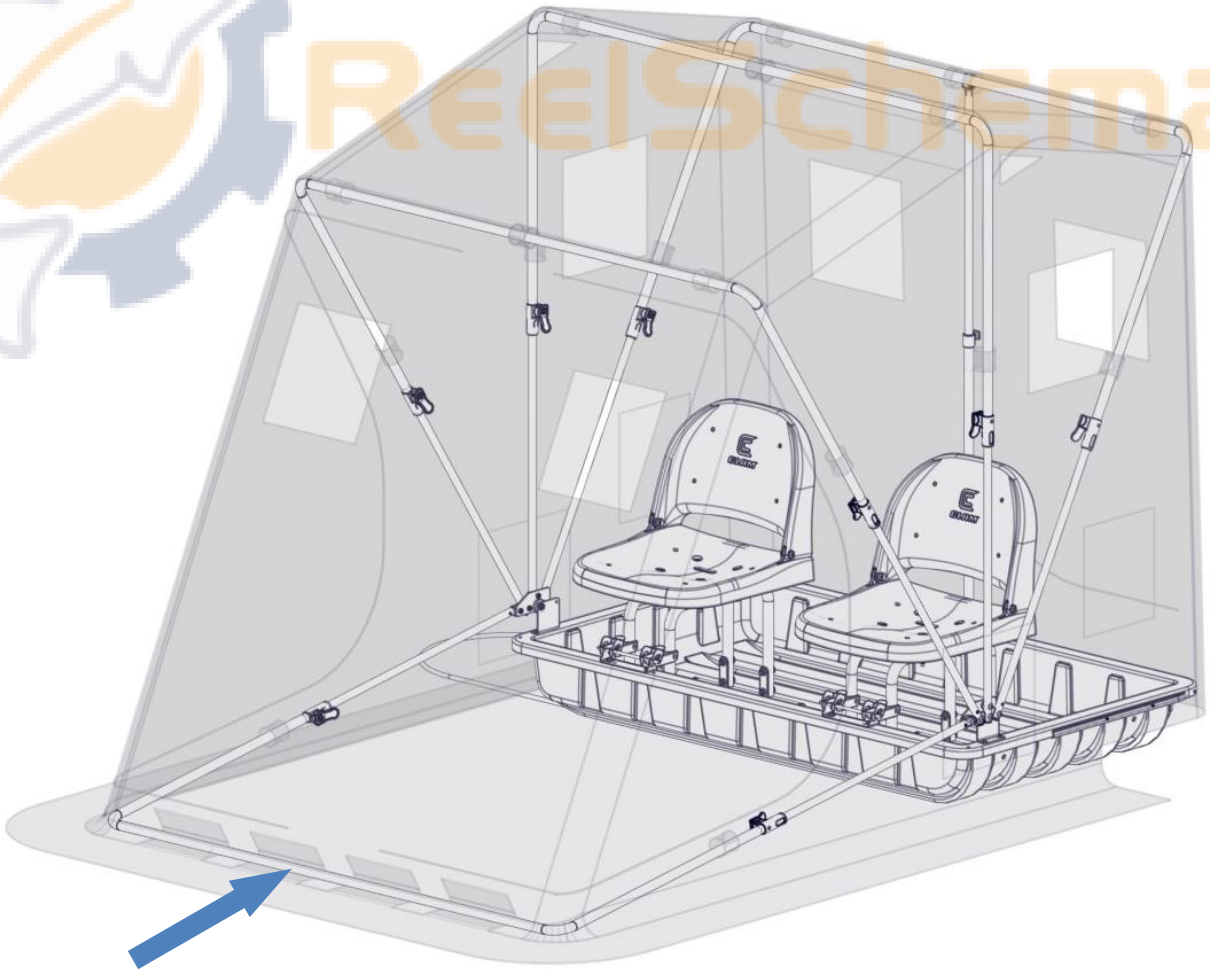


Front Hoop Pole through sleeve in tent


SOAKING THE U-CHANNEL #102814 IN HOT WATER WILL MAKE IT MUCH MORE PLIABLE AND EASIER TO WRAP AROUND SHELTER.

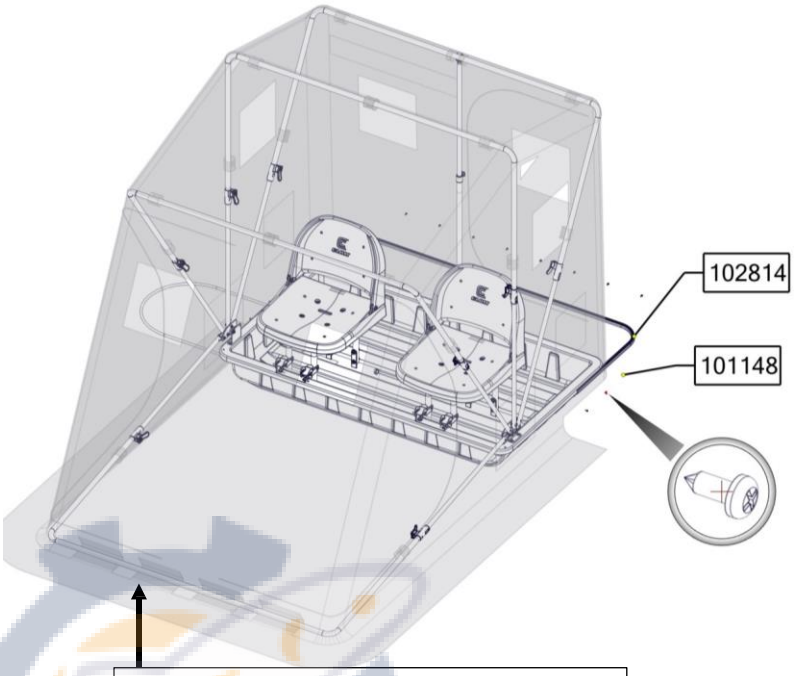

THE FRONT HOOP POLE SHOULD TOUCH THE FLOOR WHEN THE TENT IS SET CORRECTLY WITH SOME SLACK IN THE FRONT PART OF THE TENT

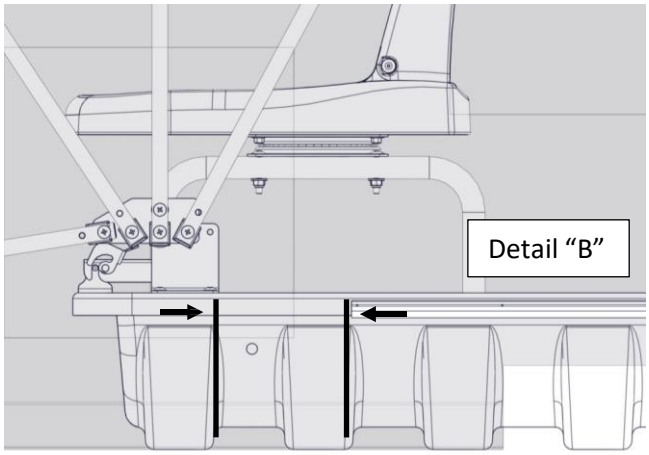

8”
Approx BOTH SIDES.

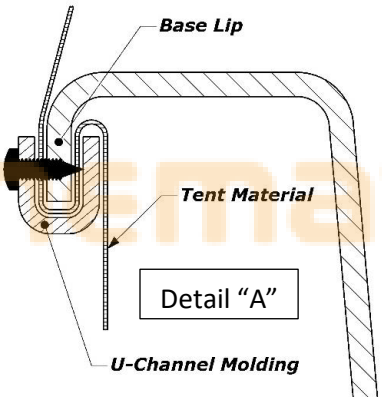

D. After connecting the Velcro tent loops to the frame, pull tent material over the back of the base and temporarily attach using clamps.

E. Walk around the shelter to verify the tent is fitted to the frame properly and adjust as needed before continuing.

F. To properly set the tent, pull down on the rear corners of the tent to adjust the front hoop pole position. When set correctly, the front hoop pole should touch the floor and the tent material should have some slack. Once satisfied with how the tent is sitting, re-clamp rear corners to maintain proper position of the tent.

G. Before installing U-Channel, PN 102814, place in hot water for a minimum of two minutes or until molding is pliable.

H. Find rear midpoint of the shelter and center of U-Channel. Press the middle of the molding over tent material and base lip (see Detail “A”). Insert one #6 phillips screw into the center of the U-Channel molding. Next, press the molding in around the base and cut 8” from the rear of the pole mounting bracket (see Detail “B”).

I. Install remaining screws through U-Channel until it is fully secured to the base and is holding the tent tight to the tub.

TIPS FOR USE

Folding and transporting your Clam Ice Fishing shelter is easy:

▪Unsnap the spreader poles and lay them in the bottom of the base.

▪Push the RPSX Collars and retract each hoop, starting with the rear hoop and working towards the front. Rotate all retracted hoops to the resting position. Tuck the tent into the base and between the hoops so that no material is left hanging on the ground for transport.

▪Use of a travel cover to help prolong the life of the unit is recommended (travel cover not included).

▪We recommend the optional Runner Kit be mounted to the base of your shelter

NOTE: Pulling behind an ATV or snowmobile may result in premature wear of the base.

▪In windy conditions it is advised to secure your shelter to the ice using Clam's Ice Anchor Kit (PN 108064) and Ice Anchor Installation Tool (PN 108348).

Make sure your ice shelter is completely dried out after each use. Store your shelter in a cool, dry place. Keep away from rodents.

Q: What is the proper way to set up and take down my Fish Trap?

Set-Up:

- Face the seats. Grab the floor hoop pole and pull on it until you feel and hear the RPSX collar pins engaging in the fully open position. Grab the next hoop and do the same until all the hoops are fully open. When finished, you should be inside the shelter.
- Install the roof spreaders, then front spreader, and finally the rear spreader. (Spreader count varies with shelter style/configuration – some smaller shelters use only a rear spreader).

Take-Down:

- Remove spreader pole - snug the tension knob after compacting so it doesn't vibrate out during transit.
- From inside the shelter, start with the rear wall hoop. Compress both collars and retract hoop, then the same with next inward hoop, etc. Continue until all upright hoops are collapsed.
- Step out of the shelter, disengage the porch hoop collars and swing the porch hoop onto the previously retracted hoops. Make sure the tent does not catch on the mount brackets while collapsing the porch hoop.
- Go around the shelter and tuck the tent material in between the rested hoops the best you can to keep the tent material from dragging during transit – a travel cover works great to help hold everything together.

***Note: Make sure tent material is clear of the canopy brackets to minimize rubbing or possible tearing.

SAFETY INSTRUCTIONS



Please fully understand and follow all safety instructions as outlined. Failure to do so could result in severe injury or death.

▪DO NOT USE OPEN FLAME HEATERS IN YOUR ICE SHELTER. INJURY OR DEATH MAY RESULT FROM FIRE IF TENT FABRIC IS EXPOSED TO OPEN FLAME. THE TENT IS NOT FIREPROOF, BUT THE FABRIC IS TREATED WITH A FIRE RETARDANT THAT MEETS CPAI-84 SPECIFICATIONS. APPLICATION OF ANY FOREIGN SUBSTANCE MAY RENDER THE FLAME RETARDANT PROPERTIES INEFFECTIVE. TENT FABRIC WILL MELT WHEN CONTACT IS MADE WITH HOT SURFACES (I.E., HEATERS).

▪DEATH FROM ASPHYXIATION MAY RESULT FROM USE OF OXYGEN DEPLETING HEATERS. OPEN ALL VENTS FOR FRESH AIR VENTILATION.

▪NEVER LEAVE SHELTER UNATTENDED WHEN SET UP.

▪DUE TO THE INCREASE IN TRAFFIC (SNOWMOBILES, AUTOS, ETC.) ON AREA LAKES, ICE FISHING CAN BE HAZARDOUS AT NIGHT. IF YOU CHOOSE TO FISH AT NIGHT OR IN POOR VISIBILITY CONDITIONS, BE SURE TO TAKE PRECAUTIONS WITH LIGHTS OR REFLECTORS TO SHOW DRIVERS YOUR WHEREABOUTS. NIGHTTIME: EXTERIOR REFLECTORS MUST BE VISIBLE TO REDUCE RISK OF COLLISIONS.

FREQUENTLY ASK QUESTIONS

Fish Trap FAQ's

Q: Should I install a runner kit/hyfax to the base of my shelter?
A: The warranty on our shelters does not cover cracked or worn bases if a runner kit has not been installed. Additionally, bases will wear much quicker without a runner kit installed.

Q: The zipper on my shelter freezes up and/or sticks. Is there anything I can use to help prevent this from happening?
A: There are lubricants available that can work well, including various silicone sprays, ChapStick and other zipper lubricant sticks and brushes.

Q: The sliding seat poles, frame poles, or spreader poles of my shelter are sticking. Is there anything to put on these poles to help them slide better?
A: Silicone spray lubricants can help prevent poles from sticking. When poles slide against each other sometimes burrs are created. If this happens separate the affected poles and use a fine file or sandpaper to deburr the pole(s) and then apply a thin coat of lubricant before rejoining the poles.

Q: Do you have a replacement tent, base, poles, quick connects or other parts for my Fish Trap?
A: Retailers typically don't carry replacement parts, but we have replacement parts available for purchase direct at www.clamoutdoors.com. We are limited on parts for older model shelters.

Q: The poles to my Fish Trap have bent out of place. Should I try to bend them back?
A: It might be possible to bend the poles back into their proper place. If your bent pole is not creased lay it on a flat surface and bend it back into shape. Replacement poles can be ordered online from our website if needed.

Q: Should I put screws through the U-channel molding and tent of my shelter?
A: Putting screws through the U-channel will help to securely fasten the tent of your shelter to the base. This is a necessary step for proper installation and failure to do so will void the warranty.

Q: I am trying to attach the U-channel molding to my shelter, but am having difficulty getting it started, as it seems too stiff and will not stay attached to the edge of the sled. What can be done to help?
A: It is difficult to attach the U-channel in cold conditions. Assembly of the shelter should be done indoors with the U-channel warmed in a bucket of hot water for several minutes so it's more pliable.

Q: I can see pinholes of light through the fabric of my tent. Is my shelter waterproof and will my fish house leak?
A: Pinholes may be seen along seams or where the tent fabric is bonded to the thermal material on an insulated shelter. In either case, this has no effect on the function of the fabric or performance of the unit. While the fabric of the tent is water resistant it is not waterproof, so some water from rain or melting snow may come through your tent. A waterproofing spray such as Kiwi Camp Dry can be applied to the tent fabric to make the shelter more water repellent.

Q: There are cracks on the inside finish of the fabric of my shelter. Is this normal? Can anything be done to fix this?
A: It is normal for some of the dark colored coating to come off the inside of the tent, particularity on a non-thermal tent. Over time, as you set up and take down the shelter, the dark coating can begin to flake off, especially along the folds in the fabric when the shelter is collapsed. This does not affect the function of the fabric. If you feel that too much light is now entering your shelter in the places where some of the

coating has come off, you may wish to apply a new layer of rubberized coating. A thin layer of Loctite Color Guard (black), found online or at home improvement stores, works well.

Q: Would it be best to completely dry out my shelter after every time it gets used?
A: It is recommended your tent be dried out completely after each use. If it is not dried out, moisture may cause some damage to the shelter. This is especially important if the shelter is being stored for a long period of time.

Q: What will help keep mice or rodents from eating the tent of my Fish Trap?
A: We recommend keeping your tent in a sealed plastic tote with laundry dryer sheets or moth balls. If the shelter is stored in a barn or shed, take the tent off and store it in a more rodent-free environment.

Q: How do I wash the tent of my ice fishing shelter?
A: We recommend using a mild bleach and water solution (1 part bleach to 10 parts water), or a mild soap detergent and water solution to help get rid of mildew and odor in your tent. Be sure to dry the tent thoroughly. We do not recommend using a washing machine to clean the tent as it may cause damage.

Q: Will using a heater help to eliminate or reduce water vapor and condensation in my shelter?
A: No. A byproduct of burning propane is water. A bigger heater will produce more water vapor. Also, the colder the temperature outside the more condensation there will be inside the unit.

Q: Are patch kits available and how do I apply them to my shelter?
A: Yes, patch kits are available for purchase on our website. When applying a patch, it works best to spray adhesive (we recommend using 3M #77 or 3M #90 spray adhesive) on to both surfaces - the part of the tent where the patch is going to be applied and the patch itself. Wait until the adhesive begins to dry and becomes tacky, then place the patch on the tent. Make sure to apply the patch evenly and smoothly since wrinkles or uneven areas will be very difficult to correct once the two surfaces with the adhesive come into contact with each other.

Q : Do you ship outside of the United States?
A: We can ship to Canada, but note that all prices on our website are listed in US dollars. Canadian orders will include the cost of the item plus shipping, taxes & duties.