www.reelschematic.com

PARTS AND PRICE LIST FOR INTERNATIONAL 130 and 130H

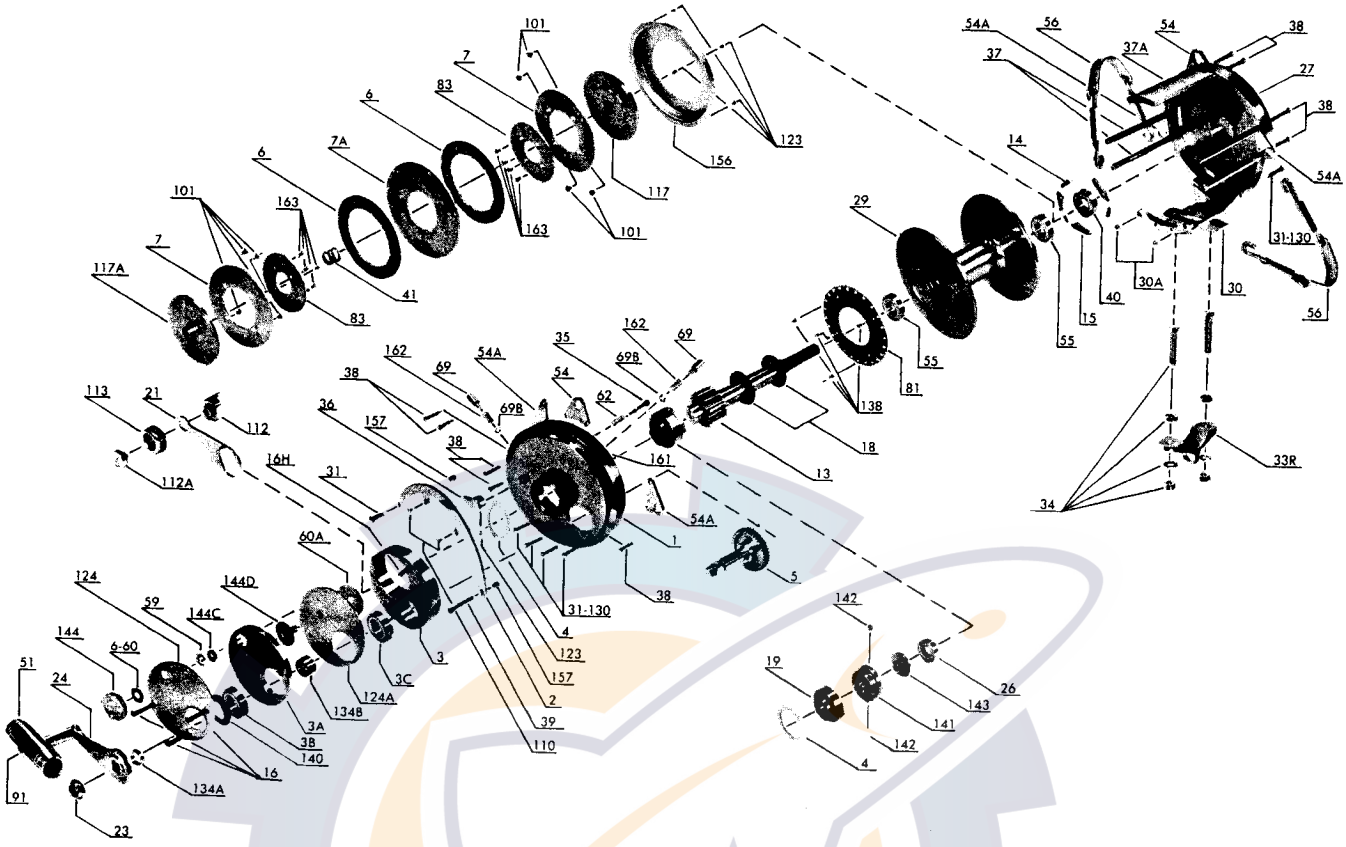

KEY NO.	DESCRIPTION	PART NO.	PRICE
1	RIGHT SIDE PLATE ASSEMBLY	1-130	70.00
2	QUADRANT RING	2-130	6.50
3	BRIDGE (inner)	3-130	6.50
3A	BRIDGE (outer)	3A-130	4.30
3B	BRIDGE BEARING (outer)	55-130	8.00
3C	BRIDGE BEARING (inner)	55-130	8.00
4	CAM THRUST WASHER	4-130	.55
5	MAIN GEAR	5-130	15.25
		5-130H	15.25
6	DRAG WASHER	6-130	4.00
6-60	LEATHER SPACER WASHER	6-60	.15
7	METAL DRAG WASHER	7-130	3.50
7A	FLOATING DRAG WASHER	7A-130	7.50
13	PINION GEAR	13-130	25.00
		13-130H	25.00
14	DOG SPRING	49-710	.20
15	DOG	15-130	.40
16	BRIDGE MOUNTING SCREW (outer)	16-130	.25
16H	BRIDGE MOUNTING SCREW (inner)	16H-130	.25
18	DISC CLUTCH SPRING	18-130	.40
19	ECCENTRIC CAM	19-130	6.00
21	ECCENTRIC CAM LEVER	21-130	4.25
23	HANDLE NUT	23-130	1.05
24	HANDLE COMPLETE	24-130	13.50
26	RIGHT SIDE BEARING	55-130	8.00
27	LEFT SIDE PLATE ASSEMBLY	27-130	60.00
29	SPOOL	29L-130	100.00
30	STAND	30-130	30.00
30A	DOWEL TUBE	30A-130	.35
31-130	STAND SCREW	31-130	.25
31	QUADRANT SCREW	16H-130	.25
33R	RINGED ROD CLAMP	33R-130	9.25
34	ROD CLAMP SCREW W/NUTS	34-116	1.50
35	CLICK TONGUE	35-130	1.05
36	CLICK BUTTON	36-50	1.05
37	FRAME POST	37-130	1.10
37A	SPACER BAR	37A-130	8.50
		37A-130H	8.50
38	POST SCREW	38-130	.25
39	SPECIAL POST SCREW	39-130	.40
40	LEFT SIDE BEARING	55-130	8.00

KEY NO.	DESCRIPTION	PART NO.	PRICE
41	LEFT SIDE BEARING SPRING	41-130	.45
51	HANDLE KNOB ASSEMBLY	51-130	4.30
54	HARNESS LUG	54-130	1.05
54A	ROD BRACE LUG	54A-130	1.05
55	SPOOL BEARING	55-130	8.00
56	ROD BRACE ASSEMBLY	56-117	5.00
59	SLOTTED WASHER	59-130	.30
60	BACKING WASHER	60A-130	.55
62	CLICK SPRING	62-50	.30
69	LOCATING PIN	69-130	.65
69B	RETAINING PIN	69B-130	.30
81	RATCHET	81-130	4.30
83	COLLAR PLATE	83-130	2.25
91	HANDLE SHAFT	91-130	2.50
95	CLICK TONGUE BUSHING (not shown)	95-130	1.00
95A	CLICK BUSHING SPRING (not shown)	18-20	.25
95B	CLICK BUSHING NUT (not shown)	38-710	.25
101	DRIVE PLATE SCREW	101-130	.25
110	CENTER QUADRANT SCREW	110-50	.20
112	ECCENTRIC LEVER KNOB	112-130	3.75
112A	ECCENTRIC KNOB SCREW	112A-130	.60
113	ECCENTRIC LEVER CAP	113-130	1.75
117	DRIVE PLATE	117-130	10.35
117A	DRIVE PLATE (outer)	117A-130	8.75
123	DRAG COVER SCREW	123-50	.15
124	BRIDGE COVER (outer)	124-130	4.00
124A	BRIDGE COVER (inner)	124A-130	3.75
134A	HANDLE SPACING COLLAR	134A-130	.75
134B	BEARING SPACING BUSHING	134B-130	.55
138	RATCHET SCREW	101-30	.20
140	FELT WASHER	140-115	.25
141	CAM FOLLOWER	141-130	4.30
142	CAM FOLLOWER PIN	142-130	.25
143	ADJUSTING SCREW	143-130	3.80
144	PRE SET KNOB	144-130	3.80
144C	PRE SET PINION	144C-130	.80
144D	PRE SET GEAR ASSEMBLY	144D-130	2.00
156	DRAG COVER	156-130	3.50
157	QUADRANT SPACER BUSHING	157-130	.25
161	STOP PIN BUSHING	161-130	.65
162	STOP PIN SPRING	162-130	.20
163	COLLAR PLATE SCREW	101-30	.20