
PENN

114HLW 6/0

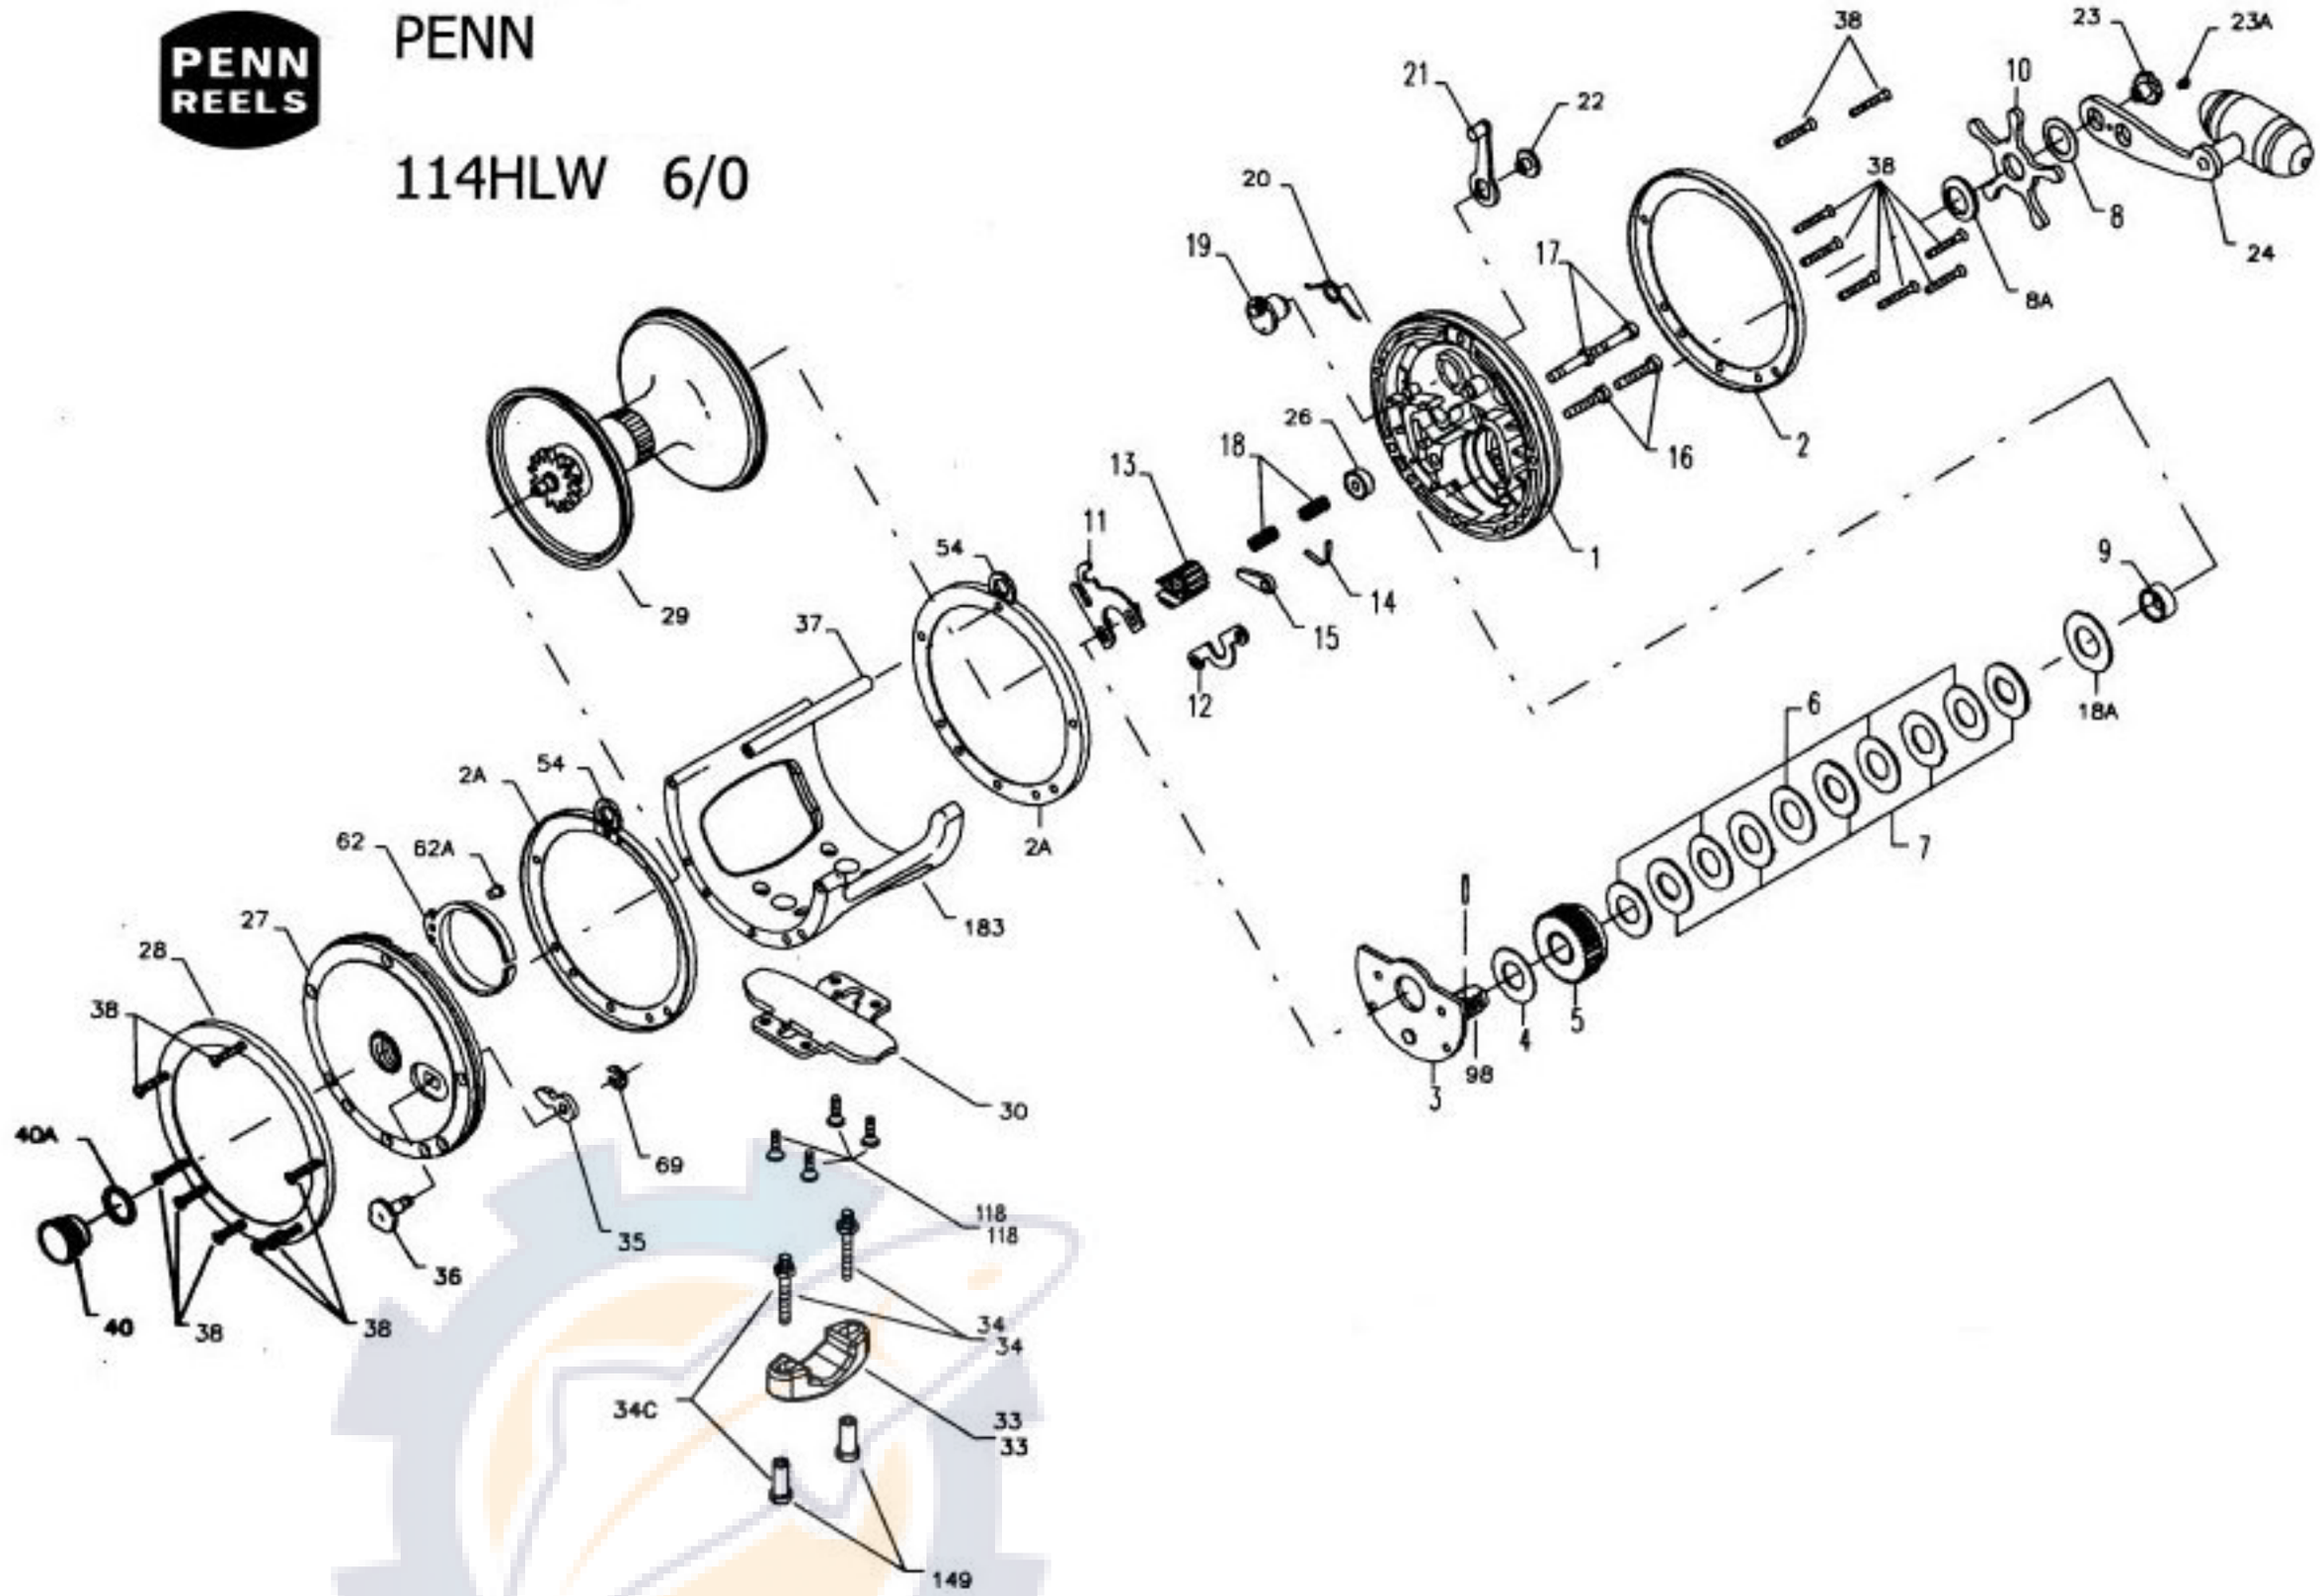

Penn Reel Parts list for: Model: 114HLW w/half frame

KEY NO	PART NO.	DESCRIPTION	KEY NO	PART NO.	DESCRIPTION
1	1-114H	RIGHT SIDE PLATE	23	23-116	HANDLE SCREW
2	2-114H-O	OUTER RIGHT SIDE RING	23A	110-60	HANDLE LOCK SCREW
2A	2-114-I	INNER SIDE RING (2 REQ.)	24	24-57	HANDLE
3	3-114H	BRIDGE ASSEMBLY	26	26-116	R.S. BEARING
4	4-115	FIBER WASHER	27	27N-114H	LEFT SIDE PLATE
5	5-115	MAIN GEAR	28	2-114-O	OUTER LEFT SIDE RING
6	6-115	DRAG WASHER	29	29L-114HLW	SPOOL
7	7C-115	METAL WASHER SET	30	30-114HL	STAND
8	8-114	TENSION SPRING	33	33-340	ROD CLAMP
8A	8-115	TENSION SPRING	34	34-114HLW	ROD CLAMP SCREW (2 REQ)
9	9-114H	SPACING SLEEVE	35	35-114	CLICK TONGUE
10	10-114	STAR DRAG WHEEL	36	36-114H	CLICK BUTTON
11	11-114	ECCENTRIC JACK	37	37-115	FRAME POST (114HLW)
12	12-114	PINION YOKE	38	39-12	R.S. POST SCREW (8 REQ.)
13	13-114H	PINION	39	39-12	L.S. POST SCREW (8 REQ.)
14	14-114	DOG SPRING	40	40-114HL	LEFT SIDE BEARING
15	15-114H	DOG	40A	120-114H	LEFT SIDE BEARING O-RING
16	16-114	LOWER BRIDGE SCREW (2 REQ.)	54	54-114	HARNESS LUG (2 REQ.)
17	17-114	UPPER BRIDGE SCREW (2 REQ.)	62	62-114	CLICK SPRING
18	18-114	CLUTCH SPRING (2 REQ.)	62A	63-209	CLICK SPRING SCREW
18A	18-114H	SPRING DISK	69	69B-600	RETAINING RING
19	19-114	ECCENTRIC	98	98-114	GEAR SLEEVE
20	20-114	ECCENTRIC SPRING	118	118-80	STAND SCREWS (4 REQ.)
21	21-114	ECCENTRIC LEVER	149	149-45	ROD CLAMP NUT (2 REQ.)
22	22-60	ECCENTRIC SCREW	183	183N-114HLW	FRAME