
Bass LTD 103L

EXPLODED VIEW

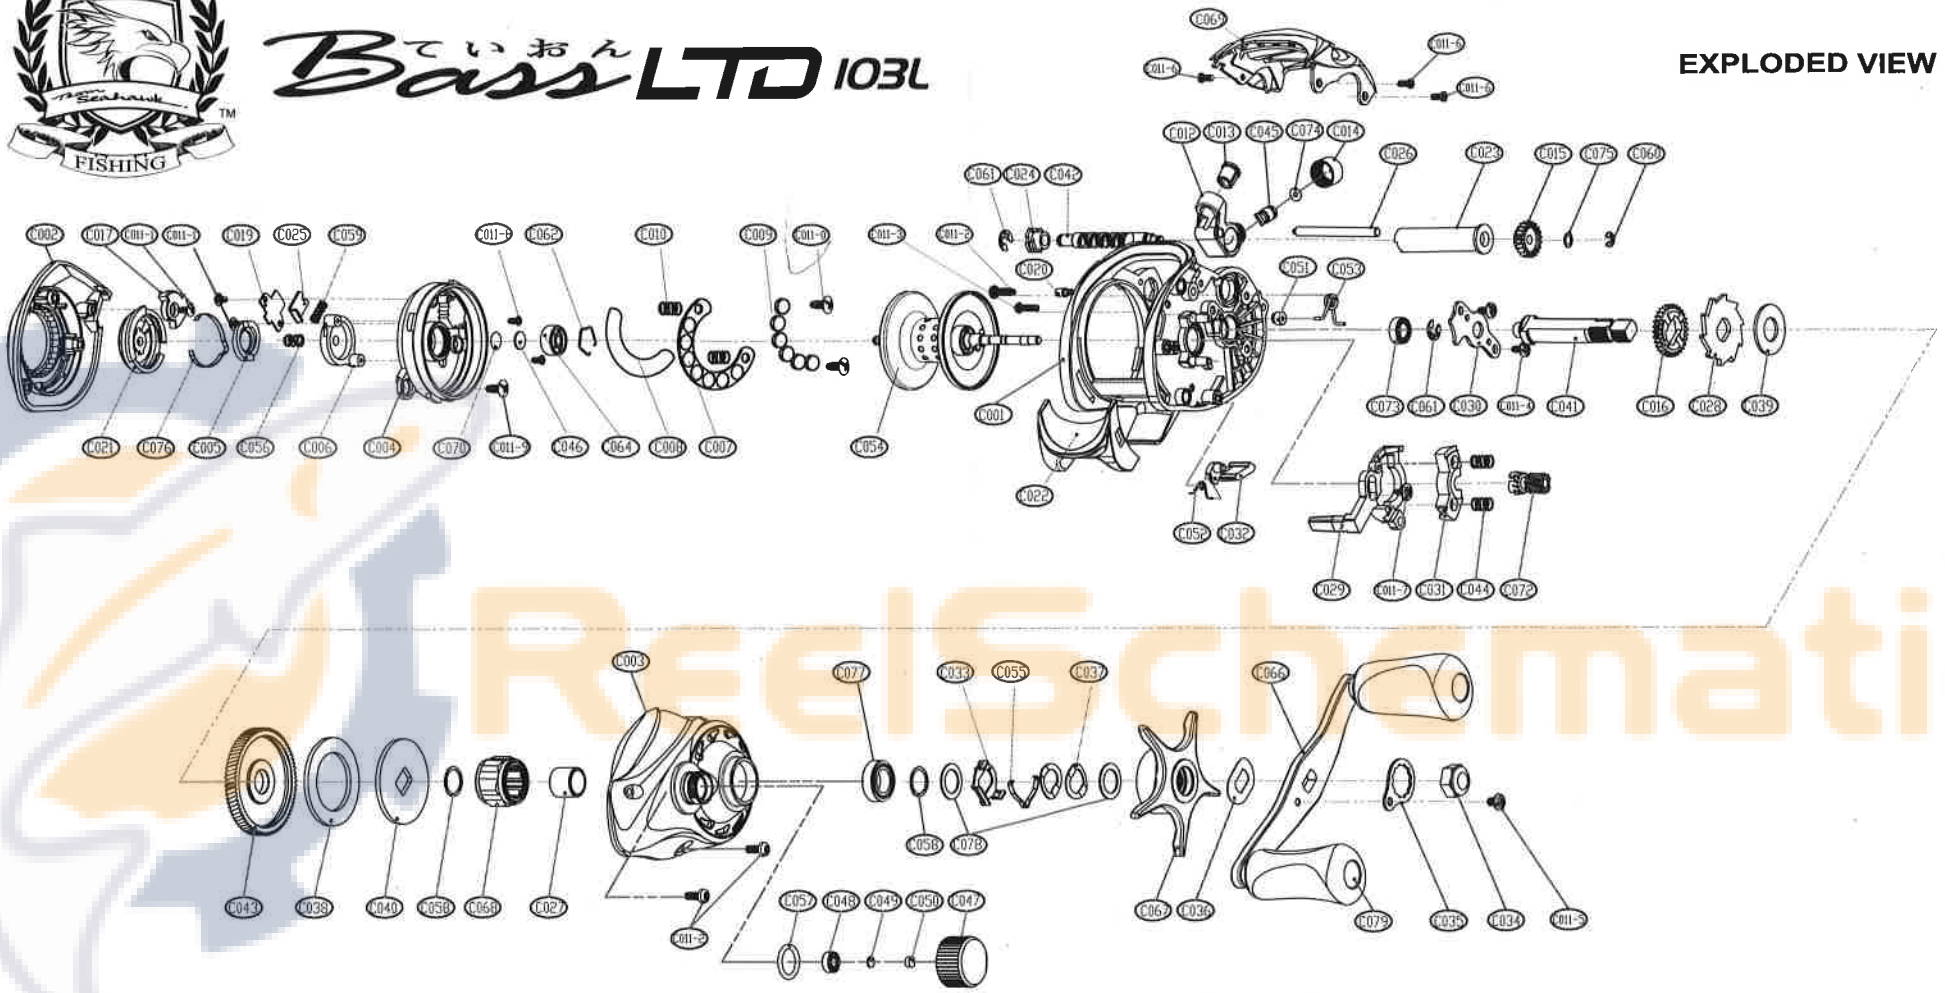

PARTS LIST OF BASS LTD 103L

C001	FRAME	C011-4	TAPPING SCREW	C021	CONTROL DIAL	C035	H/RETAINER	C049	T/KNOB WASHER	C064	BALL BEARING
C002	LEFT COVER	C011-5	SCREW	C022	THUMB BAR	C036	LEAF SPRING	C050	RUBBER WASHER	C066	HANDLE ASS'Y
C003	RIGHT COVER	C011-6	TAPPING SCREW	C023	PIPE	C037	SPRING WASHER	C051	SPRING GUIDE	C067	STAR DRAG
C004	SPOOL OVER	C011-7	TAPPING SCREW	C024	BUSH	C038	6000T-WASHER	C052	KICK LEVER SPRING	C068	O/WAY CLUTCH
C005	SLIDE A	C011-8	TAPPING SCREW	C025	STOPPER	C039	WASHER	C053	CLUTCH SPRING	C069	HOOD
C006	SLIDE B	C011-9	SCREW	C026	PILLAR	C040	D-WASHER	C054	SPOOL ASSY(1B/B)	C070	WASHER
C007	MAGNET HOLDER	C012	LEVEL WIND	C027	SLEEVE	C041	CRANK SHAFT	C055	PLATE SPRING	C072	COIL SPRING
C008	MAGNET PALTE	C013	LINE GUIDE	C028	RACHET	C042	WORM SHAFT	C056	COIL SPRING	C073	BALL BEARING
C009	MAGNET	C014	LEVEL WIND NUT	C029	CLUTCH CAM	C043	DRIVE GEAR	C057	O-RING	C074	WASHER
C010	COIL SPING	C015	W/PINION GEAR	C030	BEARING PLATE	C044	PINION GEAR	C058	WASHER	C075	WASHER
C011-0	TAPPING SCREW	C016	O/S GEAR	C031	CLUTCH	C045	LEVEL WIND PIN	C059	SPRING	C076	CLICK SPRING
C011-1	TAPPING SCREW	C017	STOPPER LEVER	C032	KICK LEVER	C046	WASHER	C060	E-RING	C077	BALL BEARING
C011-2	SCREW	C019	STOPPER PLATE	C033	SPRING PLATE	C047	TENSION KNOB	C061	E-RING	C078	WASHER
C011-3	SCREW	C020	STOPPER PIN	C034	HANDLE NUT	C048	BUSH	C062	PANTA RING	C079	HANDLE KNOB CAP

ReelSchematic