
HyperBASS SW

200HSL 6.3:1 / 200HSL 7.5:1

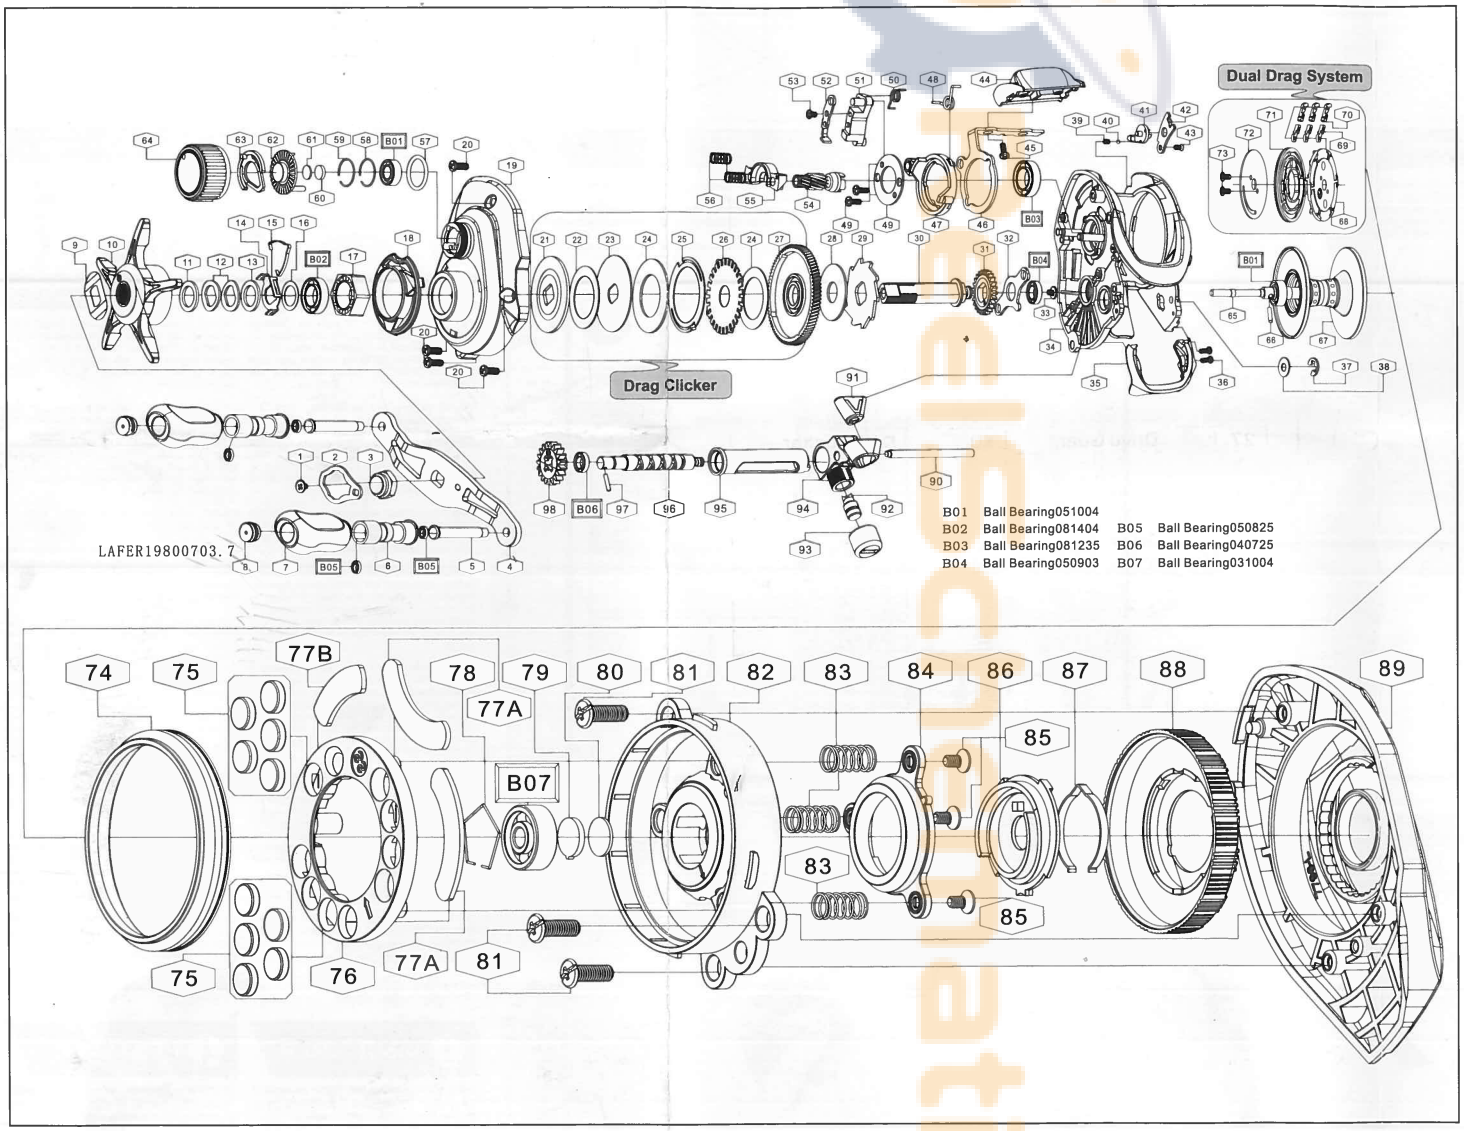

Key#	Part Name	Key#	Part Name
1	Screw	55	Clutch Plate
2	Nut Retainer	56	Clutch Spring
3	Handle Nut cap	57	O Shape Rubber Ring
4	Handle	58	Ball Bearing Clips
5	Handle Revet	59	O Clips
6	Handle Bushing	60	Washer
7	Handle Knob	61	Soft Washer
8	Handle Knob Cover	62	Articulatory Gear
9	Leaft Spring	63	Phonogram
10	Star Drag	64	Button
11	Washer	65	Main Shaft
12	Spring Washer	66	Main Shaft Pin
13	Washer	67	Spool
14	Spring Plate	68	Centrifugal Base
15	Spring	69	Centrifugal Block-A
16	Washer	70	Centrifugal Block-B
17	O/Way Clutch	71	Centrifugal Knob
18	Body Side Cover	72	Scale Plate
19	Body Cover	73	Tapping Screw
20	Body Screr	74	Deceleration Ring
21	Key Washer	75	Magnet
22	Brake Washer	76	Magnet Seat
23	Ker Washer	77A	Magnet Suction Plate
24	Brake Washer	77B	Magnet Suction Plate
25	Alarm Gasket	78	Clips
26	Alarm Gasket	79	Washer
27	Drive Gear	80	Soft Washer
28	Gear Washer	81	Trapping Screw
29	Racher	82	Spool Cover
30	Gear Metal	83	Slide Cam Spring
31	Drive Gear	84	Slide Cam-m
32	Bearing Plate	85	Screw
33	Bearing Screw	86	Dial Cam-m
34	Main Body	87	Click Spring
35	Front Cover	88	Control Dial
36	Tapping Cover	89	Plam Side Plate
37	E-Ring	90	Pillar
38	Washer	91	Line Guide
39	Switch Spring	92	Linf Wind Pin
40	Switch Marbles	93	Linf Wind Nut
41	Switch	94	Linf Wind
42	Switch Retainer	95	Pipe
43	Switch Screw	96	Worm Shaft
44	Thumb Bar	97	Main Shaft Pin
45	Tapping Cover	98	Worm Shaft Gear
46	Clutch Retainer		
47	Clutch Cam		
48	Clutch Spring		
49	Clutch Retainer		
50	Kick Lever Spring		
51	Kick Lever		
52	Protective Plate		
53	Protective Plate Screw		
54	Pinion Gear		