
AGILITY™

6820 UL

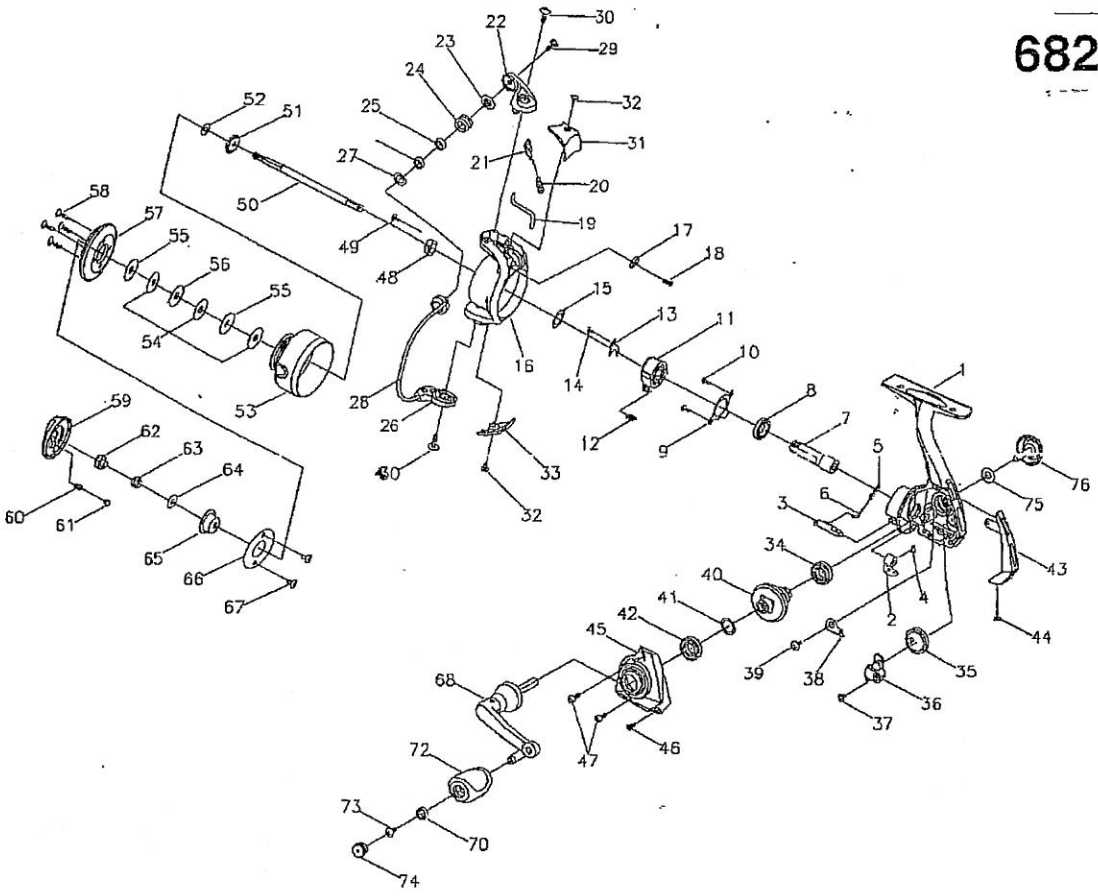

Part #	Part Name
1	BODY ASSEMBLY
2	N-R LEVER
3	N-R LEVER SHAFT
4	N-R LEVER SCREW
5	N-R LEVER SPRING
6	N-R LEVER GUIDE
7	PINION
8	BALL BEARING — 1145082
9	BEARING RETAINER
10	BEARING RETAINER SCREW
11	ONE WAY CLUTCH ASSEMBLY — 1145124
12	CLUTCH SPRING
13	ONE WAY CLUTCH RETAINER
14	CLUTCH RETAINER SCREW
15	ONE WAY CLUTCH WASHER
16	ROTOR
17	COUNTER WEIGHT
18	COUNTER WEIGHT SCREW
19	TRIP PLUNGER
20	BAIL ARM SPRING — 1146719
21	BAIL ARM GUIDE — 1145732
22	BAIL ARM
23	LINE ROLLER SPACER — 1145537
24	LINE ROLLER — 1146125
25	LINE ROLLER BEARING — 1145107
26	BAIL HOLDER
27	LINE ROLLER WASHER
28	BAIL WIRE ASSEMBLY — 1144989
29	L-ROLLER SCREW — 1146232
30	BAIL ARM SCREW
31	BAIL ARM COVER
32	BAIL ARM COVER SCREW
33	BAIL HOLDER COVER
34	GEAR BEARING — 1145125
35	O/S GEAR — 1145664
36	O/S SLIDER
37	O/S SLIDER SCREW
38	O/S SLIDER PLATE
39	O/S SLIDER PLATE SCREW
40	DRIVE GEAR — 1145697
41	GEAR WASHER — 1146817
42	COVER BEARING — 1145073
43	REAR COVER
44	REAR COVER SCREW — 1146182
45	BODY COVER ASSMEBLY
46	COVER SCREW (A)
47	COVER SCREW (B)
48	ROTOR NUT
49	ROTOR NUT SCREW
50	MAIN SHAFT
51	CLICK GEAR — 1146029
52	SHEET WASHER — 1146805
53	SPOOL ASSMEBLY — 1146548
54	LINING WASHER
55	SPOOL WASHER
56	DRAG WASHER
57	SPOOL LIP
58	SPOOL LIP SCREW
59	DRAG KNOB
60	DRAG CLICK SPRING
61	DRAG CLICK PIN
62	DRAG NUT
63	DRAG SPRING
64	DRAG SPRING WASHER
65	DRAG KNOB COVER
66	DRAG KNOB WASHER
67	DRAG KNOB SCREW
68	HANDLE ARM ASSEMBLY — 1145485
70	HANDLE KNOB BEARING
71	HANDLE KNOB SHAFT
72	HANDLE KNOB
73	SCREW
74	HANDLE KNOB CAP
75	H-LOCK WASHER → 1145258
76	HANDLE LOCK ASSEMBLY

1145884 (groups parts 59, 60, 61, 62, 63, 64, 65, 66, 67)