
ARSENAL

AR15AL
AR20AL

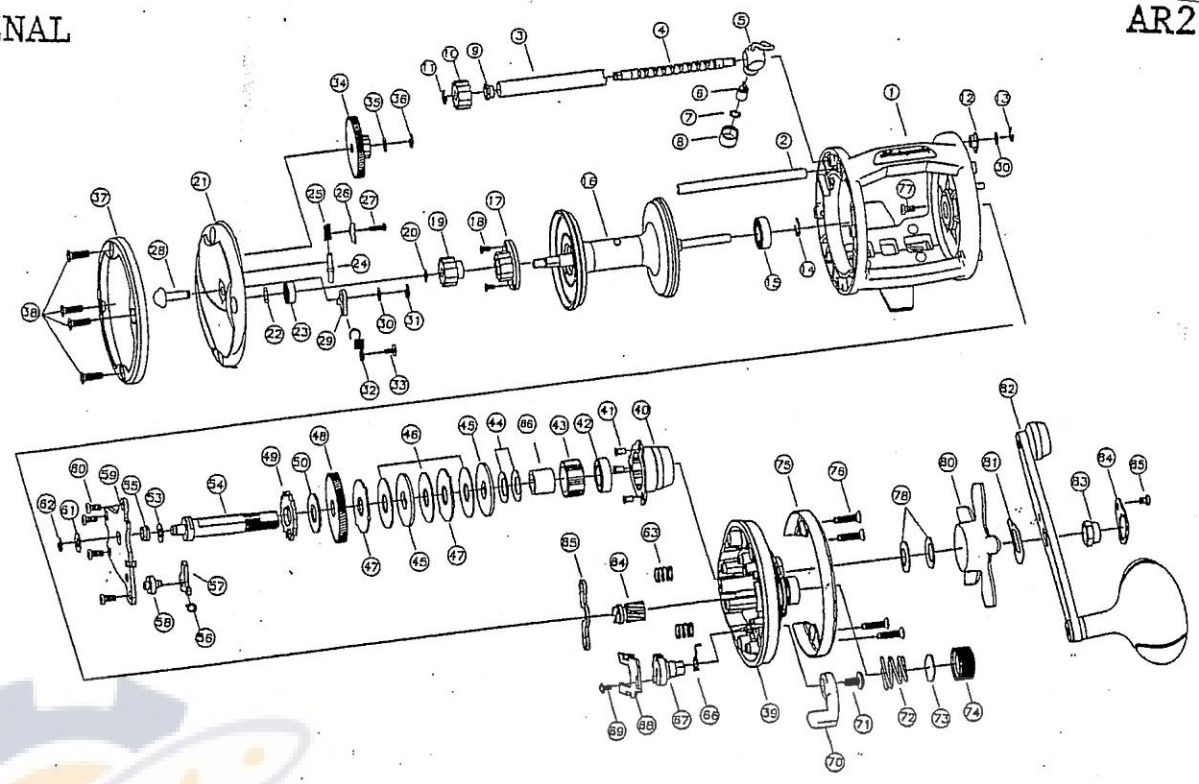

NO.	PART NAME
1	FRAME ASSM'
2	L-WIND SUPPORT SHAFT
3	WORM SHAFT GUIDE
4	WORM SHAFT
5	LEVEL WIND ASSM'
6	LEVEL WIND PAWL
7	SPACER — 1146818
8	LEVEL WIND NUT
9	W-SHAFT BUSHING(LEFT)
10	IDLERS
11	"E" WASHER — 1145278
12	W-SHAFT BUSHING(RIGHT)
13	"E" WASHER — 1145278
14	C-RING-B
15	BALL BEARING
16	SPOOL ASSM'
17	CLICK WHEEL
18	CLICK WHEEL SCREW
19	LEVEL WIND DRIVE GEAR
20	C-RING
21	LEFT COVER
22	SPOOL SPACER
23	BUSHING
24	CLICK METAL
25	COIL SPRING — 1146781
26	CLICK PLATE
27	CLICK METAL SCREW
28	CLICK SWITCH
29	CLICK CLAW

NO.	PART NAME
30	WASHER — 1146825
31	"E" WASHER — 1145283
32	CLICK SPRING
33	CLICK SPRING SCREW
34	IDLER GEAR
35	IDLER GEAR WASHER — 1146828
36	"E" WASHER — 1145278
37	PROTECTOR-L
38	PROTECTOR-L SCREW
39	RIGHT COVER
40	BEARING SLEEVE
41	BEARING SLEEVE SCREW
42	BALL BEARING — 1145079
43	ONE WAY CLUTCH
44	SPRING WASHER — 1146895
45	DRIVE WASHER(D)
46	DRIVE WASHER
47	EARE WASHER
48	DRIVE GEAR
49	AR RATCHET ASSM'
50	DRIVE SHAFT WASHER
53	WASHER — 1146825
54	CRANK SHAFT
55	BUSHING
56	ANTI-REVERSE SPRING
57	ANTI-REVERSE PAWL
58	ANTI-REVERSE POST
59	SET PLATE

NO.	PART NAME
60	SET PLATE SCREW
61	SPACER — 1146825
62	RETAINER — 1145281
63	PINION YOKE SPRING
64	PINION GEAR ASSM'
65	PINION YOKE
66	CLUTCH SPRING
67	CLUTCH CAM
68	CAM PLATE
69	PLATE SCREW
70	CLUTCH LEVER
71	CLUTCH LEVER SCREW
72	CAST CONTROL SPRING — 1146745
73	WASHER
74	CAST CONTROL CAP
75	PROTECTOR-R
76	PROTECTOR-R SCREW
77	RIGHT COVER SCREW
78	SPRING WASHER — 1146769
80	STAR DRAG
81	LEAF SPRING
82	HANDLE ASSM'
83	HANDLE NUT — 1145871
84	NUT RETAINER
85	NUT RETAINER SCREW
86	CLUTCH SLEEVE