
www.reelschematic.com

Shakespeare®

1810 II

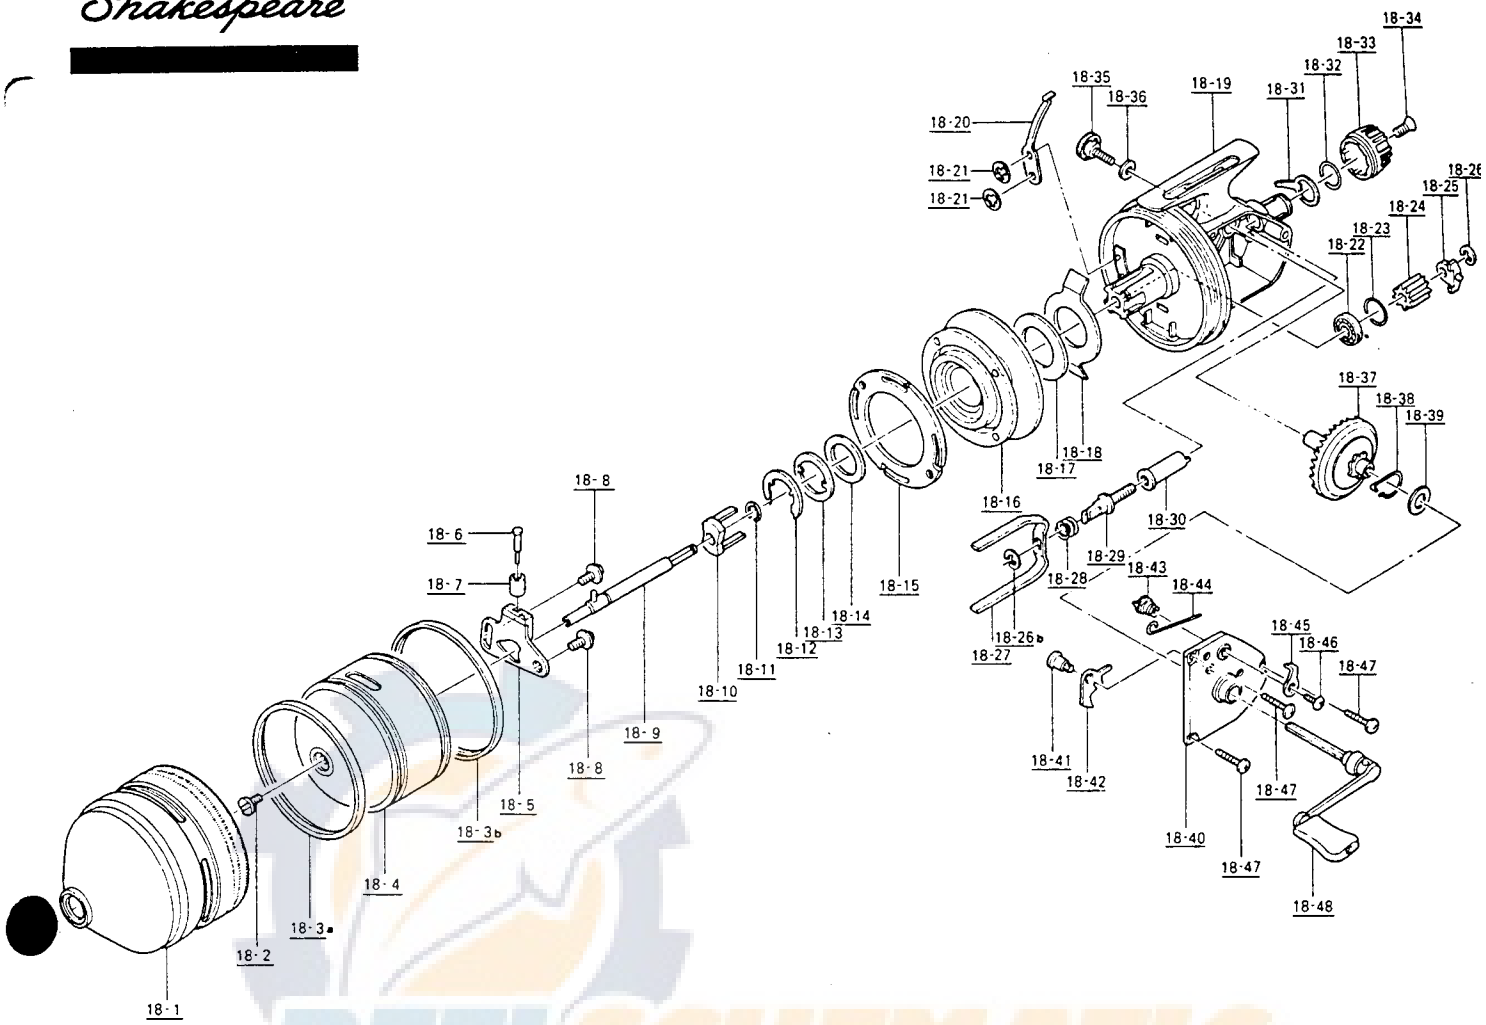

PART NO.	DESCRIPTION
18-1	Outer Cone
18-2	Pick-up Housing Screw
18-3A	Wear Ring (front)
18-3B	Wear Ring (rear)
18-4	Pick-up Housing
18-5	Pick-up Arm Assembly
18-6	Line Roller Stud
18-7	Line Roller
18-8	Pick-up Arm Screw
18-9	Main Shaft Assembly
18-10	Pick-up Arm Stop
18-11	Main Shaft Retaining Clip
18-12	Spool Retaining Clip
18-13	Drag Disc Washer
18-14	Drag Friction Washer (front)
18-15	Pick-up Housing Late Engager
18-16	Spool
18-17	Drag Friction Washer (rear)
18-18	Drag Pressure Plate
18-19	Main Housing Assembly
18-20	Spool Click Spring
18-21	Spool Click Spring Fastener
18-22	Ball Bearing
18-23	Ball Bearing Retaining Clip
18-24	Pinion Gear

PART NO.	DESCRIPTION
18-25	Oscillating Block
18-26A	Oscillating Block Retaining Clip
18-26B	Drag Adjusting Shaft Clip
18-27	Drag Adjusting Arm
18-28	Drag Spring
18-29	Drag Adjusting Shaft
18-30	Drag Adjusting Nut
18-31	Drag Knob Click Spring
18-32	Click Spring Retaining Clip
18-33	Drag Adjusting Knob
18-34	Drag Adjusting Knob Screw
18-35	Crank Handle Screw
18-36	Crank Handle Washer
18-37	Main Gear Assembly
18-38	Anti-Reverse Pawl Spring
18-39	Main Gear Washer
18-40	Cover Plate
18-41	Anti-Reverse Pawl Stud
18-42	Anti-Reverse Pawl
18-43	Anti-Reverse Cam
18-44	Anti-Reverse Cam Spring
18-45	Anti-Reverse Lever
18-46	Anti-Reverse Lever Screw
18-47	Cover Plate Screw
18-48	Crank Handle Assembly