
www.reelschematic.com

SHIMANO

REPAIR MANUAL

Shimano American Corporation, 205 Jefferson Rd.,
Parsippany, N.J. 07054

BANTAM-10 SG

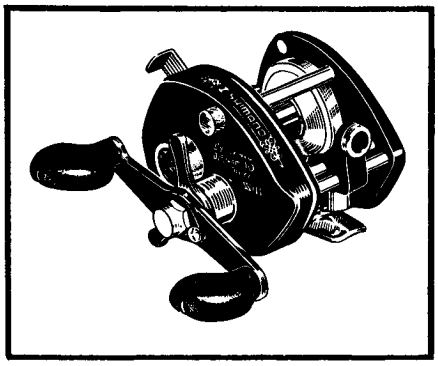

EXPLODED PARTS VIEW

PARTS LIST

PART #	DESCRIPTION	PRICE
1.	Handle Nut Lock Screw	.15
2.	Handle Nut	.65
4.	Drive Shaft Retainer Screw	.15
6.	Friction Washer	.20
9.	Cast Control Spacer	.15
11.	Right Sideplate Screw	.15
13.	Drive Shaft Bearing	.15
14.	Drag Spring Washer	.15
15.	"D" Washer	.20
16.	Drag Spacer	.40
17.	Pressure Plate	.15
18.	Drag Washer	.25
19.	Drive Gear	3.50
20.	Base Drag Washer	.25
21.	Anti-Reverse Ratchet	1.80
22.	Drive Shaft	4.60
24.	Pinion Yoke Spring	.15
25.	Pinion Yoke	.25
26.	Drive Shaft Shim	.15
27.	Retractor Spring #1	.60
28.	Anti-Reverse Dog	1.00
29.	Retractor Spring #2	.35
32.	Bearing Lock	.15
34.	Centrifugal Brake Weight	.15
35.	Left Bearing Spacer	.40
39.	Level Wind Bearing Right	.20
40.	Level Wind Guard	2.15
42.	Level Wind Pawl	1.00
45.	Level Wind Bearing Left	.20
48.	Left Side Plate Screw	.20
49.	Left Stabilizer Bar Screw	.15
60.	Line Guide Pawl Spacer (optional)	.15
133.	Level Wind Gear Lock	.15
138.	Handle Nut Lock Plate	.30
139.	Handle	6.00
140.	Drag Tri Star	2.15
141.	Cast Control Cap	.95
142.	Right Sideplate	8.50
143.	Pinion Gear	4.00
144.	Set Plate	12.00
145.	Spool Shaft Bushing	.50
146.	Spool	9.00
147.	Frame	14.00
148.	Level Wind Gear	3.50
149.	Line Guide	2.00
150.	Stabilizer Bar	.75
151.	Pawl Cap	.50
152.	Left Sideplate	1.50
153.	Cast Control Bushing	.50
154.	Felt Oil Retainer	.15

Prices and specifications subject to change without notice.

FEB. 82