
www.reelschematic.com

SHIMANO

REPAIR MANUAL

Shimano American Corporation, 205 Jefferson Road
Parisippany, N.J. 07054

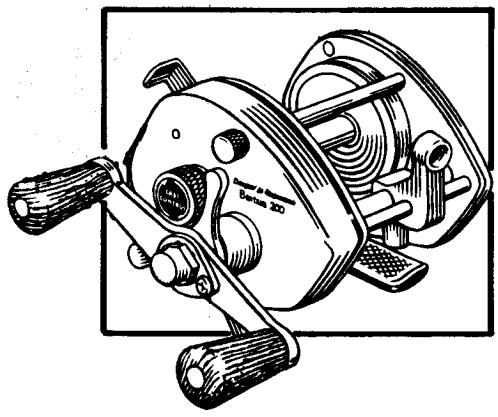

BANTAM 200

EXPLODED PARTS VIEW

PARTS LIST

PART #	DESCRIPTION	PRICE
1	Handle Nut Lock Screw	.15
2	Handle Nut	.65
3	Handle Nut Lock Plate	.30
4	Drive Shaft Retainer Screw	.15
5	Handle	6.30
6	Friction Washer	.20
7	Drag Tri-Star	2.15
8	Cast Control Cap	.95
9	Cast Control Spacer	.15
10	Cast Control Bushing	.15
11	Right Sideplate Screw	.15
13	Drive Shaft Bearing	.15
14	Drag Spring Washer	.15
15	"D" Washer	.20
16	Drag Spacer	.40
17	Pressure Plate	.15
18	Drag Washer	.25
19	Drive Gear	3.50
20	Base Drag Washer	.25
21	Antireverse Ratchet	1.80
22	Drive Shaft	4.60
23	Pinion Gear	6.70
24	Pinion Yoke Spring	.15
25	Pinion Yoke	.25
26	Drive Shaft Shim	.15
27	Retractor Spring #1	.60
28	Anti Reverse Dog	1.00
29	Retractor Spring #2	.35
30	Set Plate	16.00
31	Spool Shaft Bearing	6.50
32	Bearing Lock	.15
34	Centrifugal Brake Weights	.15
35	Left Bearing Spacer	.40
36	Right Stabilizer Bar Screw	.15
39	Level Wind Bearing (Right)	.20
41	Line Guide	2.50
42	Level Wind Pawl	1.00
43	Pawl Cap	.50
45	Level Wind Bearing (Left)	.20
46	Level Wind Retainer Screw	.15
47	Left Side Plate	1.80
48	Left Side Plate Screw	.20
49	Left Stabilizer Bar Screw	.15
60	Line Guide Pawl Spacer	.15
61	Spool	15.00
62	Frame Assembly	21.00
63	Level Wind Gear	3.75
64	Level Wind Guard	1.30
65	Line Guide Stabilizer Bar	1.35
66	Right Side Plate	10.50

Prices and specifications subject to change without notice.

*Optional - not shown in exploded view.