
www.reelschematic.com

SHIMANO

REPAIR MANUAL

Shimano American Corporation, 205 Jefferson Road
Parisippany, N.J. 07054

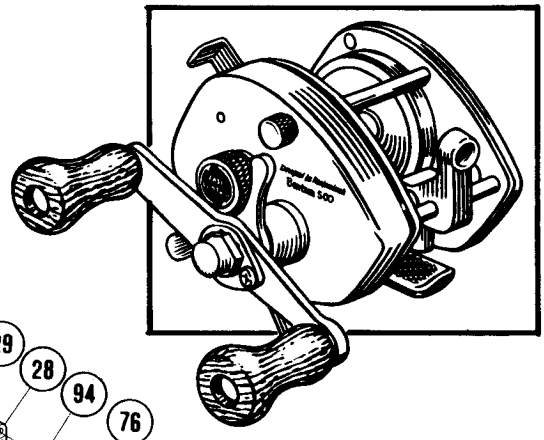

BANTAM 500

EXPLODED PARTS VIEW

PARTS LIST

PART #	DESCRIPTION	PRICE
1	Handle Nut Lock Screw	.15
3	Handle Nut Lock Plate	.30
4	Drive Shaft Retainer Screw	.15
6	Friction Washer	.20
8	Cast Control Cap	.95
9	Cast Control Spacer	.15
11	Right Sideplate Screw	.15
13	Drive Shaft Bearing	.15
14	Drag Spring Washer	.15
15	"D" Washer	.20
16	Drag Spacer	.40
24	Pinion Yoke Spring	.15
26	Drive Shaft Shim	.15
27	Retractor Spring #1	.60
28	Anti Reverse Dog	1.00
29	Retractor Spring #2	.35
34	Centrifugal Brake Weights	.15
36	Right Stabilizer Bar Screw	.15
39	Level Wind Bearing (Right)	.20
41	Line Guide	2.50
42	Level Wind Pawl	1.00
43	Pawl Cap	.50
45	Level Wind Bearing (Left)	.20
46	Level Wind Retainer Screw	.15
48	Left Side Plate Screw	.20
49	Left Stabilizer Bar Screw	.15
60	Line Guide Pawl Spacer*	.15
68	Drag Tri-Star	2.35
69	Spool Shaft Bushing	.25
71	Pressure Plate	.35
72	Drag Washer	.15
73	Drive Gear	3.50
74	Base Drag Washer	.25
75	Anti Reverse Ratchet	1.90
76	Drive Shaft	5.65
78	Pinion Yoke	.25
80	Right Spool Bearing	6.50
81	Right Bearing Lock	.15
83	Left Bearing Lock	.15
85	Left Bearing Spacer	.15
86	Left Bearing Shim	.15
88	Left Bearing Plate	6.40
89	Left Side Plate	2.00
92	Handle	6.50
94	Pinion Gear	5.00
95	Set Plate	14.75
101	Right Side Plate	12.50
102	Spool	20.00
103	Frame	17.00
104	Stabilizer Bar	1.60
105	Level Wind Guard	3.00
106	Level Wind Gear	3.75
107	Left Spool Bearing	1.20
108	Handle Nut	.75

Prices and specifications subject to change without notice.

*Optional - not shown in exploded view.