
# SHIMANO

## Bantam

## 22BTMXR

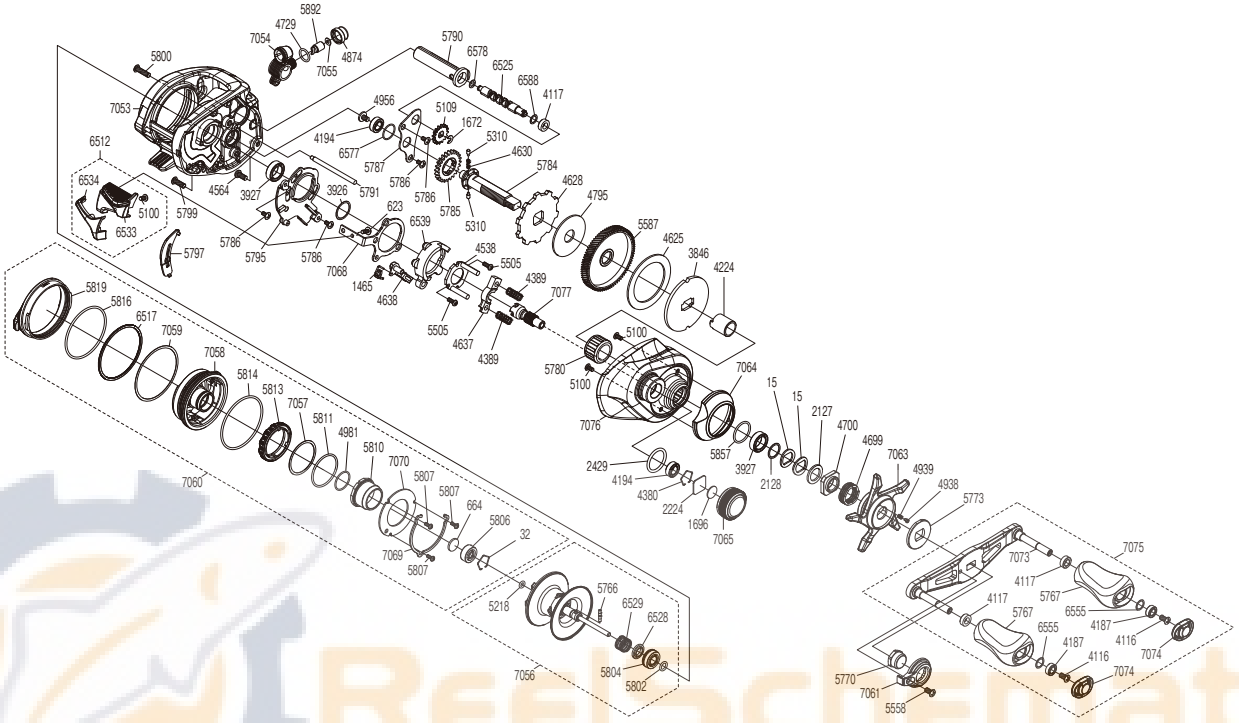


(51RL505A40X)

The (5804) Bearing, (5766) Spool clutch pin, and (5780) Roller clutch cannot be replacedby the customer.
Please note that the number of adjusting washers may not be the same as shown in the exploded views.
(Adjustment will vary with each individual product.)

| Part No. | Description | Part No. | Description | Part No. | Description |
|---|---|---|---|---|---|
| BNT0015 | Drag Spring Washer | BNT4956 | Screw | BNT5892 | Line Guide Pawl |
| BNT0032 | Bearing Retainer | BNT4981 | O Ring | BNT6512 | Clutch Button Assembly |
| BNT0623 | Screw | BNT5100 | Screw | BNT6517 | Washer |
| BNT0664 | Spacer B | BNT5109 | Idle Gear | BNT6525 | Worm Shaft |
| BNT1465 | Clutch Pawl Spring | BNT5218 | O Ring | BNT6528 | Bushing |
| BNT1672 | E Lock | BNT5310 | Idle Gear Pin | BNT6529 | Bearing Pressure Spring |
| BNT1696 | Cast Control Spacer | BNT5505 | Screw | BNT6533 | Clutch Button |
| BNT2127 | Star Drag Spacer | BNT5558 | Screw | BNT6534 | Clutch Button Cover |
| BNT2128 | Bearing Washer | BNT5587 | Drive Gear | BNT6539 | Clutch Cam |
| BNT2224 | Cast Control Spacer | BNT5766 | Spool Clutch Pin | BNT6555 | Washer |
| BNT2429 | O Ring | BNT5767 | Handle Knob | BNT6577 | O Ring |
| BNT3846 | Pressure Plate | BNT5770 | Handle Nut | BNT6578 | Washer |
| BNT3926 | Washer | BNT5773 | Star Drag Click Plate | BNT6588 | Washer |
| BNT3927 | Ball Bearing | BNT5780 | Roller Clutch Bearing | BNT7053 | Frame Assembly |
| BNT4116 | Screw | BNT5784 | Drive Shaft | BNT7054 | Line Guide Pawl Holder Assembly |
| BNT4117 | Bushing | BNT5785 | Idle Gear | BNT7055 | Washer |
| BNT4187 | Ball Bearing | BNT5786 | Screw | BNT7056 | Spool Assembly(With Bearing) |
| BNT4194 | Ball Bearing | BNT5787 | Drive Shaft Retainer | BNT7057 | Washer |
| BNT4224 | Roller Clutch Inner Tube | BNT5790 | Level Wind Guard | BNT7058 | Dial Case Assembly |
| BNT4380 | Retainer | BNT5791 | Level Wind Guide | BNT7059 | Washer |
| BNT4389 | Yoke Spring | BNT5795 | Clutch Guard | BNT7060 | Left Side Plate Assembly |
| BNT4538 | Clutch Cam Retainer | BNT5797 | Clutch Bar Guide | BNT7061 | Handle Nut Plate |
| BNT4564 | Screw | BNT5799 | Screw | BNT7063 | Star Drag |
| BNT4625 | Drag Washer | BNT5800 | Screw | BNT7064 | Clutch Button Attachment |
| BNT4628 | Anti-Reverse Ratchet | BNT5802 | O Ring | BNT7065 | Cast Control Cap |
| BNT4630 | Idle Gear Spring | BNT5804 | Ball Bearing | BNT7068 | Clutch Plate |
| BNT4637 | Yoke | BNT5806 | Ball Bearing | BNT7069 | Cam Lever Retainer |
| BNT4638 | Clutch Pawl | BNT5807 | Screw | BNT7070 | Br Dial Retainer Plate |
| BNT4699 | Star Drag Spring | BNT5810 | Brake Pipe Gear Assembly | BNT7073 | Handle Shank Assembly |
| BNT4700 | Star Drag Nut | BNT5811 | O Ring | BNT7074 | Handle Knob Seal |
| BNT4729 | O Ring | BNT5813 | Br Dial | BNT7075 | Handle Assembly |
| BNT4795 | Drag Washer | BNT5814 | O Ring | BNT7076 | Right Side Plate |
| BNT4874 | Pawl Cap | BNT5816 | O Ring | BNT7077 | Pinion Gear |
| BNT4938 | Click Pin | BNT5819 | Left Side Plate Cam Lever | | |
| BNT4939 | Click Spring | BNT5857 | O Ring | BNT4692 | B-100 Oil (accessory) |

(210816)_001