
SHIMANO

Bantam MGL S A-RB

# BTM MGL-L

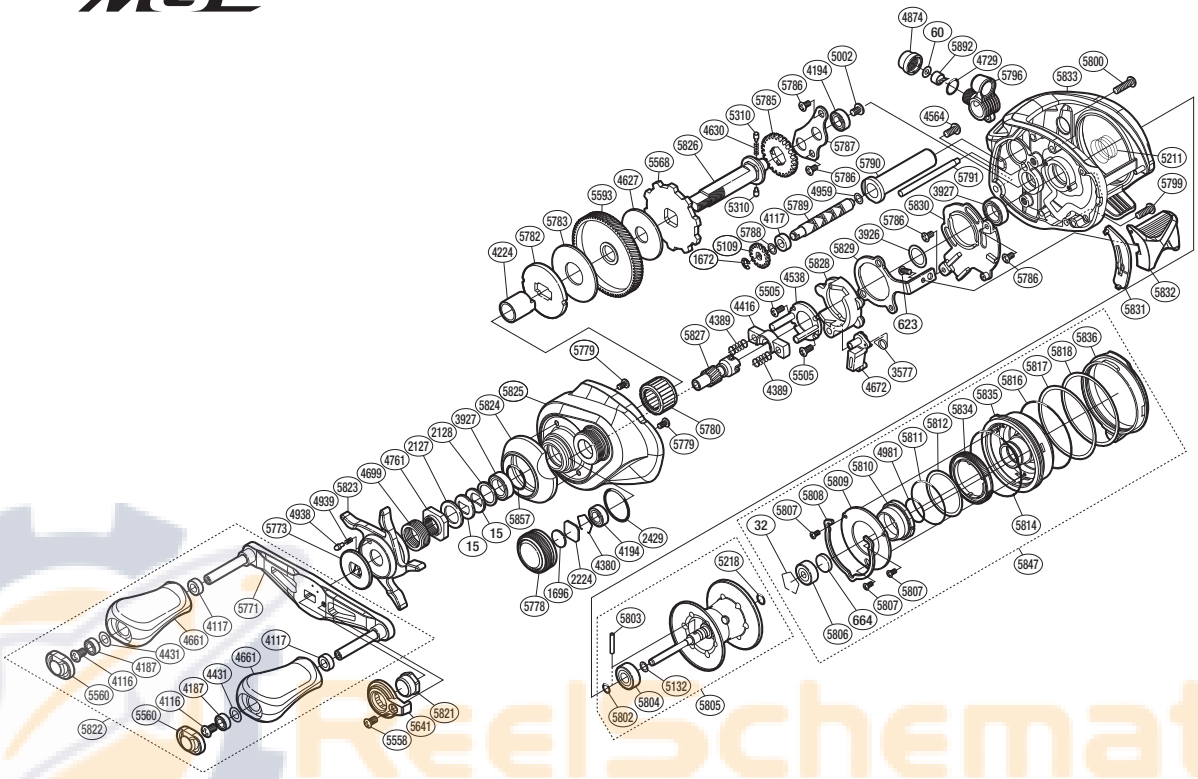

The (5804) Bearing, (5803) Spool clutch pin, and (5780) Roller clutch cannot be replaced by the customer. To replace these parts, please request after-sales service.

Please note that the number of adjusting washers may not be the same as shown in the exploded views. (Adjustment will vary with each individual product.)

(51RL101000X)

| Part No. | Description | Part No. | Description | Part No. | Description |
|---|---|---|---|---|---|
| BNT0015 | Drag Spring Washer | BNT4939 | Click Spring | BNT5804 | Ball Bearing |
| BNT0032 | Bearing Retainer | BNT4959 | Washer | BNT5805 | Spool Assembly (With Bearing) |
| BNT0060 | Spacer | BNT4981 | O Ring | BNT5806 | Ball Bearing |
| BNT0623 | Screw | BNT5002 | Screw | BNT5807 | Screw |
| BNT0664 | Spacer B | BNT5109 | Idle Gear | BNT5808 | Cam Lever Retainer |
| BNT1672 | E Lock | BNT5132 | Washer | BNT5809 | Br Dial Retainer Plate |
| BNT1696 | Cast Control Spacer | BNT5211 | Bearing Pressure Spring | BNT5810 | Brake Pipe Gear Assembly |
| BNT2127 | Star Drag Spacer | BNT5218 | O Ring | BNT5811 | O Ring |
| BNT2128 | Bearing Washer | BNT5310 | Idle Gear Pin | BNT5812 | Washer |
| BNT2224 | Spool Tension Spacer | BNT5505 | Screw | BNT5814 | O Ring |
| BNT2429 | O Ring | BNT5558 | Screw | BNT5816 | O Ring |
| BNT3577 | Clutch Pawl Spring | BNT5560 | Handle Knob Seal | BNT5817 | Washer |
| BNT3926 | Washer | BNT5568 | Anti-Reverse Ratchet | BNT5818 | Washer |
| BNT3927 | Ball Bearing | BNT5593 | Drive Gear | BNT5821 | Handle Nut |
| BNT4116 | Screw | BNT5641 | Handle Nut Plate | BNT5822 | Handle Assembly |
| BNT4117 | Bushing | BNT5771 | Handle Shank Assembly | BNT5823 | Star Drag |
| BNT4187 | Ball Bearing | BNT5773 | Star Drag Click Plate | BNT5824 | Clutch Button Attachment |
| BNT4194 | Ball Bearing | BNT5778 | Cast Control Cap | BNT5825 | Left Side Plate |
| BNT4224 | Roller Clutch Inner Tube | BNT5779 | Screw | BNT5826 | Drive Shaft |
| BNT4380 | Retainer | BNT5780 | Roller Clutch Bearing | BNT5827 | Pinion Gear |
| BNT4389 | Yoke Spring | BNT5782 | Pressure Plate | BNT5828 | Clutch Cam |
| BNT4416 | Yoke | BNT5783 | Drag Washer | BNT5829 | Clutch Plate |
| BNT4431 | Washer | BNT5785 | Idle Gear | BNT5830 | Clutch Guard |
| BNT4538 | Clutch Cam Retainer | BNT5786 | Screw | BNT5831 | Clutch Bar Guide B |
| BNT4564 | Screw | BNT5787 | Drive Shaft Retainer | BNT5832 | Clutch Lever Assembly |
| BNT4627 | Drag Washer | BNT5788 | Washer | BNT5833 | Frame Assembly |
| BNT4630 | Idle Gear Spring | BNT5789 | Worm Shaft | BNT5834 | Br Dial |
| BNT4661 | Handle Knob | BNT5790 | Level Wind Guard | BNT5835 | Brake Case Assembly |
| BNT4672 | Clutch Pawl | BNT5791 | Level Wind Guide | BNT5836 | Right Side Plate Cam Lever |
| BNT4699 | Star Drag Spring | BNT5796 | Line Guide Pawl Holder Assembly | BNT5847 | Right Side Plate Assembly |
| BNT4729 | O Ring | BNT5799 | Screw | BNT5857 | O Ring |
| BNT4761 | Star Drag Nut | BNT5800 | Screw | BNT5892 | Line Guide Pawl |
| BNT4874 | Pawl Cap | BNT5802 | O Ring | | |
| BNT4938 | Click Pin | BNT5803 | Spool Clutch Pin | BNT4692 | B-100 Oil (accessory) |

(180312)_006