
SHIMANO

Bantam

22BTMXL

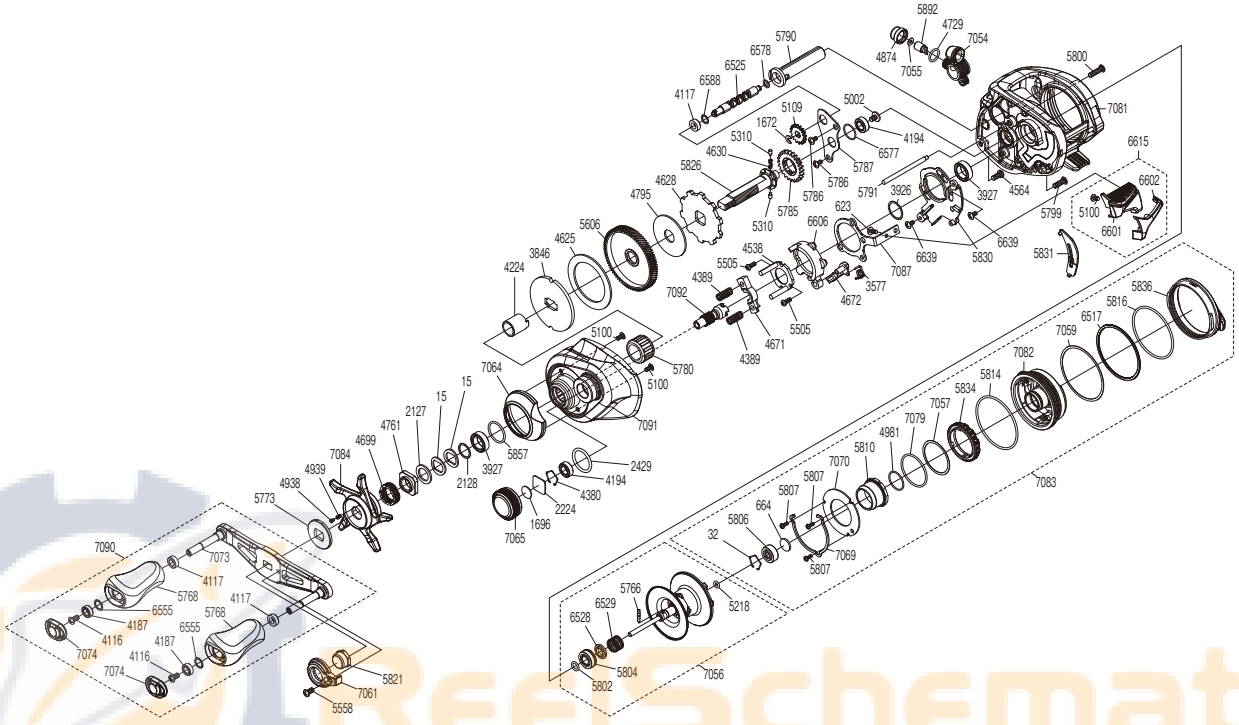

(51RL506A41X)

The (5804) Bearing, (5766) Spool clutch pin, and (5780) Roller clutch cannot be replacedby the customer.
Please note that the number of adjusting washers may not be the same as shown in the exploded views.
(Adjustment will vary with each individual product.)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0015	Drag Spring Washer	BNT5002	Screw	BNT6528	Bushing
BNT0032	Bearing Retainer	BNT5100	Screw	BNT6529	Bearing Pressure Spring
BNT0623	Screw	BNT5109	Idle Gear	BNT6555	Washer
BNT0664	Spacer B	BNT5218	O Ring	BNT6577	O Ring
BNT1672	E Lock	BNT5310	Idle Gear Pin	BNT6578	Washer
BNT1696	Cast Control Spacer	BNT5505	Screw	BNT6588	Washer
BNT2127	Star Drag Spacer	BNT5558	Screw	BNT6601	Clutch Button
BNT2128	Bearing Washer	BNT5606	Drive Gear	BNT6602	Clutch Button Cover
BNT2224	Cast Control Spacer	BNT5766	Spool Clutch Pin	BNT6606	Clutch Cam
BNT2429	O Ring	BNT5768	Handle Knob	BNT6615	Clutch Button Assembly
BNT3577	Clutch Pawl Spring	BNT5773	Star Drag Click Plate	BNT6639	Screw
BNT3846	Pressure Plate	BNT5780	Roller Clutch Bearing	BNT7054	Line Guide Pawl Holder Assembly
BNT3926	Washer	BNT5785	Idle Gear	BNT7055	Washer
BNT3927	Ball Bearing	BNT5786	Screw	BNT7056	Spool Assembly(With Bearing)
BNT4116	Screw	BNT5787	Drive Shaft Retainer	BNT7057	Washer
BNT4117	Bushing	BNT5790	Level Wind Guard	BNT7059	Washer
BNT4187	Ball Bearing	BNT5791	Level Wind Guide	BNT7061	Handle Nut Plate
BNT4194	Ball Bearing	BNT5799	Screw	BNT7064	Clutch Button Attachment
BNT4224	Roller Clutch Inner Tube	BNT5800	Screw	BNT7065	Cast Control Cap
BNT4380	Retainer	BNT5802	O Ring	BNT7069	Cam Lever Retainer
BNT4389	Yoke Spring	BNT5804	Ball Bearing	BNT7070	Br Dial Retainer Plate
BNT4538	Clutch Cam Retainer	BNT5806	Ball Bearing	BNT7073	Handle Shank Assembly
BNT4564	Screw	BNT5807	Screw	BNT7074	Handle Knob Seal
BNT4625	Drag Washer	BNT5810	Brake Pipe Gear Assembly	BNT7079	O Ring
BNT4628	Anti-Reverse Ratchet	BNT5814	O Ring	BNT7081	Frame Assembly
BNT4630	Idle Gear Spring	BNT5816	O Ring	BNT7082	Dial Case Assembly
BNT4671	Yoke	BNT5821	Handle Nut	BNT7083	Right Side Plate Assembly
BNT4672	Clutch Pawl	BNT5826	Drive Shaft	BNT7084	Star Drag
BNT4699	Star Drag Spring	BNT5830	Clutch Guard	BNT7087	Clutch Plate
BNT4729	O Ring	BNT5831	Clutch Bar Guide	BNT7090	Handle Assembly
BNT4761	Star Drag Nut	BNT5834	Br Dial	BNT7091	Left Side Plate
BNT4795	Drag Washer	BNT5836	Right Side Plate Cam Lever	BNT7092	Pinion Gear
BNT4874	Pawl Cap	BNT5857	O Ring		
BNT4938	Click Pin	BNT5892	Line Guide Pawl		
BNT4939	Click Spring	BNT6517	Washer		
BNT4981	O Ring	BNT6525	Worm Shaft	BNT4692	B-100 Oil (accessory)

(211130)_001