
www.reelschematic.com

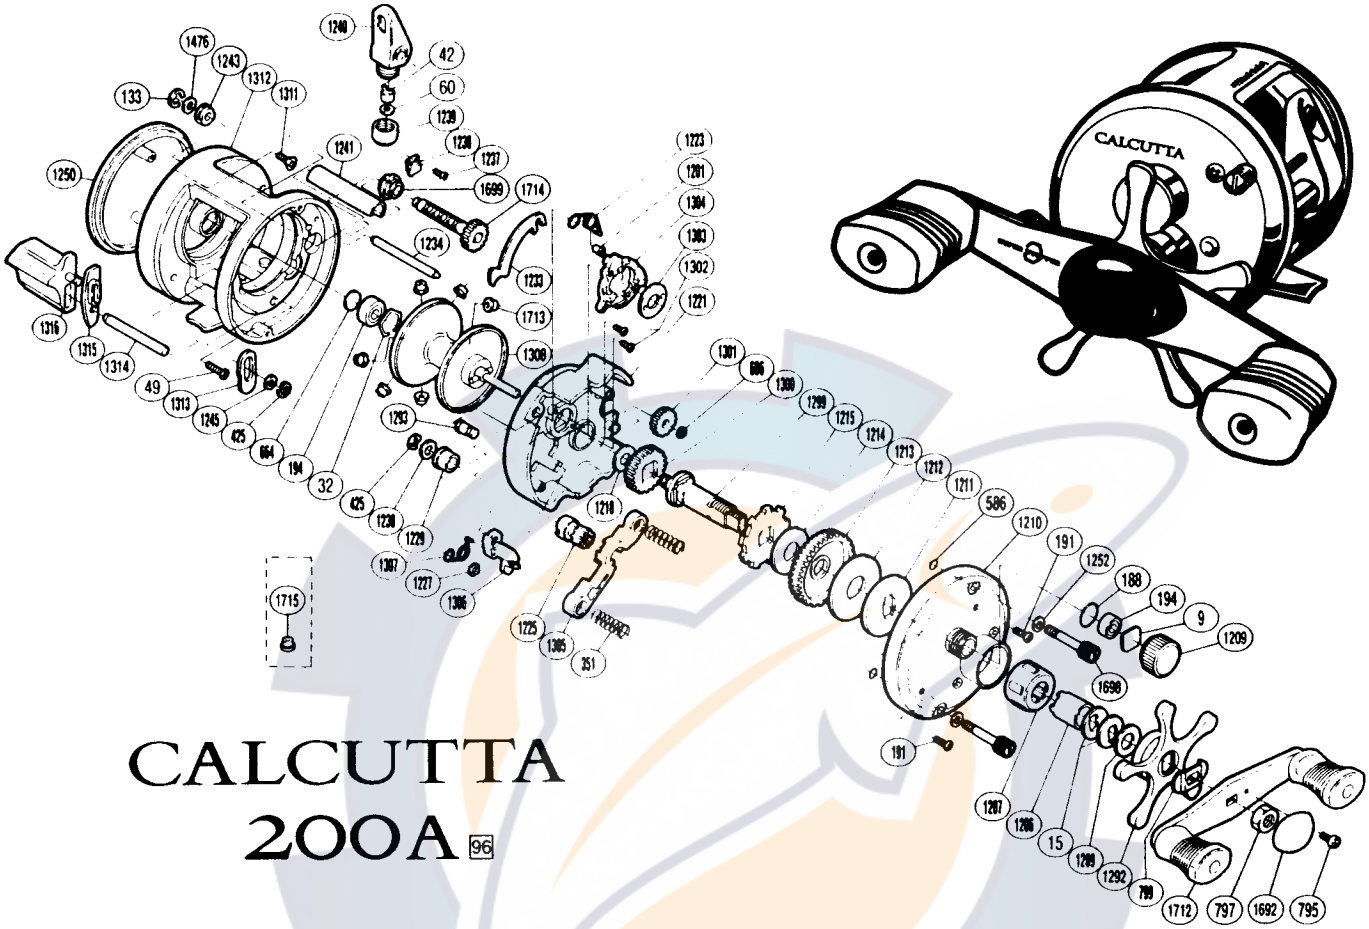

CALCUTTA 200A 96

CT200A

Part #	Description	Part #	Description	Part #	Description
BNT0009	Cast Control Spacer	BNT1213	Drive Gear	BNT1300	Idle Gear (A)
BNT0015	Drag Spring Washer	BNT1214	Drag Washer (A)	BNT1301	Idle Gear (B)
BNT0032	Bearing Retainer	BNT1215	Anti-Reverse Ratchet	BNT1302	Clutch Cam Screw
BNT0042	Line Guide Pawl	BNT1218	Idle Gear (A) Spacer	BNT1303	Clutch Cam Retainer
BNT0049	Left Side Plate Screw	BNT1221	Set Plate	BNT1304	Clutch Cam
BNT0060	Spacer (optional)	BNT1223	Retractor Spring	BNT1305	Yoke
BNT0133	Worm Shaft Retainer	BNT1225	Pinion Gear	BNT1306	Clutch Pawl
BNT0188	"O" Ring	BNT1227	Clutch Pawl Spring Retainer	BNT1307	Clutch Pawl Spring
BNT0191	Right Side Plate Screw	BNT1229	Drive Shaft Bushing	BNT1308	Spool Assembly
BNT0194	Ball Bearing	BNT1230	Drive Shaft Spacer	BNT1311	Left Side Plate Screw
BNT0351	Yoke Spring	BNT1233	Clutch Plate	BNT1312	One-Piece Frame
BNT0425	"E" Lock	BNT1234	Level Wind Guide	BNT1313	Clutch Bar Guide (A)
BNT0586	Bolt Retainer	BNT1237	Worm Bushing (A) Retainer Screw	BNT1314	Clutch Bar Support
BNT0664	Spacer (B)	BNT1238	Worm Bushing (A) Retainer	BNT1315	Clutch Bar Guide (B)
BNT0686	Idle Gear (B) Retainer	BNT1239	Pawl Cap	BNT1316	Quick-Fire II Clutch Bar
BNT0795	Handle Nut Plate Screw	BNT1240	Line Guide	BNT1476	Worm Shaft Spacer
BNT0797	Handle Nut	BNT1241	Level Wind Guard	BNT1692	Handle Nut Plate
BNT0799	Friction Washer	BNT1243	Worm Bushing (B)	BNT1698	Right Side Plate Bolt
BNT1201	Retractor Spring Collar	BNT1245	Clutch Bar Support Spacer	BNT1699	Worm Bushing (A)
BNT1206	Roller Clutch Inner Tube	BNT1250	Left Side Plate	BNT1712	Handle Assembly
BNT1207	Roller Clutch Bearing	BNT1252	Right Side Plate Bolt Washer	BNT1713	Brake Collar (green)
BNT1209	Cast Control Cap	BNT1289	Star Drag Spacer	BNT1714	Worm Shaft
BNT1210	Right Side Plate	BNT1292	Star Drag		
BNT1211	Key Washer	BNT1293	Retractor Spring Pin		
BNT1212	Drag Washer (C)	BNT1299	Drive Shaft	BNT1715	Brake Collar (red)