
SHIMANO

# CALCUTTA CONQUEST S A-RB

# CTCQ-300

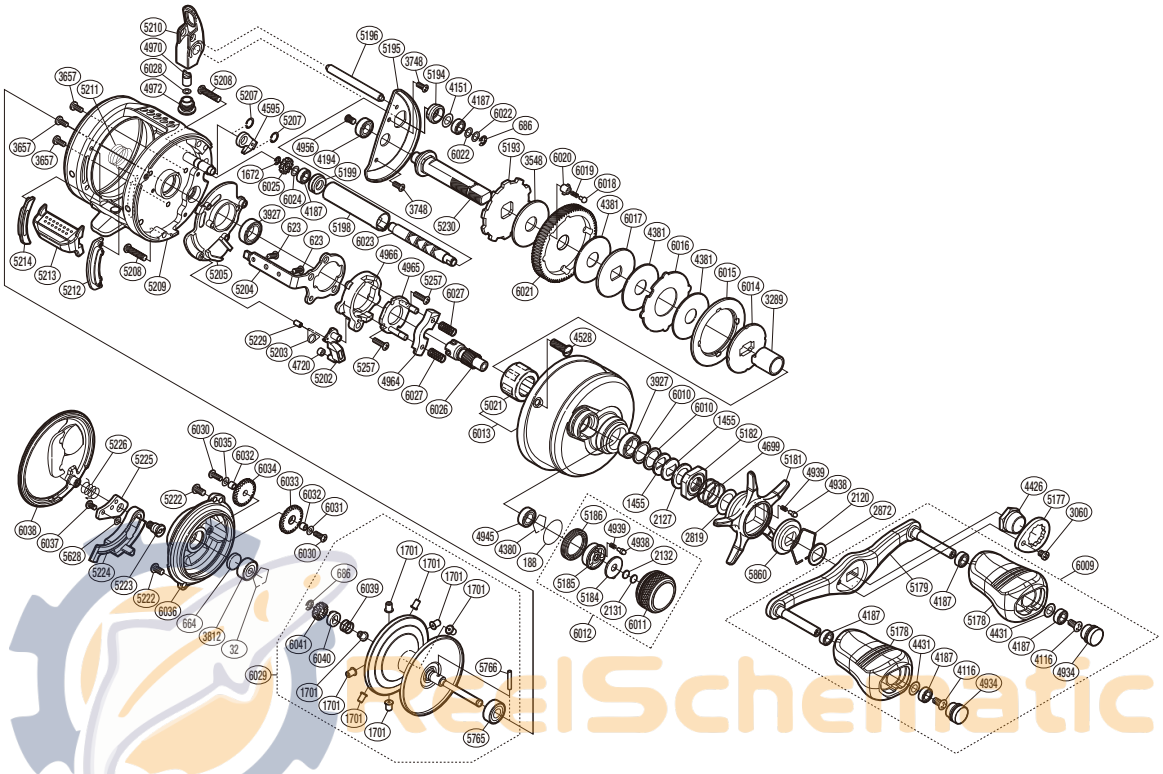

The (5765) Bearing, (5766) Spool clutch pin, and (5021) Roller clutch cannot be replacedby the customer.
To replace these parts, please request after-sales service.
Please note that the number of adjusting washers may not be the same as shown in the exploded views.
(51RL090300X) (Adjustment will vary with each individual product.)

| Part No. | Description | Part No. | Description | Part No. | Description |
|---|---|---|---|---|---|
| BNT0032 | Bearing Retainer | BNT4965 | Clutch Cam Retainer | BNT5628 | Washer |
| BNT0188 | O Ring | BNT4966 | Clutch Cam | BNT5765 | Ball Bearing |
| BNT0623 | Screw | BNT4970 | Line Guide Pawl | BNT5766 | Spool Clutch Pin |
| BNT0664 | Spacer B | BNT4972 | Pawl Cap | BNT5860 | Star Drag Click Plate |
| BNT0686 | E Lock | BNT5021 | Roller Clutch Bearing | BNT6009 | Handle Assembly |
| BNT1455 | Drag Spring Washer (H) | BNT5177 | Handle Nut Plate | BNT6010 | Washer |
| BNT1672 | E Lock | BNT5178 | Handle Knob | BNT6011 | Cast Control Cap |
| BNT1701 | Brake Collar (Gray) | BNT5179 | Handle Shank Assembly | BNT6012 | Cast Control Cap Assembly |
| BNT2120 | Click Plate Retainer | BNT5181 | Star Drag | BNT6013 | Right Side Plate Assembly |
| BNT2127 | Star Drag Spacer | BNT5182 | Star Drag Nut | BNT6014 | Pressure Plate |
| BNT2131 | Spool Tension Spacer B | BNT5184 | Cast Control Click Plate | BNT6015 | Drag Click Ratchet |
| BNT2132 | Spool Tension Spacer A | BNT5185 | Click Pin Holder | BNT6016 | Eared Washer |
| BNT2819 | Washer | BNT5186 | Cast Control Click Holder | BNT6017 | Drag Washer |
| BNT2872 | Friction Washer | BNT5193 | Anti-Reverse Ratchet | BNT6018 | Drag Click |
| BNT3060 | Screw | BNT5194 | Worm Bushing A | BNT6019 | Click Spring |
| BNT3289 | Roller Clutch Inner Tube | BNT5195 | Drive Shaft Retainer | BNT6020 | Drag Click Pin Holder |
| BNT3548 | Drag Washer | BNT5196 | Level Wind Guide | BNT6021 | Drive Gear |
| BNT3657 | Screw | BNT5198 | Level Wind Guard | BNT6022 | Washer |
| BNT3748 | Screw | BNT5199 | Worm Bushing B | BNT6023 | Worm Shaft |
| BNT3812 | Ball Bearing | BNT5202 | Clutch Pawl | BNT6024 | Washer |
| BNT3927 | Ball Bearing | BNT5203 | Clutch Pawl Spring | BNT6025 | Idle Gear C |
| BNT4116 | Screw | BNT5204 | Clutch Plate | BNT6026 | Pinion Gear |
| BNT4151 | Washer | BNT5205 | Clutch Guard | BNT6027 | Yoke Spring |
| BNT4187 | Ball Bearing | BNT5207 | C Lock | BNT6028 | Washer |
| BNT4194 | Ball Bearing | BNT5208 | Screw | BNT6029 | Spool Assembly |
| BNT4380 | Retainer | BNT5209 | Frame Assembly | BNT6030 | Screw |
| BNT4381 | Drag Washer | BNT5210 | Line Guide Assembly | BNT6031 | Washer |
| BNT4426 | Handle Nut | BNT5211 | Bearing Pressure Spring | BNT6032 | Idle Gear B Support |
| BNT4431 | Washer | BNT5212 | Clutch Bar Guide B | BNT6033 | Idle Gear B |
| BNT4528 | Screw | BNT5213 | Quick-Fire Ii Clutch Bar | BNT6034 | Idle Gear D |
| BNT4595 | Anti-Reverse Pawl Assembly | BNT5214 | Clutch Bar Guide A | BNT6035 | Washer |
| BNT4699 | Star Drag Spring | BNT5222 | Screw | BNT6036 | Brake Case Assembly |
| BNT4720 | Clutch Pawl Bushing | BNT5223 | B Side Plate Insert | BNT6037 | Screw |
| BNT4934 | Handle Knob Seal | BNT5224 | Side Plate Cam Lever | BNT6038 | Left Side Plate Assembly |
| BNT4938 | Click Pin | BNT5225 | Damper Bush | BNT6039 | Spool Shaft Spring |
| BNT4939 | Click Spring | BNT5226 | Damper Spring | BNT6040 | Spool Shaft Cam |
| BNT4945 | Ball Bearing | BNT5229 | Clutch Pawl Spring Collar | BNT6041 | Idle Gear A |
| BNT4956 | Screw | BNT5230 | Drive Shaft | | |
| BNT4964 | Yoke | BNT5257 | Screw | BNT6042 | Brake Collar (Clear) (accessory) |