
SHIMANO

# CALCUTTA CONQUEST MD

## 23CQMD401XLH

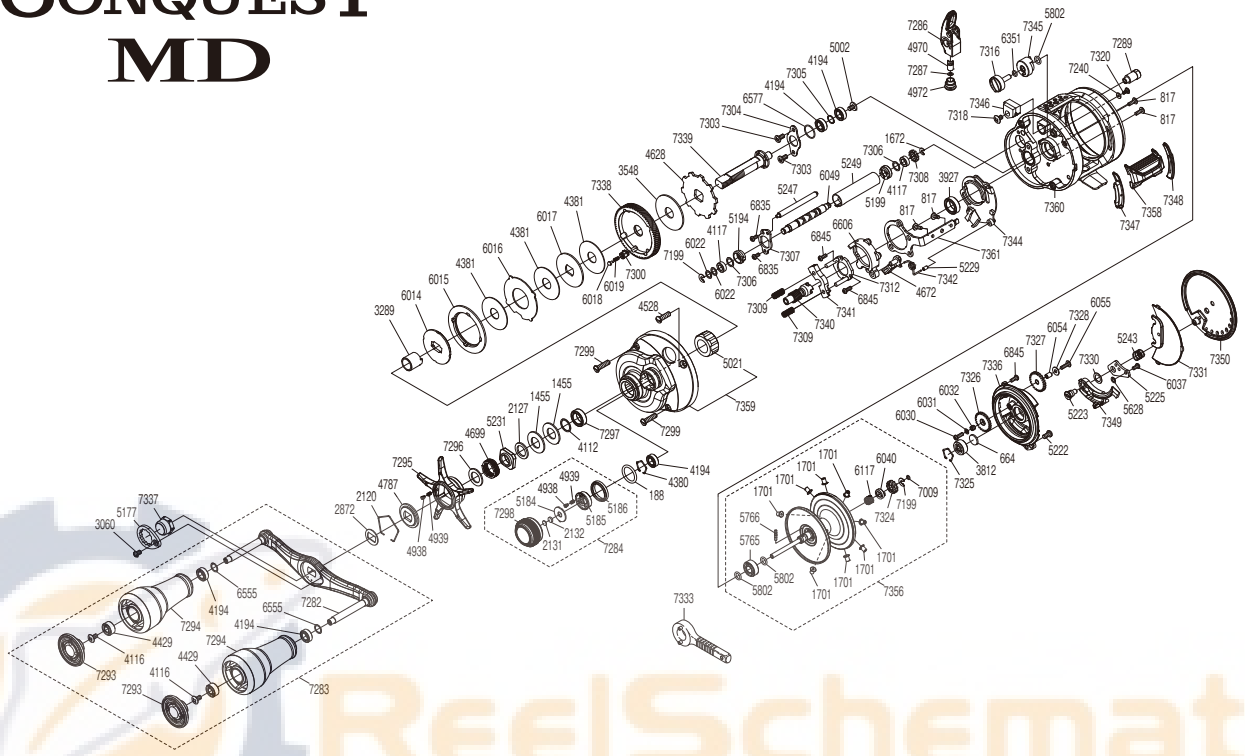

(51RL646D41X)

The (5765) Bearing, (5766) Spool clutch pin, and (5021) Roller clutch cannot be replaced by the customer.
To replace these parts, please request after-sales service.
Please note that the number of adjusting washers may not be the same as shown in the exploded views.
(Adjustment will vary with each individual product.)

| Part No. | Description | Part No. | Description | Part No. | Description |
|---|---|---|---|---|---|
| BNT0188 | O Ring | BNT5231 | Star Drag Nut | BNT7298 | Cast Control Cap |
| BNT0664 | Spacer B | BNT5243 | Damper Spring | BNT7299 | Screw |
| BNT0817 | Screw | BNT5247 | Level Wind Guide | BNT7300 | Drag Click Pin Holder |
| BNT1455 | Drag Spring Washer (H) | BNT5249 | Level Wind Guard | BNT7303 | Screw |
| BNT1672 | E Lock | BNT5628 | Washer | BNT7304 | Drive Shaft Retainer |
| BNT1701 | Brake Collar (Gray) | BNT5765 | Ball Bearing | BNT7305 | Washer |
| BNT2120 | Click Plate Retainer | BNT5766 | Spool Clutch Pin | BNT7306 | Washer |
| BNT2127 | Star Drag Spacer | BNT5802 | O Ring | BNT7307 | Worm Bushing Retainer |
| BNT2131 | Cast Control Spacer | BNT6014 | Pressure Plate | BNT7308 | Idle Gear C |
| BNT2132 | Cast Control Spacer | BNT6015 | Drag Click Ratchet | BNT7309 | Yoke Spring |
| BNT2872 | Drive Shaft Shield | BNT6016 | Eared Washer | BNT7312 | Clutch Cam Retainer |
| BNT3060 | Screw | BNT6017 | Drag Washer | BNT7316 | Br Dial |
| BNT3289 | Roller Clutch Inner Tube | BNT6018 | Drag Click | BNT7318 | Screw |
| BNT3548 | Drag Washer | BNT6019 | Click Spring | BNT7320 | Screw |
| BNT3812 | Ball Bearing | BNT6022 | Washer | BNT7324 | Idle Gear A |
| BNT3927 | Ball Bearing | BNT6030 | Screw | BNT7325 | Bearing Retainer |
| BNT4112 | Washer | BNT6031 | Washer | BNT7326 | Idle Gear B |
| BNT4116 | Screw | BNT6032 | Idle Gear B Support | BNT7327 | Idle Gear D |
| BNT4117 | Bushing | BNT6037 | Screw | BNT7328 | Washer |
| BNT4194 | Ball Bearing | BNT6040 | Spool Shaft Cam | BNT7330 | Washer |
| BNT4380 | Retainer | BNT6049 | Worm Shaft | BNT7331 | B Side Plate Seal |
| BNT4381 | Drag Washer | BNT6054 | Idle Gear D Support | BNT7336 | Dial Case Assembly |
| BNT4429 | Ball Bearing | BNT6055 | Screw | BNT7337 | Handle Nut |
| BNT4528 | Screw | BNT6117 | Spool Shaft Spring | BNT7338 | Drive Gear |
| BNT4628 | Anti-Reverse Ratchet | BNT6351 | O Ring | BNT7339 | Drive Shaft |
| BNT4672 | Clutch Pawl | BNT6555 | Washer | BNT7340 | Pinion Gear |
| BNT4699 | Star Drag Spring | BNT6577 | O Ring | BNT7341 | Yoke |
| BNT4787 | Star Drag Click Plate | BNT6606 | Clutch Cam | BNT7342 | Clutch Pawl Spring |
| BNT4938 | Click Pin | BNT6835 | Screw | BNT7344 | Clutch Guard |
| BNT4939 | Click Spring | BNT6845 | Screw | BNT7345 | Brake Cam |
| BNT4970 | Line Guide Pawl | BNT7009 | O Ring | BNT7346 | Brake Holder |
| BNT4972 | Pawl Cap | BNT7199 | E Lock | BNT7347 | Clutch Bar Guide B |
| BNT5002 | Screw | BNT7240 | Washer | BNT7348 | Clutch Bar Guide A |
| BNT5021 | Roller Clutch Bearing | BNT7282 | Handle Shank Assembly | BNT7349 | B Side Plate Cam Lever |
| BNT5177 | Handle Nut Plate | BNT7283 | Handle Assembly | BNT7350 | B Side Plate |
| BNT5184 | Cast Control Click Plate | BNT7284 | Cast Control Cap Assembly | BNT7356 | Spool Assembly |
| BNT5185 | Click Pin Holder | BNT7286 | Line Guide Pawl Holder Assembly | BNT7358 | Clutch Button Assembly |
| BNT5186 | Cast Control Click Holder | BNT7287 | Washer | BNT7359 | A Side Plate Assembly |
| BNT5194 | Worm Bushing A | BNT7289 | Magnet Holder Assembly | BNT7360 | Frame Assembly |
| BNT5199 | Worm Bushing B | BNT7293 | Handle Knob Seal | BNT7361 | Clutch Plate |
| BNT5222 | Screw | BNT7294 | Handle Knob | | |
| BNT5223 | B Side Plate Insert | BNT7295 | Star Drag | | |
| BNT5225 | Damper Bush | BNT7296 | Washer | | |
| BNT5229 | Clutch Pawl Spring Collar | BNT7297 | Ball Bearing | BNT7333 | Wrench (Accessory) |



ReelSchematic