
www.reelschematic.com

SHIMANO®

1991 REPAIR MANUAL

Shimano American Corporation, One Shimano Dr.
Irvine, CA 92718

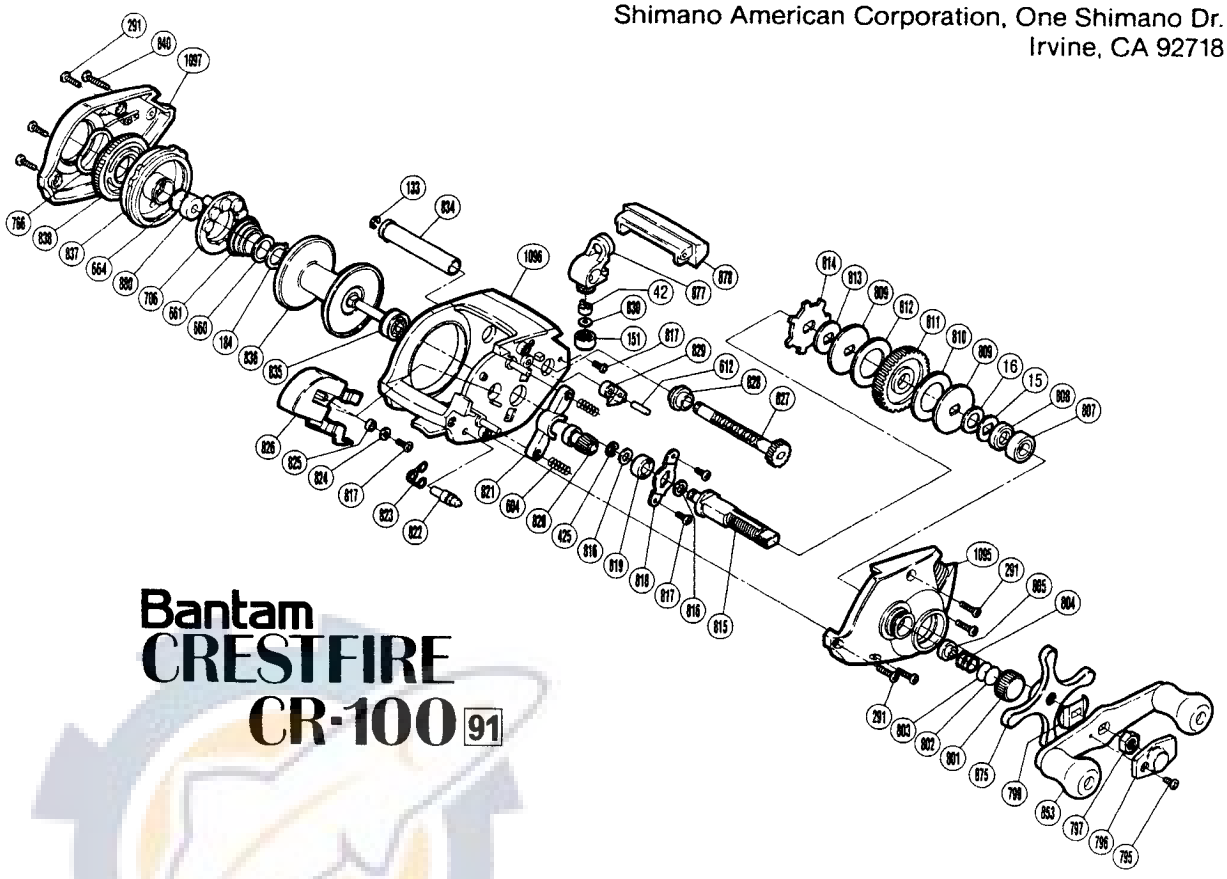

Bantam CRESTFIRE CR-100 91

TO ORDER: USE BNT PREFIX WITH PART NUMBER

PARTS LIST

BNT #	DESCRIPTION
0015	Drag Spring Washer
0016	Friction Washer (C)
0042	Line Guide Pawl
0133	Worm Shaft Retainer
0151	Pawl Cap
0184	Magnetic Retainer Lock
0291	Side Plate Screw
0425	Drive Shaft Lock
0604	Yoke Spring
0612	Anti-Reverse Pawl Pin
0660	Spring Spacer
0661	Magnet Retainer Spring
0664	Spacer (B)
0706	Magnet Retainer
0766	Dial Friction Washer
0795	Handle Nut Plate Screw
0796	Handle Nut Plate
0797	Handle Nut
0799	Friction Washer (A)
0801	Cast Control Cap
0802	Spool Tension Spacer (A)
0803	Spool Tension Spacer (A)
0804	Spool Tension Spring
0805	Spool Shaft Bushing (A)
0807	Drive Shaft Bearing
0808	Friction Washer (B)
0809	Key Washer (A)
0810	Drag Washer (A)
0811	Drive Gear
0812	Drag Washer (B)
0813	Key Washer (B)
0814	Anti-Reverse Ratchet
0815	Drive Shaft
0816	Drive Shaft Washer
0817	Multi Purpose Screw
0818	Drive Shaft Retainer
0819	Drive Shaft Bushing
0820	Pinion Gear
0821	Yoke
0822	Retractor Spring Pin
0823	Retractor Spring
0824	Yoke Plate Washer (B)
0825	Yoke Plate Washer (A)
0826	Clutch Button
0827	Worm Shaft
0828	Worm Bearing
0829	Anti-Reverse Pawl
0830	Spacer (optional)
0834	Level Wind Guard
0835	Spool Shaft Bushing (B)
0836	Spool
0837	Dial Case
0838	Magnetic Control Dial
0840	Left Side Plate Screw
0853	Handle Assembly
0875	Star Drag
0877	Line Guide
0878	Level Wind Protector
0880	Spool Shaft Bushing (C)
1095	Right Side Plate
1096	One-Piece Frame
1097	Left Side Plate

REELSCHEMATIC