www.reelschematic.com


※ If your reel has an old-type "Magnetic Control Dial" as indicated in the exploded view, please use the parts in the box below the main diagram to order these specific parts.
All other part numbers are as shown in the main exploded view

SHIMANO

1988 REPAIR MANUAL

Shimano American Corporation, One Shimano Dr.
Irvine, CA 92718

※ Please check the head of the "Magnetic Control Dial" here to see whether you have an old or new-type reel.
(e.g. old or new)

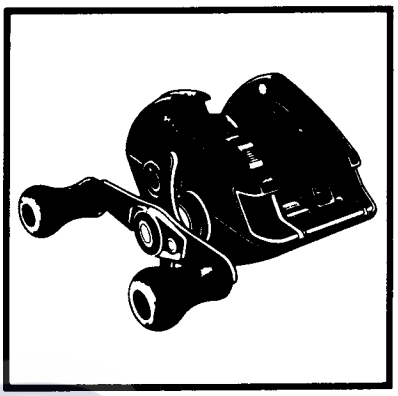

EXPLODED PARTS VIEW

Bantam Magnumlite
SpeedMaster
15508

PARTS LIST

PART #	DESCRIPTION
BNT 0002	Handle Nut
BNT 0006	Friction Washer (A)
BNT 0009	Spacer (A)
BNT 0014	Friction Washer (B)
BNT 0015	Drag Spring Washer
BNT 0016	Friction Washer (C)
BNT 0032	Bearing Retainer
BNT 0036	Stabilizer Bar Screw (A) (S)
BNT 0040	Level Wind Guard
BNT 0042	Line Guide Pawl
BNT 0044	(Line Guide) Stabilizer Bar
BNT 0045	Worm Bearing (B)
BNT 0060	Spacer (Optional)
BNT 0133	Worm Shaft Retainer
BNT 0151	Pawl Cap
BNT 0162	Drive Shaft Retainer
BNT 0184	Magnet Retainer Lock
BNT 0188	O Ring
BNT 0194	Ball Bearing
BNT 0242	Handle (Assembly)
BNT 0244	Bushing (B)
BNT 0265	Spacer (Optional)
BNT 0268	Drive Shaft Washer (A)
BNT 0277	Spacer (B)
BNT 0280	Handle Screw "B"
BNT 0285	Set Plate Screw
BNT 0291	Side Plate Screw

PART #	DESCRIPTION
BNT 0292	Stabilizer Bar Screw (B)
BNT 0311	Magnet Retainer (Assembly)
BNT 0330	Handle Nut (Lock) Plate
BNT 0335	Bearing Washer (A)
BNT 0340	Switch Spring
BNT 0341	Switch Spring Lock
BNT 0352	(Pinion) Yoke
BNT 0354	Retractor Spring
BNT 0356	Worm Bearing "A"
BNT 0357	Line Guide (Assembly)
BNT 0365	Magnetic Control Dial
BNT 0399	Retractor Guide Screw (Large Head)
BNT 0423	Yoke Spring
BNT 0458	Bushing "A"
BNT 0464	Bearing Spacer
BNT 0468	Level Wind Protector
BNT 0470	Bushing "C"
BNT 0487	Cast Control Cap
BNT 0489	Key Washer "A"
BNT 0490	Drag Washer
BNT 0494	Drive Shaft
BNT 0496	Drive Shaft Washer "C"
BNT 0533	Star Drag
BNT 0535	Anti-Reverse Switch
BNT 0538	Retractor Guide
BNT 0539	Drive Gear

PART #	DESCRIPTION
BNT 0540	Drive Shaft Washer "B"
BNT 0541	Key Washer "B"
BNT 0542	Anti-Reverse Ratchet
BNT 0543	Idle Gear
BNT 0544	Pinion Gear
BNT 0545	Anti-Reverse Pawl
BNT 0548	Worm Shaft
BNT 0561	Right Side Plate Cover
BNT 0562	Right Side Plate
BNT 0563	Clutch Button Attachment
BNT 0564	Set Plate Assembly
BNT 0565R	Spool (Right Handle)
BNT 0566	Frame
BNT 0567	Left Side Plate
BNT 0660	Spring Spacer
BNT 0661	Magnet Retainer Spring
BNT 0701	Thrust Washer Spacer (Optional)
BNT 0702	Dial O Ring
BNT 0706	Magnet Retainer
BNT 0712	Right Side Plate
BNT 0713	Spool
BNT 0714	Bushing Retainer
BNT 0715	Frame
BNT 0716	Magnet Control Dial

Prices and specifications subject to change without notice.

OCTOBER, 1987