
www.reelschematic.com

■EXPLODED PARTS VIEWS OF BSM-1550

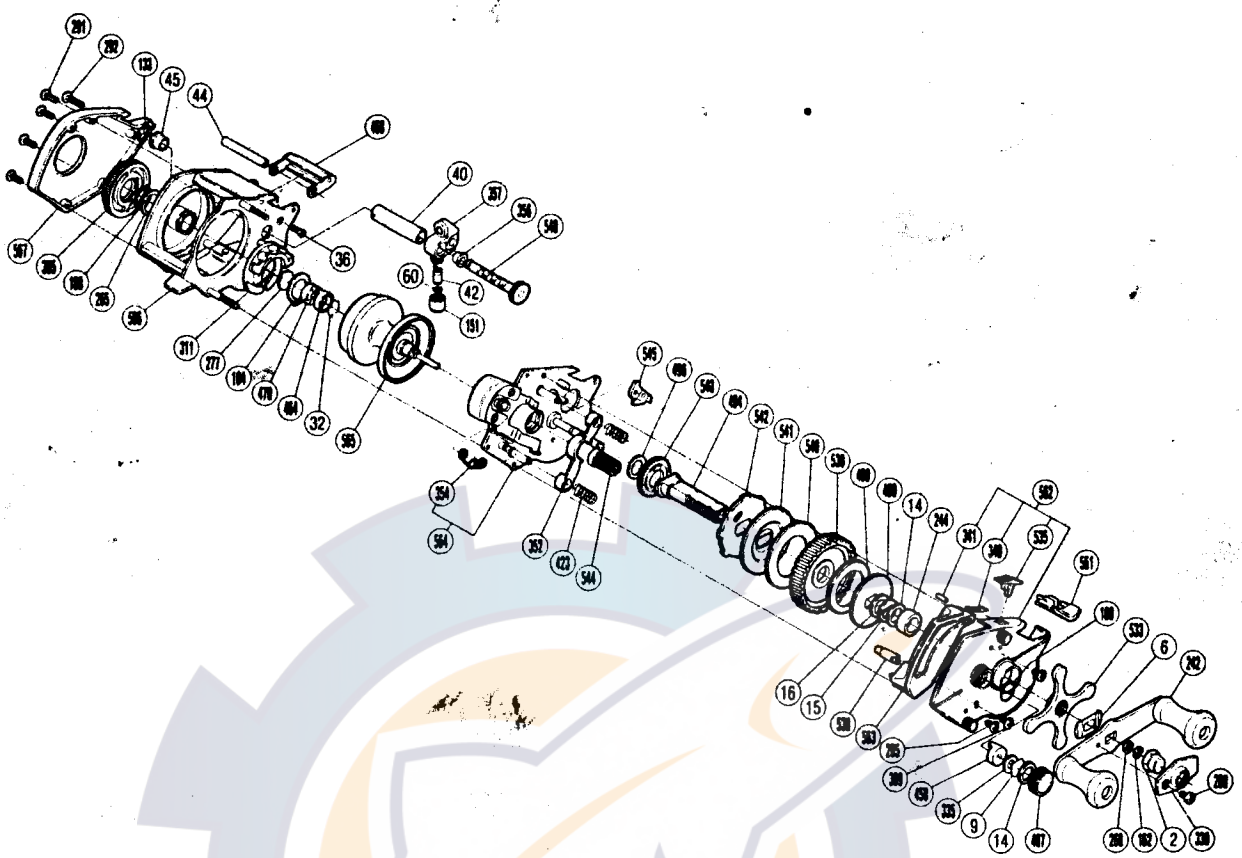

■PARTS LIST OF BSM-1550

BNT No.	PARTS NAMES
2	Handle Nut
6	Friction Washer "A"
9	Cast Control Spacer
14	Friction Washer "B"
15	Drag Spring Washer
16	Friction Washer "C"
32	Bushing Retainer
36	Stabilizer Bar Screw "A"
40	Level Wind Guard
42	Line Guide Pawl
44	Stabilizer Bar
45	Warm Bearing "B"
60	Spacer (optional)
133	Worm Shaft Retainer
151	Pawl Cap
162	Drive Shaft Retainer
184	Magnet Retainer Lock
188	O Ring
242	Handle Assembly
244	Bushing "B"
265	Spacer (optional)
268	Drive Shaft Washer "A"
277	Bushing Spacer "B"
280	Handle Nut Plate Screw
285	Right Side Plate Screw
291	Left Side Plate Screw
292	Stabilizer Bar Screw "B"
311	Magnet Retainer
330	Handle Nut Plate
335	Bushig Washer "A"
340	Switch Sprig
341	Switch Spring Lock
352	Yoke

BNT No.	PARTS NAMES
354	Retractor Spring
356	Worm Bearing "A"
357	Line Guide
365	Magnetic Control Dial
399	Retractor Guide Screw
423	Yoke Spring
458	Bushing "A"
464	Bushing Spacer
468	Level Wind Protector
470	Bushing "C"
487	Cast Control Cap
489	Key Washer "A"
490	Drag Washer
494	Drive Shaft
496	Drive Shaft Washer "C"
533	Star Drag
535	Anti-Reverse Swich
538	Retractor Guide
539	Drive Gear
540	Drive Shaft Washer "B"
541	Key Washer "B"
542	Anti-Reverse Ratchet
543	Idle Gear
544	Pinion Gear
545	Anti-Reverse Pawl
548	Worm Shaft
561	Right Side Plate Cover
562	Right Side Plate
563	Clutch Butlon Attachment
564	Set Plate Assembly
565	Spool
566	Frame
567	Left Side Plate