
www.reelschematic.com

■EXPLODED PARTS VIEWS OF BSM-2200

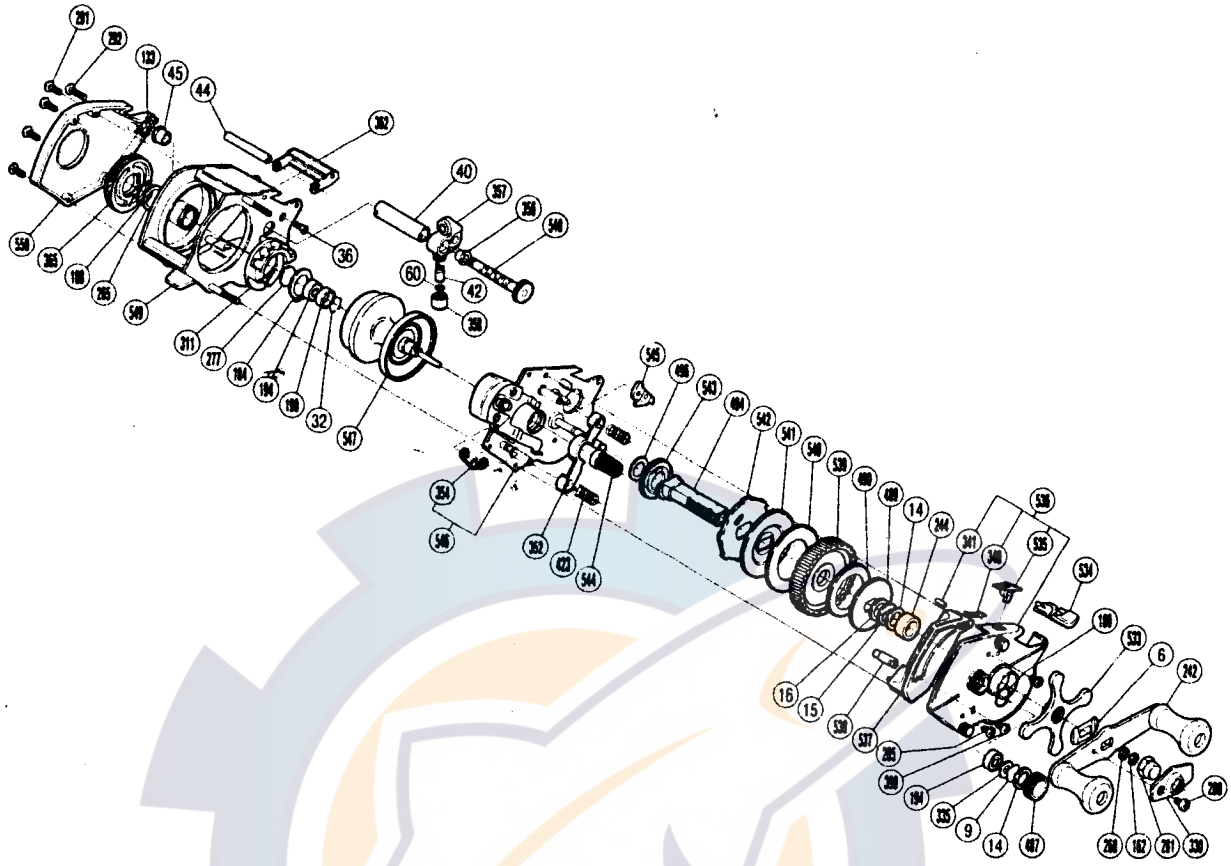

■PARTS LIST OF BSM-2200

BNT No.	PARTS NAMES
6	Friction Washer "A"
9	Cast Control Spacer
14	Friction Washer "B"
15	Drag Spring Washer
16	Friction Washer "C"
32	Bearing Retainer
36	Stabilizer Bar Screw "A"
40	Level Wind Guard
42	Line Guide Pawl
44	Stabilizer Bar
45	Worm Bearing "B"
60	Spacer(optional)
133	Worm Shaft Retainer
162	Drive Shaft Retainer
184	Magnet Retainer Lock
188	O Ring
194	Ball Bearing
198	Bearing Spacer
242	Handle Assembly
244	Bushing
265	Spacer(optional)
268	Drive Shaft Washer "A"
277	Bearing Spacer "B"
280	Handle Nut Plate Screw
281	Handle Nut
285	Right Side Plate Screw
291	Left Side Plate Screw
292	Stabilizer Bar Screw "B"
311	Magnet Retainer
330	Handle Nut Plate
335	Bearing Washer "A"
340	Switch Spring
341	Switch Spring Lock

BNT No.	PARTS NAMES
352	Yoke
354	Retractor Spring
356	Worm Bearing "A"
357	Line Guide
358	Pawl Cap
362	Level Wind Protector
365	Magnetic Control Dial
399	Retractor Guide Screw
423	Yoke Spring
487	Cast Control Cap
489	Key Washer "A"
490	Drag Washer
494	Drive Shaft
496	Drive Shaft Washer "C"
533	Star Drag
534	Right Side Plate Cover
535	Anti-Reverse Switch
536	Right Side Plate
537	Clutch Button Attachment
538	Retractor Guide
539	Drive Gear
540	Drive Shaft Washer "B"
541	Key Washer "B"
542	Anti-Reverse Ratchet
543	Idle Gear
544	Pinion Gear
545	Anti-Reverse Pawl
546	Set Plate Assembly
547	Spool
548	Worm Shaft
549	Frame
550	Left Side Plate

(610902)