
www.reelschematic.com

■EXPLODED PARTS VIEWS OF BSM-2201

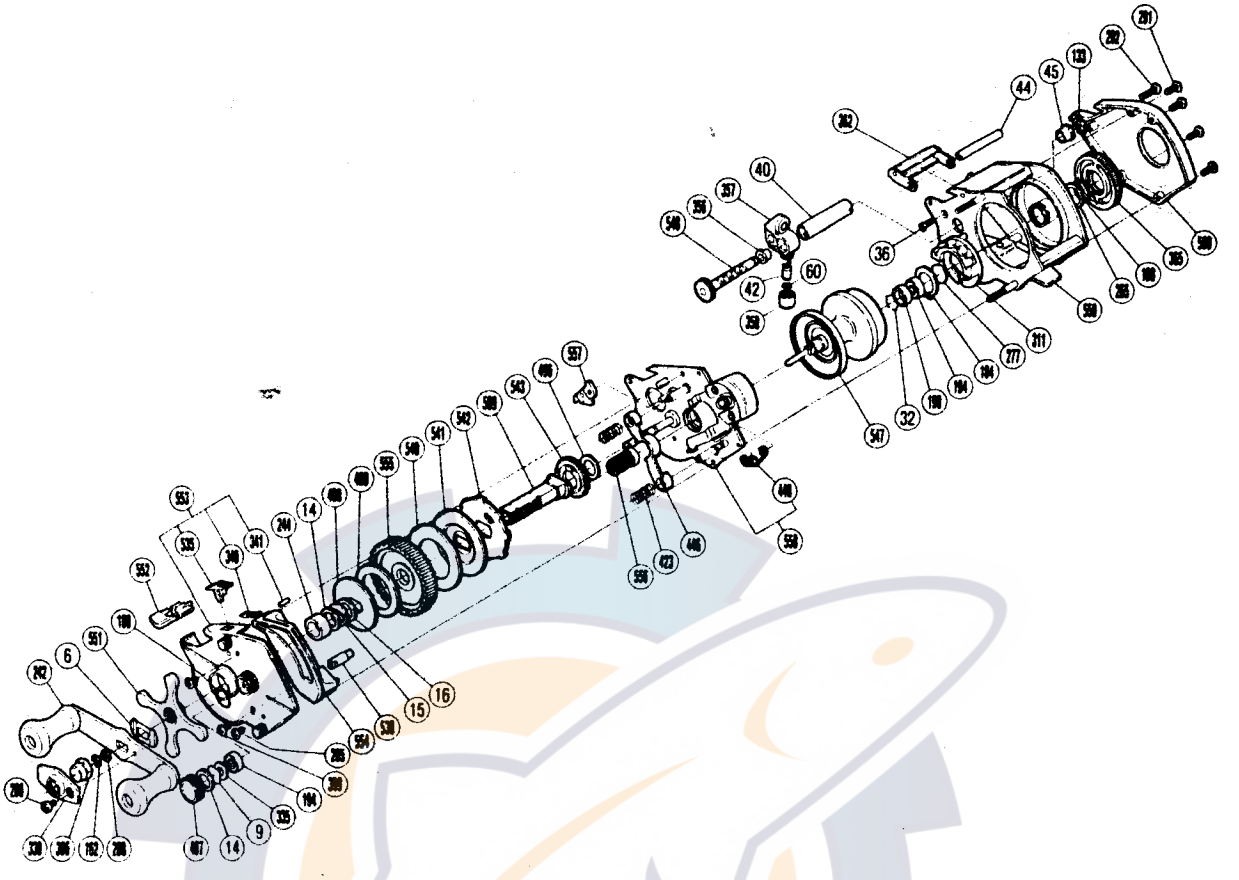

■PARTS LIST OF BSM-2201

BNT No.	PARTS NAMES
6	Friction Washer "A"
9	Cast Control Spacer
14	Friction Washer "B"
15	Drag Spring Washer
16	Friction Washer "C"
32	Bearing Retainer
36	Stabilizer Bar Screw "A"
40	Level Wind Guard
42	Line Guide Pawl
44	Stabilizer Bar
45	Worm Bearing "B"
60	Spacer(optional)
133	Worm Shaft Retainer
162	Drive Shaft Retainer
184	Magnet Retainer Lock
188	O Ring
194	Ball Bearing
198	Bearing Spacer
242	Handle Assembly
244	Bushing
265	Spacer(optional)
268	Drive Shaft Washer "A"
277	Bearing Spacer "B"
280	Handle Nut Plate Screw
285	Left Side Plate Screw
291	Right Side Plate Screw
292	Stabilizer Bar Screw "B"
306	Handle Nut
311	Magnet Retainer
330	Handle Nut Plate
335	Bearing Washer "A"
340	Switch Spring
341	Switch Spring Lock

BNT No.	PARTS NAMES
356	Worm Bearing "A"
357	Line Guide
358	Pawl Cap
362	Level Wind Protector
365	Magnetic Control Dial
399	Retractor Guide Screw
423	Yoke Spring
446	Yoke
448	Retractor Spring
487	Cast control Cap
489	Key Washer "A"
490	Drag Washer
496	Drive Shaft Washer "C"
509	Drive Shaft
535	Anti-Reverse Switch
538	Retractor Guide
540	Drive Shaft Washer "B"
541	Key Washer "B"
542	Anti-Reverse Ratchet
543	Idle Gear
547	Spool
548	Worm Shaft
551	Star Drag
552	Left Side Plate Cover
553	Left Side Plate
554	Clutch Button Attachment
555	Drive Gear
556	Pinion Gear
557	Anti-Reverse Pawl
558	Set Plate Assembly
559	Frame
560	Right Side Plate