
SHIMANO

# TIAGRA

## TI-80WA

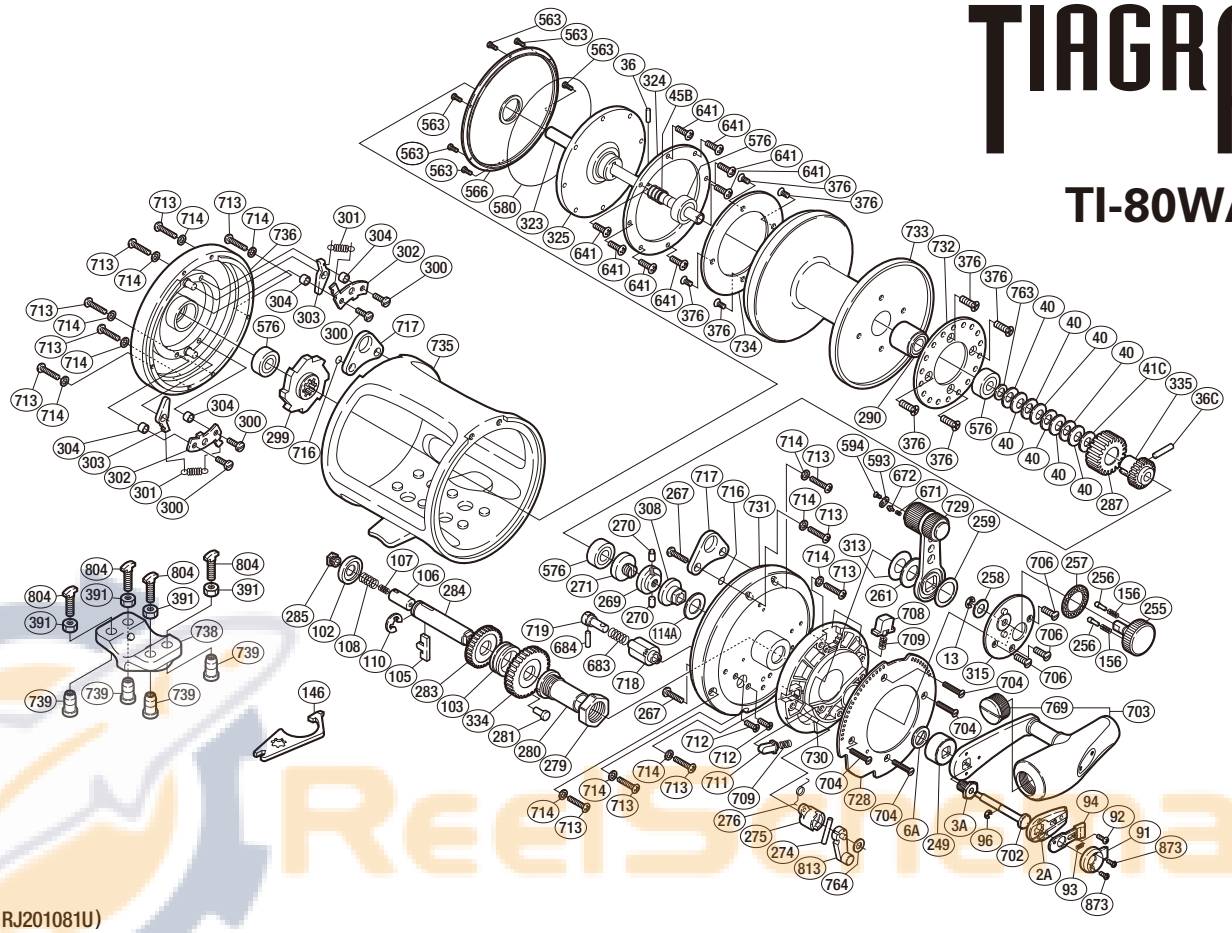

(51RJ201081U)

| # | Part No. | Description | # | Part No. | Description | # | Part No. | Description | |
|---|---|---|---|---|---|---|---|---|---|
| 0002A | 10QUC | Handle Bolt Plate | 0276 | 10F1S | Cross Pin Support Spring | 0703 | 102UN | Handle Assembly | |
| 0003A | 106XK | Handle Bolt | 0279 | 10F3V | Holder Nut | 0704 | 10PHU | Screw | |
| 0006A | 1058B | Drive Shaft Washer | 0280 | 1098D | Drive Shaft Holder | 0706 | 10PHW | Screw | |
| 0013 | 105RY | C Lock | 0281 | 10F3W | Lock Pin | 0708 | 10CCF | Strike Stop | |
| 0036 | 104L8 | Cross Pin A | 0283 | 109VN | Drive Gear B | 0709 | 10BNJ | Pressure Spring | |
| 0036C | 10MCR | Cross Pin B | 0284 | 105D6 | Drive Shaft | 0711 | 10BN9 | Free Spool Detent | |
| 0040 | 1052E | Pre-Load Spring | 0285 | 10FCB | Drive Shaft Screw | 0712 | 10MPE | Screw | |
| 0041C | 10HYB | Pre-Load Washer | 0287 | 10N9B | Pinion Gear B | 0713 | 10MGA | Screw | |
| 0045B | 10CCS | Pressure Plate Spring | 0290 | 10MHT | Piston Assembly | 0714 | 10TTY | Washer | |
| 0091 | 109XD | Push Button Shield | 0299 | 10D8T | Anti-Reverse Ratchet | 0716 | 108W7 | O Ring | |
| 0092 | 10LZ9 | Screw | 0300 | 103UX | Screw | 0717 | 10PW7 | Harness Lug | |
| 0093 | 10PWH | Slide Plate Spring | 0301 | 10CBP | Dog Spring | 0718 | 108CX | Plunger Holder | |
| 0094 | 109XC | Slide Plate | 0302 | 10KNV | Set Plate | 0719 | 108D2 | Alert Plunger | |
| 0096 | 105NE | E Lock | 0303 | 10PFY | Dog | 0728 | 10C9Y | Lever Quadrant | |
| 0102 | 10D5A | Friction Washer A | 0304 | 10KVK | Set Plate Support | 0729 | 108B7 | Drag Control Lever | |
| 0103 | 10D67 | Friction Washer B | 0308 | 10CAJ | Lever Shaft Body | 0730 | 10F3L | Right Side Plate B | |
| 0105 | 10KXG | Gear Select Cross Bar | 0313 | 108DE | Lever Thrust Ring | 0731 | 109ZG | Right Side Plate A | |
| 0106 | 10KXK | Cross Bar Stop | 0315 | 10BGY | Lever Hub Cover | 0732 | 1052K | Alert Ratchet | |
| 0107 | 109VM | Drive Shaft Spring B | 0323 | 10G2A | Main Shaft | 0733 | 1032U | Spool | |
| 0108 | 10KXP | Drive Shaft Spring | 0324 | 1060K | Drag Washer | 0734 | 10G3Y | Drag Plate | |
| 0110 | 105S0 | E Lock | 0325 | 10G4H | Pressure Plate | 0735 | 103VS | One-Piece Frame | |
| 0114A | 10EWU | Washer | 0334 | 10TUS | Drive Gear A | 0736 | 107JJ | Left Side Plate | |
| 0156 | 10TUX | Friction Shoe Spring | 0335 | 10A13 | Pinion Gear A | 0763 | 104L6 | Bearing Thrust Washer | |
| 0249 | 107QP | Drive Shaft Shield | 0376 | 10MLH | Screw | 0764 | 10EZV | Spacer | |
| 0255 | 108DV | Pre-Program Dial | 0563 | 10LVE | Screw | 0769 | 105ZE | Handle Knob Bushing | |
| 0256 | 10CWE | Dial Click Shoe | 0566 | 106AE | Cooling Shield | 0813 | 108FW | Strike Alert Lever | |
| 0257 | 10J1U | Dial Click | 0576 | 10BME | Ball Bearing | 0873 | 10PHP | Screw | |
| 0258 | 108HD | Washer | 0580 | 10EYX | O Ring | | | | |
| 0259 | 108GP | Lever Thrust Ring | 0593 | 10C3Y | Lever Click Cover | | | | |
| 0261 | 108DD | Lever Thrust Ring | 0594 | 10MGG | Screw | | | | |
| 0267 | 10PQS | Screw | 0641 | 10LVJ | Screw | 0391 | 10JCG | Rod Clamp Nut B | (Accessory) |
| 0269 | 10899 | Pre-Program Key | 0671 | 104BG | Lever Click Shoe | 0738 | 10J9R | Rod Clamp | (Accessory) |
| 0270 | 10FMU | Pre-Program Key Pin | 0672 | 10C3T | Lever Click | 0739 | 10JC4 | Rod Clamp Nut A | (Accessory) |
| 0271 | 1085K | Pre-Program Screw | 0683 | 10GUU | Click Spring | 0804 | 10J9Y | Rod Clamp Bolt | (Accessory) |
| 0274 | 10EZQ | Plunger Cross Pin B | 0684 | 10EZP | Plunger Cross Pin A | | | | |
| 0275 | 10EZK | Plunger Cross Pin Support | 0702 | 109WZ | Push Low Button Shaft | 0146 | 10TUY | Wrench | (Accessory) |

Please note that the number of adjusting washers may not be the same as shown in the exploded views.
(Adjustment will vary with each individual product.)

(230303)_005