www.reelschematic.com


2X516102

Please order by parts number,not key number
Bitte,Best:-Nr.angeben(Nicht " key " -nr.)
Veuillez indiquer le numero de la pièce(Non " key " no.)

WARRANTY QUALITY

SPINNING REEL

GB3500 / GB3500BH / GB3500H / GB3500HBH
GB4000 / GB4000BH / GB4000H / GB4000HBH

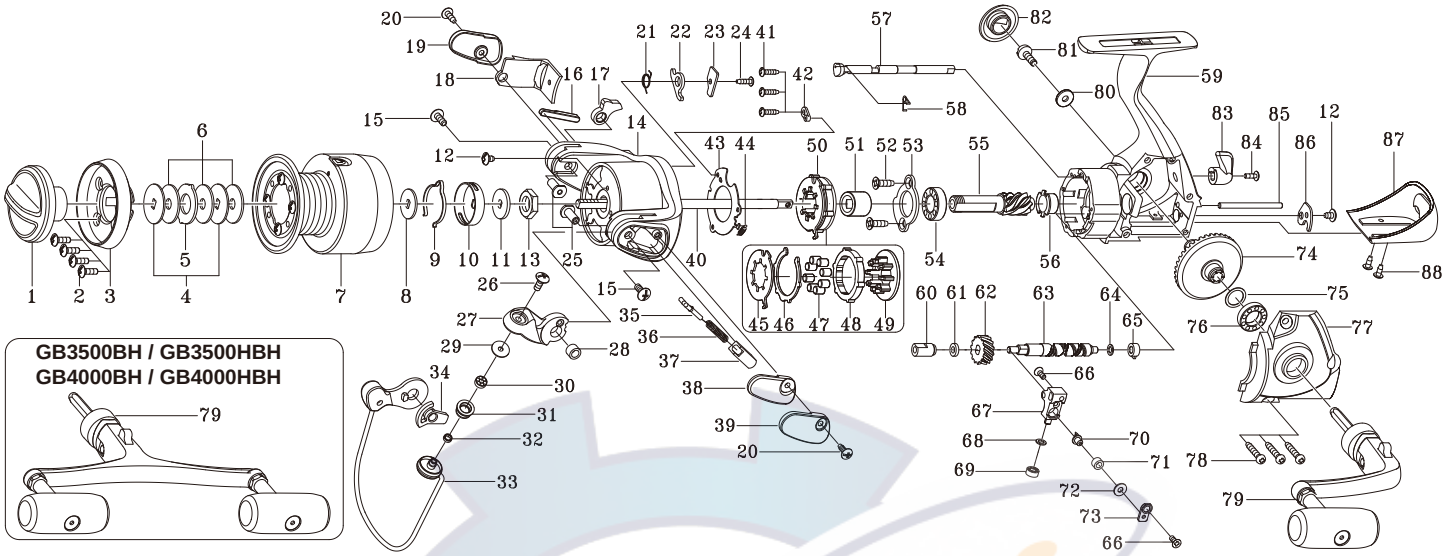

Key NO.	Parts No.	Parts name
2-7	2YT-152-01	SPOOL TOTAL ASSEMBLY
1	2YD-030-04	DRAG KNOB ASSEMBLY
2	2E2-005-03	B26M-080 SCREW
3	2S5-029-02	LIP COVER
4	2W2-005-01	KEY WASHER
5	2W3-003-01	EARED WASHER
6	2W1-052-02	050-187 WASHER
7	2YS-073-01	SPOOL ASSEMBLY
8	2W2-023-02	KEY WASHER
9	2L3-014-01	CLICK LEAF SPRING
10	2F8-013-02	CLICK LEAF SPRING HOLDER
11	2W2-024-01	KEY WASHER
12	2E1-036-01	B26-040 SCREW
13	2E3-002-01	ROTOR NUT
14	2YR-059-02	ROTOR ASSEMBLY
15	2E2-018-01	B30M-080 SCREW
16	2R5-106-01	BAIL TRIP PLATE
17	2R5-104-01	BAIL TRIP LEVER A
18	2R4-109-02	BAIL TRIP COVER SPACER
19	2F5-207-02	BAIL TRIP COVER
20	2E1-016-02	B26-080 SCREW
21	2Q3-056-01	BAIL TRIP LEVER SPRING
22	2R5-107-01	BAIL TRIP LEVER
23	2W5-037-01	SPACER
24	2E1-048-01	B22-080 SCREW
25	2E3-040-02	SHAFT NUT
26	2E2-018-01	B30M-080 SCREW
27	2R2-036-02	BAIL ARM
28	2C2-082-01	BAIL ARM BUSH
29	2C1-034-01	LINE ROLLER COLLAR
30	2Z1-012-02	407-2.5 BALL BEARING
31	2R6-020-02	LINE ROLLER
32	2C2-032-01	LINE ROLLER BUSH
33	2YL-095-02	BAIL ASSEMBLY
34	2F6-033-02	HOLDING PLATE
35	2R5-101-01	BAIL TRIP SHAFT
36	2Q1-075-01	BAIL SPRING
37	2C2-081-01	BAIL SPRING GUIDE
38	2R4-106-01	BAIL SPRING COVER SPACER
39	2F5-206-02	BAIL SPRING COVER
40	2M3-058-01	MAIN SHAFT
41	2E1-029-01	B22-090 SCREW
42	2F8-079-01	ANTI-REVERSE SPRING ANCHOR
43	2F5-189-01	ROLLER CLUTCH RETAINER
44	2Q2-016-01	SPRING
45	2F2-027-01	ANTI-REVERSE PAWL
46	2W5-036-01	WASHER
47	2Z3-003-01	ROLLER

Key NO.	Parts No.	Parts name
48	2A3-025-01	ANTI-REVERSE RATCHET
49	2F8-082-01	CAGE
50	2YZ-017-01	ONE-WAY CLUTCH BEARING ASSEMBLY
51	2A4-026-01	ONE-WAY CLUTCH INNER TUBE
52	2E1-068-01	F30-100 SCREW
53	2F5-203-01	BEARING RETAINER
54	2Z1-005-02	816-5 BALL BEARING
55	2G2-005-01	PINION GEAR
56	2C2-070-01	PINION GEAR BUSH
57	2A2-028-01	ANTI-REVERSE CAM
58	2Q3-009-01	ANTI-REVERSE SPRING
59	2YB-133-01	BODY ASSEMBLY
60	2C2-049-01	WORM SHAFT BUSH C
61	2C1-048-02	WORM SHAFT COLLAR
62	2G3-018-01	OSCILLATING GEAR
63	2M4-018-01	WORM SHAFT
64	2W1-058-02	030-050 WASHER
65	2C2-035-01	WORM SHAFT BUSH A
66	2E2-009-01	F23M-060 SCREW
67	2M1-032-01	OSCILLATING SLIDER
68	2W1-058-04	030-050 WASHER
69	2Z1-014-01	306-2.5 BALL BEARING
70	2M5-007-01	LINE GUIDE PIN
71	2C2-034-01	LINE GUIDE PIN BUSH
72	2W1-059-01	020-049 WASHER
73	2F5-181-01	OSCILLATING SLIDER COVER
74	2G1-010-01	DRIVE GEAR
75	2W1-035-00	080-105 WASHER
76	2Z1-004-01	814-3.5 BALL BEARING
77	2B2-035-02	BODY COVER
78	2E1-006-02	A30-130 SCREW
79	2YH-091-01	HANDLE TOTAL ASSEMBLY
80	2W1-004-01	029-080 WASHER
81	2E2-023-01	a30M-120 SCREW
82	2H6-010-01	HANDLE SCREW CAP
83	2A1-022-01	ANTI-REVERSE LEVER
84	2E2-013-02	B20M-060 SCREW
85	2P1-025-01	OSCILLATING SLIDER PIN
86	2F5-182-01	WORM SHAFT COVER
87	2YN-004-02	NAMEPLATE ASSEMBLY
88	2E1-020-02	B22-055 SCREW
GB3500BH	SPECIAL PARTS	
79	2YH-093-01	HANDLE TOTAL ASSEMBLY
GB3500H	SPECIAL PARTS	
2-7	2YT-152-02	SPOOL TOTAL ASSEMBLY
7	2YS-073-02	SPOOL ASSEMBLY
55	2G2-074-01	PINION GEAR
62	2G3-031-01	OSCILLATING GEAR

Key NO.	Parts No.	Parts name
74	2G1-057-01	DRIVE GEAR
GB3500HBH	SPECIAL PARTS	
2-7	2YT-152-02	SPOOL TOTAL ASSEMBLY
7	2YS-073-02	SPOOL ASSEMBLY
55	2G2-074-01	PINION GEAR
62	2G3-031-01	OSCILLATING GEAR
74	2G1-057-01	DRIVE GEAR
79	2YH-093-01	HANDLE TOTAL ASSEMBLY
GB4000	SPECIAL PARTS	
2-7	2YT-154-01	SPOOL TOTAL ASSEMBLY
7	2YS-075-01	SPOOL ASSEMBLY
14	2YR-060-02	ROTOR ASSEMBLY
18	2R4-110-02	BAIL TRIP COVER SPACER
22	2R5-108-01	BAIL TRIP LEVER
33	2YL-096-02	BAIL ASSEMBLY
59	2YB-133-02	BODY ASSEMBLY
GB4000BH	SPECIAL PARTS	
2-7	2YT-154-01	SPOOL TOTAL ASSEMBLY
7	2YS-075-01	SPOOL ASSEMBLY
14	2YR-060-02	ROTOR ASSEMBLY
18	2R4-110-02	BAIL TRIP COVER SPACER
22	2R5-108-01	BAIL TRIP LEVER
33	2YL-096-02	BAIL ASSEMBLY
59	2YB-133-02	BODY ASSEMBLY
79	2YH-093-01	HANDLE TOTAL ASSEMBLY
GB4000H	SPECIAL PARTS	
2-7	2YT-154-02	SPOOL TOTAL ASSEMBLY
7	2YS-075-02	SPOOL ASSEMBLY
14	2YR-060-02	ROTOR ASSEMBLY
18	2R4-110-02	BAIL TRIP COVER SPACER
22	2R5-108-01	BAIL TRIP LEVER
33	2YL-096-02	BAIL ASSEMBLY
55	2G2-074-01	PINION GEAR
59	2YB-133-02	BODY ASSEMBLY
62	2G3-031-01	OSCILLATING GEAR
74	2G1-057-01	DRIVE GEAR
GB4000HBH	SPECIAL PARTS	
2-7	2YT-154-02	SPOOL TOTAL ASSEMBLY
7	2YS-075-02	SPOOL ASSEMBLY
14	2YR-060-02	ROTOR ASSEMBLY
18	2R4-110-02	BAIL TRIP COVER SPACER
22	2R5-108-01	BAIL TRIP LEVER
33	2YL-096-02	BAIL ASSEMBLY
55	2G2-074-01	PINION GEAR
59	2YB-133-02	BODY ASSEMBLY
62	2G3-031-01	OSCILLATING GEAR
74	2G1-057-01	DRIVE GEAR
79	2YH-093-01	HANDLE TOTAL ASSEMBLY