
www.reelschematic.com

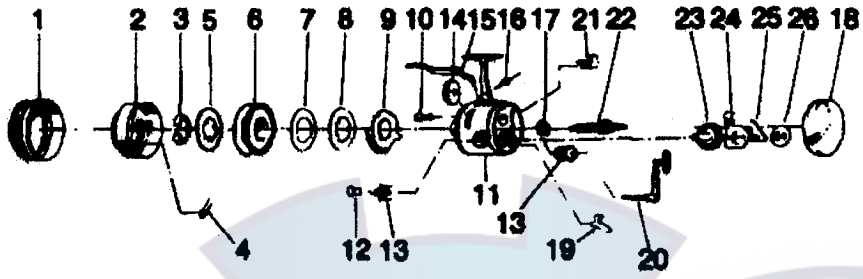

UL4 CLASSIC PARTS LIST

Key No.	Part No.	Description	Key No.	Part No.	Description
1	BE-324-1	Front Cover Assy.	15	BJ050-2	Line Release Lever
2	BE310	Spinnerhead Assy.	16	BJ126-2	Line Release Lever Screw
3	XZ034	Spool Clip			
4	AJ049	Spinnerhead Spring	17	BJ017	Center Shaft Bearing
5	BE036	Spool Lip Washer	18	BJ023-1C	Back Cover
6	BE021	Spool (Empty)	19	BJ060	Anti-Reverse Pawl
	BE321-4H	Spool w/4# H.P. Line	20	BJ318-5	Handle Assembly
	BE321-6H	Spool w/6# H.P. Line	21	BE002	Anti-Reverse Actuator
7	BJ108	Flat Drag Washer			
8	BJ040	Spool Washer (Metal)	22	BE315	Center Shaft Assembly
9	BJ027	Clutch Ring			
10	BJ054-2	Clutch Screw	23	BJ012	Crank Gear
11	BJ301-4	Body with Bearing	24	BJ014	Anti-Reverse Drag
12	BJ068	Crank Rod Nut	25	BE061	Anti-Reverse Pawl Spring
13	BJ026	Crank Bearing			
14	BJ032	Drag Wheel	26	BJ106	Anti-Reverse Washer

Should clutch ring (9) drop out while changing spool be sure to put largest flage in head of clutch screw (10) to reassemble.