Please order by parts number, not key number
Veuillez indiquer le numéro de la pièce (Non "Key" No.)

BAITCASTING REEL

FUEGO 100H-100HS-100XS

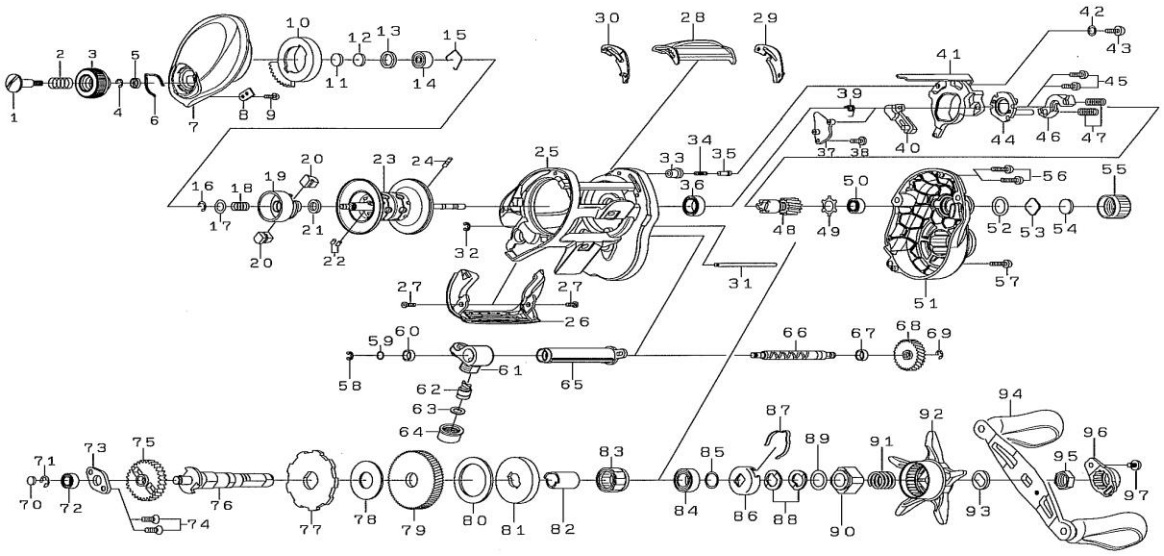

KEY NO.	PART NO.	PART NAME
1	H93-0401	SET PLT SCREW
2	E16-7101	YOKE SPRING
3	J21-3701	BRAKE ADJ KNOB
4	B33-9801	BRAKE DIAL RETAINER(A)
5	F63-7701	BRAKE DIAL WASHER
6	H66-3401	BRAKE CLICK SPRING
7	H93-0108	LEFT SIDE PLATE
8	H91-5501	BRAKE DIAL RETAINER(B)
9	G93-9301	FRONT PLT SCREW
10	H93-0501	MAGNET HOLDER
11	375-7400	SPACER(A)
12	375-7411	SPACER(B)
13	G18-5101	SPACER(C)
14	G51-1503	BALL BEARING(A)
15	F03-2201	BEARING RETAINER(A)
16-24	Z02-2586	SPOOL ASSEMBLY
25	H91-0213	FRAME
26	J28-8801	FRONT PLATE
27	H45-5402	SCREW(C)
28	H91-2401	CLUTCH LEVER
29	H91-5601	CLUTCH LEVER PLT
30	H91-5701	CLUTCH LEVER PLT
31	J28-8901	STABILIZER BAR
32	H70-4101	RETAINER(A)
33	H91-0601	COLLAR
34	H92-8801	SPRING(B)
35	J05-5201	PIN
36	B86-1704	BALL BEARING(B)
37	H91-2301	PLATE(A)
38	H29-4101	SCREW(D)
39	H45-0001	CLUTCH CAM SPRING
40	J22-1401	CLUTCH TRIP LEVER
41	H92-8701	CLUTCH CAM PLT
42	H15-9201	WASHER(A)
43	352-2501	A/R LEVER SCREW
44	H65-9101	CLUTCH CAM PLATE
45	B03-2904	CLUTCH CAM SCREW
46	H92-9001	YOKE
47	J05-5301	YOKE SPRING
48	H91-3901	PINION GEAR
49	H18-0501	BEARING RETAINER(B)
50	G43-1102	BALL BEARING(C)
51	J21-2104	RIGHT SIDE PLATE
52	B05-5201	"O"RING
53	J21-3101	SPACER(F)
54	B17-5503	CAP RUBBER WASHER
55	J28-8201	CAST CONTROL CAP
56	G04-0814	RIGHT SIDE PLATE SCREW(A)
57	G04-0801	RIGHT SIDE PLATE SCREW(B)
58	320-5901	RETAINER(B)
59	B41-1700	WASHER(B)
60	G46-9005	BALL BEARING(D)
61	J28-8301	LEVEL WIND
62	121-4212	LINE GUIDE PAWL
63	373-1300	WASHER(C)
64	F40-2801	PAWL CAP
65	J28-9001	LEVEL WIND GUARD
66	H91-1701	WORM SHAFT
67	G46-9005	BALL BEARING(E)
68	H91-0501	WORM GEAR
69	B33-9801	RETAINER(C)
70	G09-9800	WASHER(D)
71	320-8002	RETAINER(D)
72	B35-8605	BALL BEARING(F)
73	H92-8901	PLATE(B)
74	E13-4509	SCREW(F)
75	H91-2701	DRIVE SHAFT GEAR
76	H91-1601	DRIVE SHAFT
77	H92-9401	A/R RATCHET
78	J08-5101	DRIVE SHAFT WASHER (A)
79	H91-3101	DRIVE GEAR
80	H45-2602	DRAG WASHER
81	H91-3201	KEY WASHER
82	G54-5001	GEAR SHAFT COLLAR
83	G81-9801	ROLLER CLUTCH
84	B86-1704	BALL BEARING(G)
85	B55-3801	WASHER(E)
86	F02-8203	CLICK LEAF SPRING HOLDER
87	F03-2401	CLICK LEAF SPRING
88	150-8901	DRAG SPRING WASHER
89	H92-9501	WASHER(F)
90	H91-2001	NUT
91	J01-1901	SPRING(C)
92	H91-1903	STAR DRAG
93	F57-6601	HANDLE COLLAR
94	J28-8601	HANDLE ASSEMBLY
95	H72-3701	HANDLE NUT
96	J21-3501	HANDLE CAP
97	G04-0803	HANDLE SCREW

FUEGO 100HS SPECIAL PARTS

KEY NO.	PART NO.	PART NAME
16-24	Z02-2587	SPOOL ASSEMBLY
48	J00-4201	PINION GEAR
51	J21-2105	RIGHT SIDE PLATE
55	J28-8202	CAST CONTROL CAP
79	J00-4001	DRIVE GEAR

FUEGO 100XS SPECIAL PARTS

KEY NO.	PART NO.	PART NAME
16-24	Z02-2588	SPOOL ASSEMBLY
48	J00-9801	PINION GEAR
51	J21-2106	RIGHT SIDE PLATE
55	J28-8203	CAST CONTROL CAP
79	J00-9901	DRIVE GEAR