
Daiwa
COMMITTED TO TOTAL QUALITY

SPINNING REEL

GRANDWAVE 5000BR

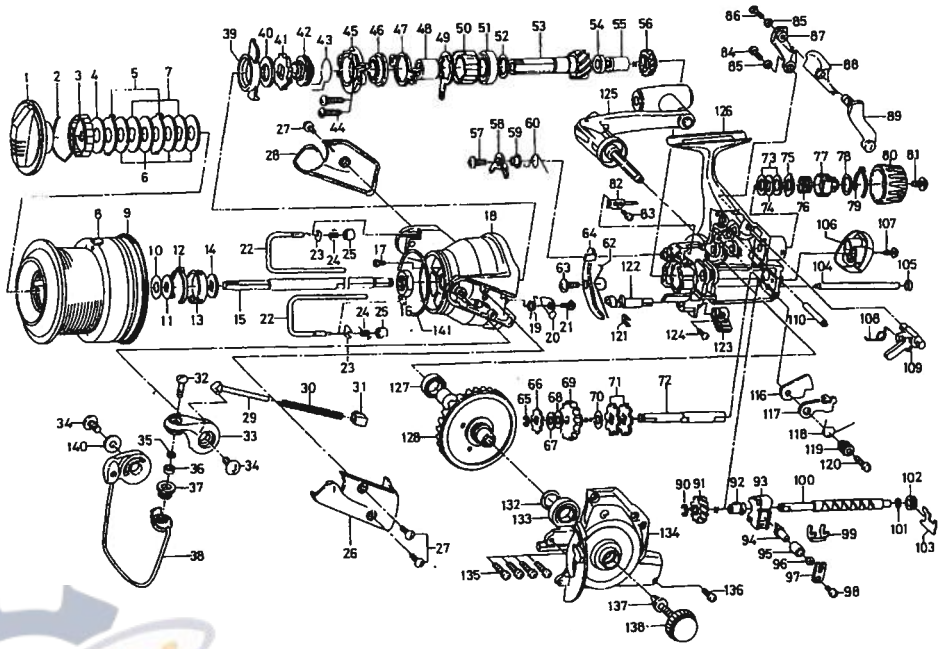


Key No.	Parts No.	Parts Name
1	G28-4701	DRAG KNOB
2	F06-2601	DRAG WASHER RET
3	G15-0201	DRAG KNOB CLICK PLT
4	F05-5401	DRAG WASHER A
5	E15-0101	EARED WASHER A
6	B36-0207	DRAG WASHER B
7	F25-8201	KEY WASHER A
2-9	G28-4501	SPOOL
9	E40-2901	O RING A
10	F05-0100	SPOOL WASHER A
11	F05-0001	SPOOL WASHER B
12	B74-7701	SPOOL CLICK LEAF SPRING
13	E12-2307	CLICK LEAF SPRING HOLDER
14	F04-9901	CLICK LEAF SPRING WASHER
15	G08-9201	MAIN SHAFT
16	B43-7609	ROTOR NUT
17	E49-2001	ROTOR NUT LOCK SCREW
18	G09-1505	ROTOR
19	G09-1601	BAIL TRIP LEVER SPRING
20	G09-1701	BAIL TRIP LEVER
21	352-2501	BAIL TRIP LEVER SCREW
22	G09-2301	LINE GUARD SHAFT
23	G09-2501	LINE GUARD RET
24	G09-2701	LINE GUARD SPRING
25	G09-2601	LINE GUARD COLLAR
26	G09-2804	BAIL SPRING COVER
27	B67-9304	BAIL SPRING COVER SCREW
28	G09-2904	BAIL HOLDER COVER
29	G09-1901	BAIL SPRING SHAFT
30	G09-2101	BAIL SPRING
31	G09-1801	BAIL SPRING HOLDER
32	G01-8601	LINE ROLLER SCREW
33	G09-2202	BAIL ARM

Key No.	Parts No.	Parts Name
34	352-1102	BAIL ARM SCREW
35	F89-7101	LINE ROLLER COLLAR
36	F28-2201	BALL BEARING A
37	G17-1302	LINE ROLLER
38	G13-1201	BAIL
39	G09-1401	A/R PAWL COLLAR A
40	G09-8901	A/R PAWL WASHER
41	280-9501	A/R RATCHET
42	G09-1201	SPRING HOLDER
43	G09-1301	A/R PAWL SPRING A
44	F12-5701	BEARING RET SCREW
45	G08-8501	BEARING RET
46	F24-0001	BALL BEARING B
47	G08-8401	ROLLER CLUTCH RET A
48	G08-8201	SPACING SLEEVE
49	G08-8301	ROLLER CLUTCH RET B
50	G31-4501	ROLLER CLUTCH
51	637-6101	BALL BEARING C
52	372-7607	BEARING WASHER
53	G13-0501	PINION GEAR
54	G09-4201	PINION GEAR COLLAR A
55	G10-7001	PINION GEAR COLLAR B
56	G08-6701	TRANSMISSION GEAR
57	F12-5701	A/R PAWL SCREW
58	G08-8901	A/R PAWL
59	F25-6501	A/R PAWL COLLAR B
60	G08-8801	A/R PAWL SPRING B
62	G16-9501	A/R PLT SPRING
63	B84-2102	A/R PLT SCREW
64	G08-8601	A/R PLT
65	320-1402	CLICK GEAR RET
66	G10-5801	CLICK GEAR
67	373-2701	CLICK GEAR WASHER A

CONTINUED ON NEXT PAGE

Please order by part number, not key number

GRANDWAVE 5000BR (Cont.)

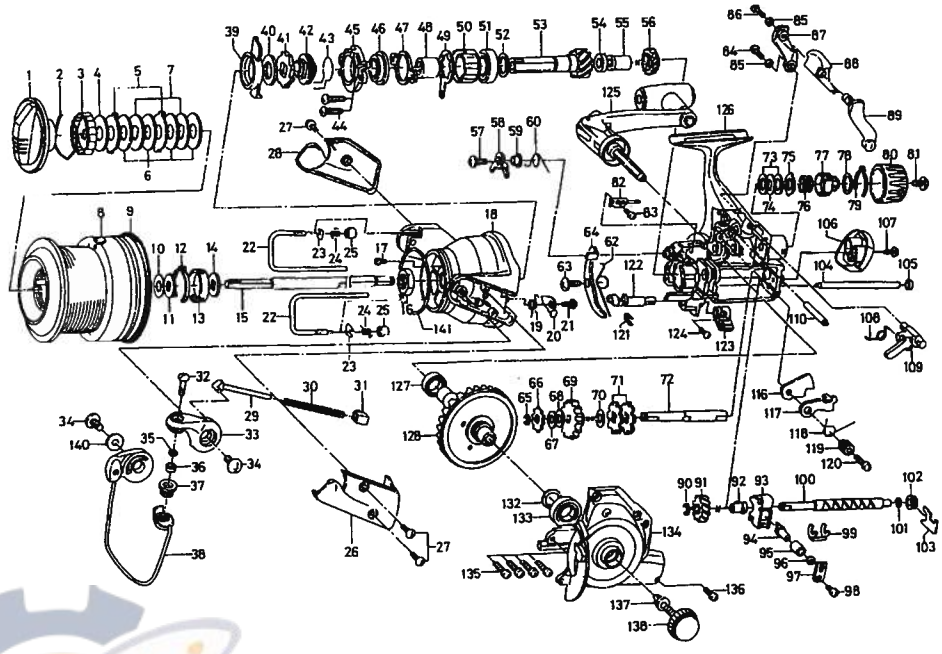

Continued from previous page

Key No.	Parts No.	Parts Name
68	375-1503	CLICK GEAR WASHER B
69	G10-5701	TENSION SHAFT GEAR
70	373-2702	TENSION SHAFT GEAR WASHER
71	G16-9601	CLUTCH RATCHET
72	G10-5501	TENSION SHAFT
73	G10-6001	TENSION SHAFT WASHER
74	G10-6101	KEY WASHER B
75	G10-6201	EARED WASHER B
76	G16-9901	TENSION SPRING
77	G10-6401	TENSION DRAG SCREW
78	G10-6501	TENSION DRAG SCREW WASHER
79	F97-7801	CLICK LEAF SPRING
80	G10-6604	TENSION CONTROL DIAL
81	E03-7801	TENSION CONTROL DIAL SCR
82	G10-5901	CLICK PAWL
83	E51-1001	CLICK PAWL SCREW
84	351-1106	CLUTCH LEVER SCREW A
85	G09-3801	CLUTCH LEVER WASHER
86	351-1101	CLUTCH LEVER SCREW B
87	G10-5001	CLUTCH LEVER A
88	G09-1105	CLUTCH LEVER BRIDGE
89	G09-1001	CLUTCH LEVER B
90	G17-4001	WORM SHAFT RET A
91	G10-6802	WORM SHAFT GEAR
92	E39-3501	WORM SHAFT BUSH
93	G08-9001	OSC SLIDER
94	E26-4101	OSC PAWL
95	E26-4201	OSC PAWL COLLAR
96	375-0801	OSC PAWL WASHER
97	G11-4401	OSC PAWL RET
98	351-1008	OSC SLIDER COVER SCREW
99	G15-0401	OSC SLIDER COVER
100	G10-6702	WORM SHAFT

Key No.	Parts No.	Parts Name
101	B41-1701	WORM SHAFT WASHER
102	E43-6101	WORM SHAFT COLLAR
103	G10-6901	WORM SHAFT RET B
104	G08-9101	GUIDE SHAFT
105	F65-2201	GUIDE SHAFT COLLAR
106	G09-0804	REAR COVER
107	E24-8101	REAR COVER SCREW
108	G10-4901	CLUTCH CAM SPRING
109	G10-4801	CLUTCH CAM
110	G08-9401	CLUTCH TRIP LEVER PIN
116	G10-5101	CLUTCH PLT A
117	G10-5201	CLUTCH PLT B
118	G10-5301	CLUTCH PLT SPRING
119	G17-0601	CLUTCH PLT COLLAR
120	B83-5002	CLUTCH PLT SCREW
121	G10-2001	A/R CAM SPRING
122	G10-4701	A/R CAM
123	G10-0003	A/R LEVER
124	B64-6604	A/R LEVER SCREW
125	G28-5501	HANDLE
126	G10-5408	BODY
127	E45-3901	BALL BEARING D
128	G08-9801	DRIVE GEAR
132	371-2824	DRIVE GEAR WASHER
133	B54-6001	BALL BEARING E
134	G28-7001	SIDE COVER
135	B00-9701	SIDE COVER SCREW A
136	E13-0501	SIDE COVER SCREW B
137	F40-9001	HANDLE COLLAR
138	L00-9104	HANDLE LOCK SCREW
140	B40-3104	BAIL HOLDER WASHER
141	F79-8301	O RING B