ReelSchematic

SEABORG
G300J/JL

Instruction Manual

Index

Caution ----------1-7

Power source----------8,9
How to connect the power source 8
About the power source 9
Battery level indicator 9

Maintenance----------10,11
About maintenance 10
Maintenance procedure 10
Handling and maintenance of the power cord 11
Maintenance of the power cord 11
Other maintenance points 11

Names and functions of each part-------12,13

Names of the buttons and the display ------14

Functional setting----------15-52
1. How to operate the Menu screen -----15,16
Setting of useful functions 15,16
2. Main line input ----------17-26
P1 Line Input 17-19
P2 Backing line input 20-23
P3 Line re-input 24-26
3. Sub counter----------27-29
Inverse counter 27
Winding speed 28
Time to wind up 29
4. Before start fishing----------30
Water surface zero setting 30
If the main line is broken 30
5. Auto stop----------31,32
Adjustable auto stop setting 31,32
6. Jigging mode ----------33-37
7. Pickup/Pause ----------38
6.Line feeding function ----------35-37
7. Pickup / Pause ----------38
8. Motor ON/OFF Interlocking Clutch ------39
9. Drag Sound ----------40
10. Depth Alarm ----------41
11. Constant Speed Winding mode --------42
12. Chumming Timer ----------43
13. ChummingTimer winding----------44
14. Drift mode ----------45,46
15. Water depth recalibration ----------47
16. Actual fishing history ----------48
17. Other useful functions ----------49,50
Various alarms 49
Alarm sound ON/OFF setting 49
Language setting 50
Unit setting 50
Counter lamp 50
Circuit breaker display 50
18. How to remove the handle knob--------51
19. How to change the Handle Arm length---52

Reel Specifications----------53
Reel Specification list 53
Counter display 53

Parts List----------54,55

Trouble shooting----------56

List of options for line data input

This reel can be configured and set-up using the following options.

P1 Line Input 17-19
This option allows you to set useful functions when you know the length of the fishing line to be wound on the reel.

P2 Backing line input 20-23
This option allows you to set functions to insert a backing line. Note that it is necessary that you know the line length and that it is greater than 100 m.

P3 Line re-input 24-26
This option allows you to re-enter the line data, pulling out the line after it has been completely wound up onto the reel. Note that it is necessary that you know the line length and that it is greater than 100 m.

Thank you for purchasing a 21SEABORG G300J/JL. Please read this operation manual carefully and use the product safely and correctly to take full advantage of this electric reel with many convenient features for your on-board fishing. Please keep this operation manual carefully together with your reel for your future reference.

Caution

This document contains important instructions for using your electric reel. Please be sure to read them thoroughly before use.

About the signs

⊘	This sign means "prohibited actions." Within the area or near this sign, specific prohibited actions are described.
△	This sign means "actions that require caution." Within the area or near this sign, specific actions that require caution are described.
○	This sign means "mandatory actions." Within the area of this sign, specific mandatory actions are described.

⚠ WARNING

The following pertains to matters that could cause problems or serious, even life-threatening injuries should the instructions be ignored or incorrectly followed.

-Be careful not to catch your fingers between the reel and the level wind, which is used to wind line into the spool evenly. It may cause injury.

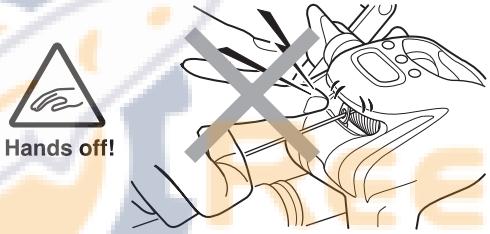

-When you turn on the clutch while feeding line (operated by the motor), it winds up the line. Be careful not to catch your fingers. It may cause injury.

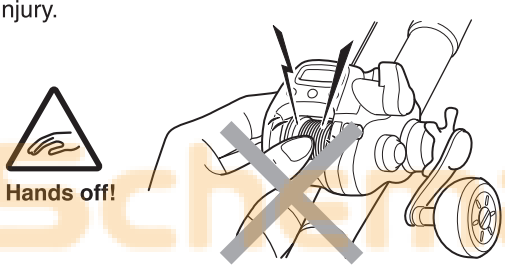

-Adults or parent's must supervise closely any use of this product by children. Use extreme caution to keep their fingers and hands away from moving parts or openings in the reel.

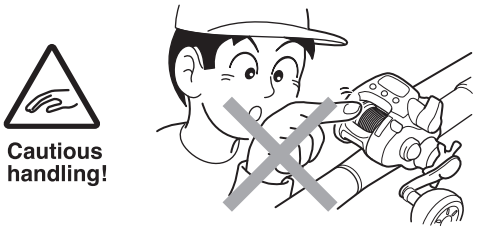

-Do not use and keep this product within the reach of children.

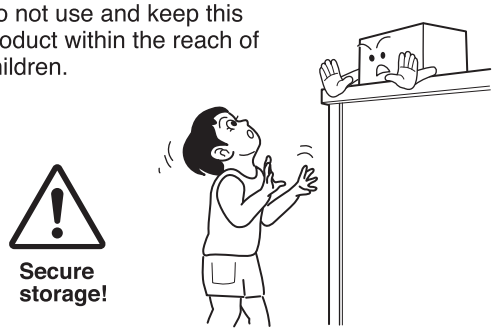

-When using batteries or the power supply of a boat, only apply the designated voltage. Other voltage may cause an abnormally high temperature in the electric reel, that could burn your hand or damage the microchip. Do not connect to house current or any AC (alternating current) power supply. The circuit may be short-circuited and result in smoke and fire.

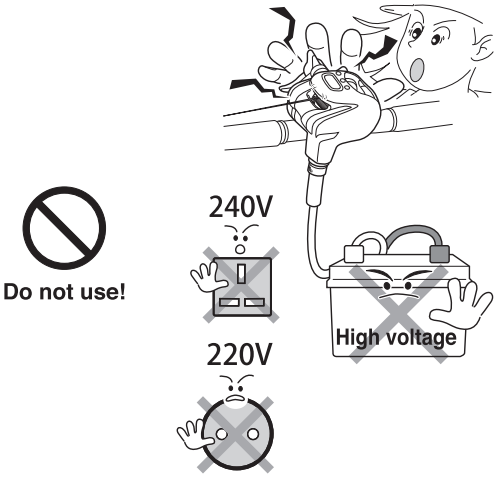

Caution

⚠ WARNING

The following pertains to matters that could cause problems or serious, even life-threatening injuries should the instructions be ignored or incorrectly followed.

-While using an electric reel, weak radio waves will be generated, which may affect medical equipment, such as malfunction of hearing aids and pacemakers. In particular for a person implanted with a heart pacemaker, use of electric reel may cause palpitations or dizziness; Do Not use this product.





-Do not fasten an electric reel with a harness onto your body.
You may risk your life if pulled into the seawater by a big fish or in other situations.





⚠ CAUTION

The following pertains to matters that could cause problems or serious, even life-threatening injuries should the instructions be ignored or incorrectly followed.

-Do not touch moving parts while in operation.
It may cause injuries.



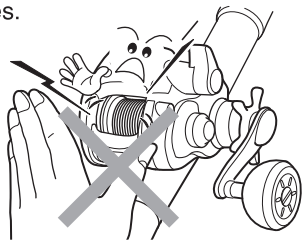

-Should water droplets get inside the liquid crystal, it could cause the microchip to malfunction and keep the motor turning. In such a case, stop using this product and have it repaired immediately.



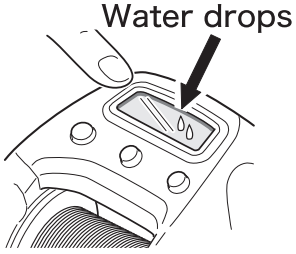

-Should the motor fail to stop for some reason while fishing, use caution to prevent your fingers being caught in the reel. Disconnect the power supply immediately.

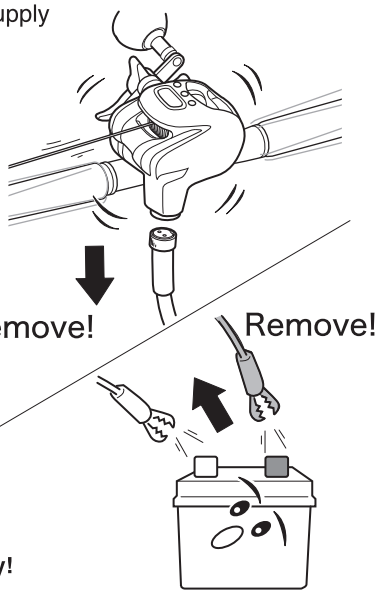

ReelSchematic

Caution

⚠ CAUTION

The following pertains to matters that could cause problems or serious, even life-threatening injuries should the instructions be ignored or incorrectly followed.

-Before adjusting drag tension, always turn off the automatic electric winding. You could cut your hand when pulling line to check tension.

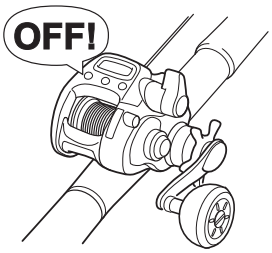

Turn off!

-Do not touch or grab the line when it is being released or wound rapidly. The line may cut your fingers.

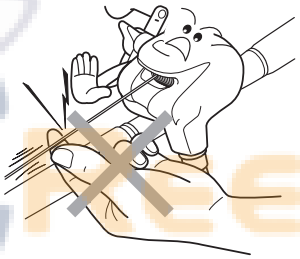

Hands off!

-When winding up line indoors, do so at high speed. If wound up at low speed and high tension, the motor may heat up abnormally and emit smoke. Power to wind up electronically may deteriorate.

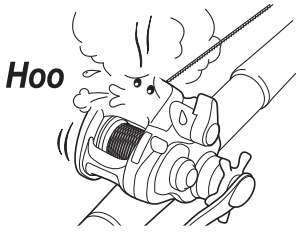

Cautious handling!

-Before reconnecting the power cable on the boat, thoroughly wipe away any moisture such as saltwater from the connecting parts with a dry cloth. If you connect it wet, it may short-circuit causing electric shock, smoke, or even fire.

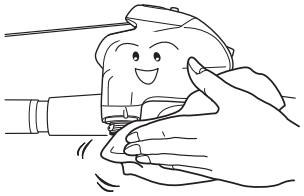

Cautious handling!

-When not tending this product, turn the power off (Power Lever back) and remove the power supply to prevent it starting accidentally and causing injuries.

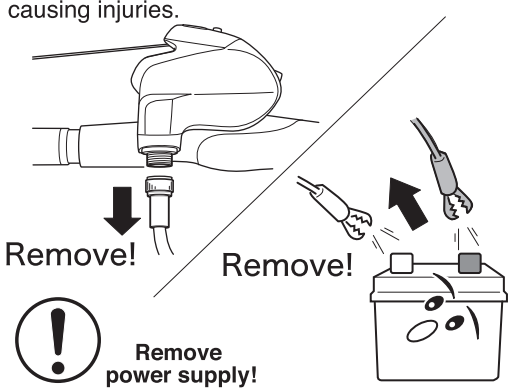

Remove power supply!

-Depending on the conditions of use or storage of the product, the cord may breakage or be shorted out, resulting in smoke or fire. Be sure to follow the "Precautions for Handling Cord", "Instructions for Maintenance of Cord" and "Other Precautions for Maintenance". Be sure to disconnect the power supply before maintenance of the cord. An old cord may cause breakage, short-circuit, or trouble. We recommend to replace the cord every two years or every 60 times of use, in order to maintain the performance of the reel.

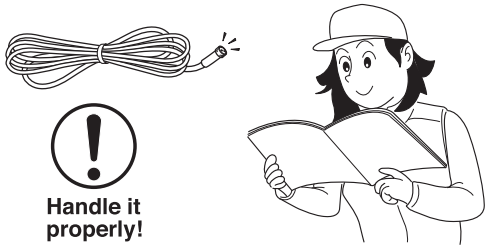

Handle it properly!

-Please be careful to keep your finger from heat radiation section of the motor and drag radiator section which is likely to be high temperature and may cause a burn.

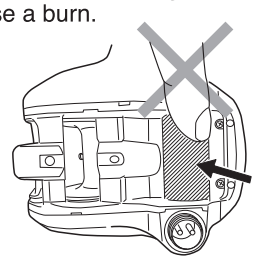

Never touch!

Heat radiating section of the motor

Caution

⚠ CAUTION

The following pertains to matters that could cause problems or serious, even life-threatening injuries should the instructions be ignored or incorrectly followed.

-When your hook is caught in the bottom, do not jerk the rod to free it. Pull the line with your hand and cut it if it fails to pull free. (Be sure to protect your hands with gloves or a towel.)
If you use thick leader and cannot cut it with hands, talk to the captain for a safe treatment.

Risk of injury!



-Before connecting it to the power supply, be sure to loosen the drag well. If the IC breaks, and the motor does not stop, the terminal rig may be wound into the reel and the rod may break.

Required handling!

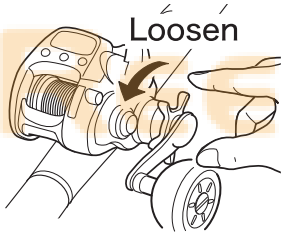

-Use the reel only for the purpose of fishing.

Never use it for other purpose!

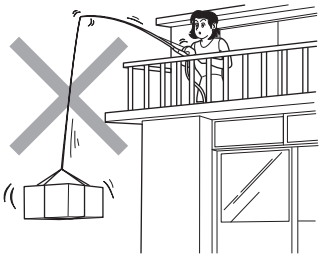

-Do not touch parts where the surface or top coatings (such as paint) are peeled off. It may cause injuries.

Hands off!

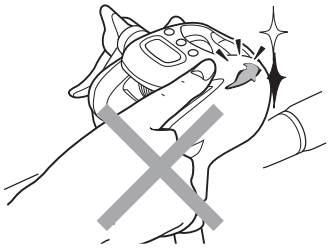

-In case you smell burning or you find other troubles, stop the motor and remove the power supply. It may cause heat or fire.

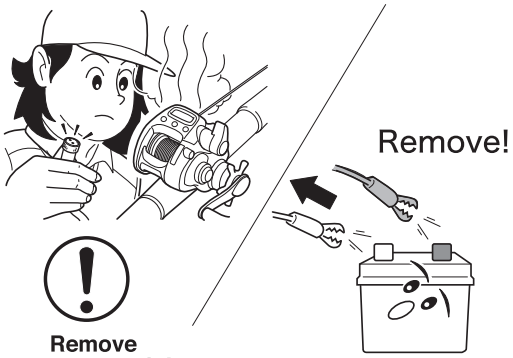

Remove power supply!

-Handle it cautiously as to not to stain your clothes with grease or oil from moving parts.

Cautious handling!

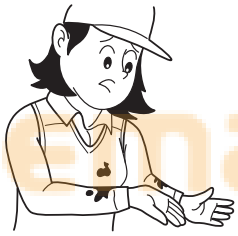

-Do not use wire line with your reel. It may cause corrosion or damage to the spool.

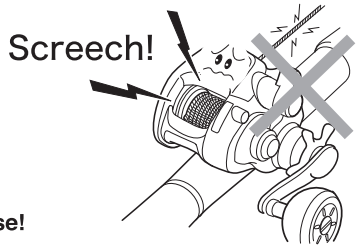

Do not use!

-Excessive shock, as from dropping, may cause malfunction with breakage or other damage to the internal electronic components such as cracks that allow water entry or short circuiting of circuit boards. Use care to avoid strong shocks and pressure (It may cause problems even though damage may not be visible.)

Handle with care!

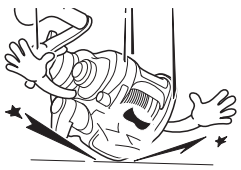

ReelSchematic

Caution

⚠ CAUTION

The following pertains to matters that could cause problems or serious, even life-threatening injuries should the instructions be ignored or incorrectly followed.

-Do not wind up with excessive force when line is tangled with other angler's lines or snagged on the bottom. It may cause damage to your rod and other components.

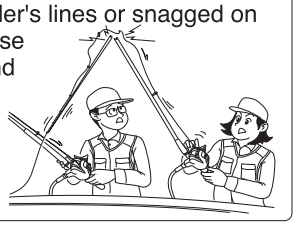

Handle with care!

-Do not press the clutch with your fingers to wind-up or release a snagged hook. Failure to do so may result in damage to the clutch.

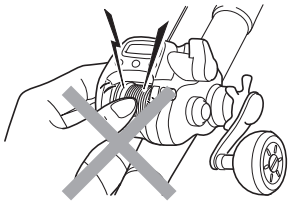

Handle with care!

-Do not dismantle or modify the reel. It may deteriorate the performance of the reel or cause other problems.

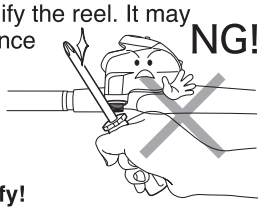

Do not modify!

-Reset the counter whenever it displays the wrong number, you have cut off line, disconnected the power supply or changed line tests. If you use the reel without resetting the counter, your terminal rig may be pulled into the reel and break the rod or other components. Forgetting to reset it with your terminal rig at the water surface may cause the same problem.

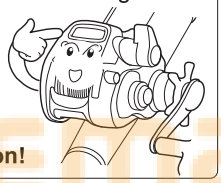

Required operation!

-Do not modify the cable. It may cause a short-circuit or other problems and could result in smoke or fire.

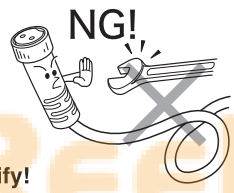

Do not modify!

(MAGSEALED mounted model) INSTRUCTIONS FOR HANDLING

This document contains important instructions regarding special attention that may be required when using an electric reel. Please be sure to read them thoroughly before use.

■ MAG SEALED

MAG SEALED is a revolutionary mechanism designed to make a wall with magnetic fluid and keep water out. While maintaining smooth rotation, it sustains the initial rotation performance for a long time by keeping out water and foreign substances. The elimination of annoying salt adhesion can remove degraded rotation or noise created during long-term use, resulting in significantly improved durability.

■ MAG SEALED ball bearing

Our unique technology has turned the ball bearing itself to MAG SEALED. The wall of magnetic fluid prevents water or foreign substances from entering the inner ball bearing, which substantially eliminates noise and rust or salt adhesion on the ball bearing.

⚠ Attention

-Never lubricate the MAG SEALED ball bearing to avoid the loss of the MAG SEALED function.
-Never disassemble the ball bearing to avoid the loss of the MAG SEALED function.

⚠ Attention

The excellent rustproof and dustproof performances of the MAG SEALED ball bearing are provided by the wall of magnetic fluid (MAG OIL) enclosed in the ball bearing.
-MAG OIL enclosed slightly greater in quantity could seep out of the ball bearing surface, but it will not affect performances.
(Do not wipe off the oil seeping out of the surface.)
-Never touch or wipe the MAG SEALED ball bearing with your finger, cloth or a cotton bud. Wiping off MAG OIL could impair the MAG SEALED function.

ReelSchematic

Caution

INSTRUCTIONS FOR HANDLING

This document contains important instructions regarding special attention that may be required when using an electric reel. Please be sure to read them thoroughly before use.

⚠ATTENTION

-Do not step on or place objects upon the reel. It may cause problems with the reel.

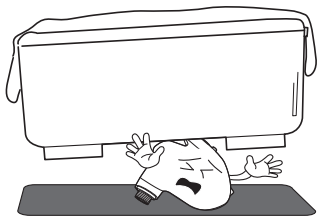

-Do not leave the reel near heating appliances. Resin may melt and deform or deteriorate causing problems.

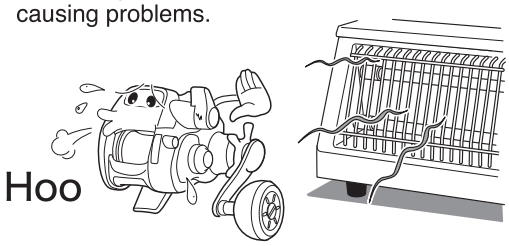

-Do not insert a stick or metallic object into the opening between the spool and the frame or other parts of the reel. It may cause problems with the reel.

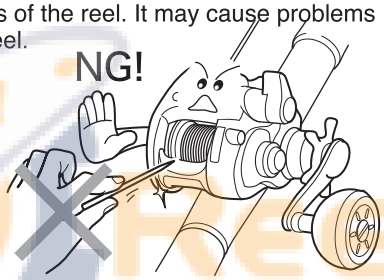

-When storing the reel for a long time, wipe down the moisture completely and preserve it in as well a ventilated place as possible without direct sunlight. Loosen the drag when storing it.

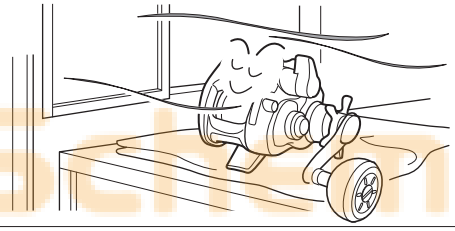

-Before removing the power supply, turn off the power (power lever back) as it could cause problems with the reel.

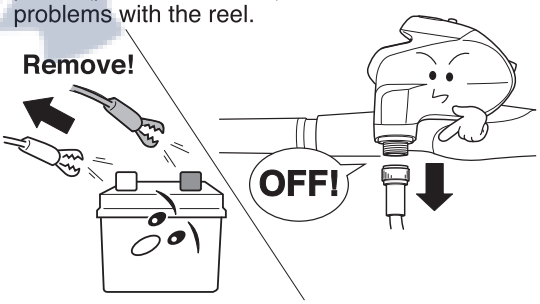

-When the reel is stored with the wet line with salt seawater, the spool may rust. Wash only the spinning part with tap water to rinse off seawater sufficiently, and then dry it in a well ventilated place without direct sunlight before storing it.

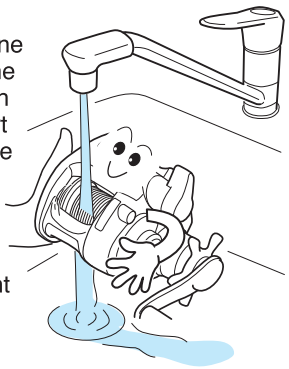

-Before going fishing, please check the reel for proper operation to ensure an enjoyable fishing trip.

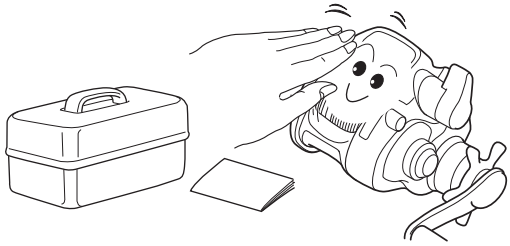

-Do not store a wet reel in a plastic bag or a fishing bag because it may cause rust or malfunction.

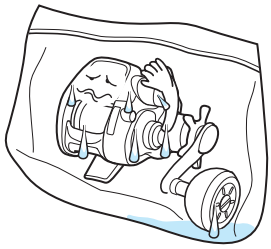

ReelSchematic

Caution

⚠ATTENTION

-Use neutral detergent (dish washing detergent) when washing the electric reel. Do not use chlorine, acidic, or alcohol type cleaners. It may deteriorate resin and cause problems with the reel.



-Unplug the power supply and the cable when not in use.

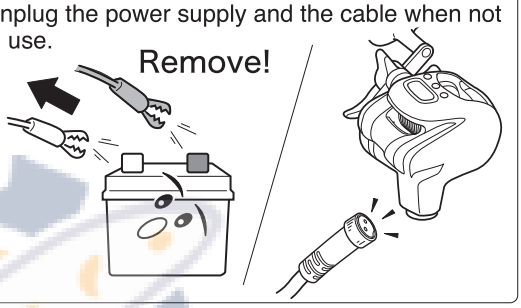

-Do not put a magnetic item such as magnet closer to the product. Otherwise, it malfunctions or causes failure.



-When shrinking a telescopic rod, do not tap rod butt on the ground with the reel attached. The reel may be damaged.

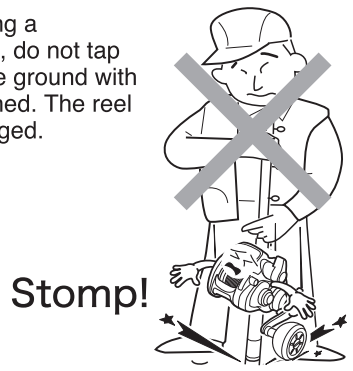

-Be cautious not to let cloth or other objects become caught in the reel when winding. Be careful not to have the line slackened by backlash or other cause caught into the reel.

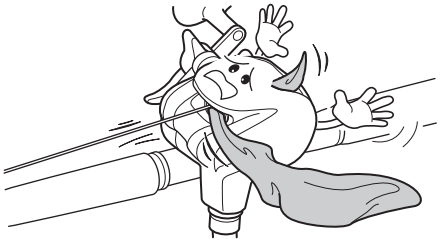

-Do not store the reel with tightly-wound, damp line. During storage, the line may dry up and shrink, resulting in damage to the spool. Do not wind nylon or fluorocarbon line onto a model designated exclusively for PE line (braided line).

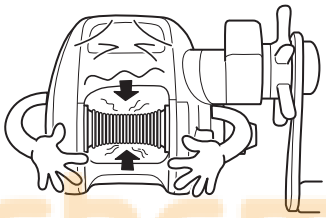

-When fixing the rod into a hole on the boat edge with the reel attached, verify that the reel does not touch the edge. When it touches, do not place it into the hole. The reel may be damaged.

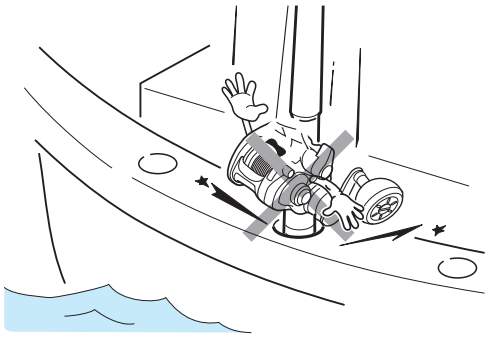

◆About the counter display

1. Excessively cold or hot weather, mid-winter (display's surface temperature is below –10 degrees centigrade) and mid-summer (display's surface temperature is above 60 degrees centigrade).

*In the above cases, the characters may be difficult to see due to the characteristics of the liquid crystal. Please note.

2. When light strikes the display from certain angles, the display's digits may have shadows. This does not affect its function.

ReelSchematic

Power source

How to connect the power source

1. Attach the cord clips to the battery.
   Red covered clip is the plus (+), and the black covered clip is the minus (-).

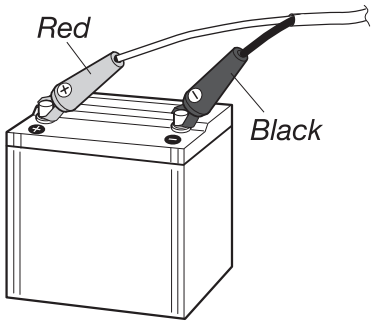

2. Insert the connector into the reel. After this, the display appears as below.
   By taking the appropriate steps, the indication will change as shown below and the data will be set.

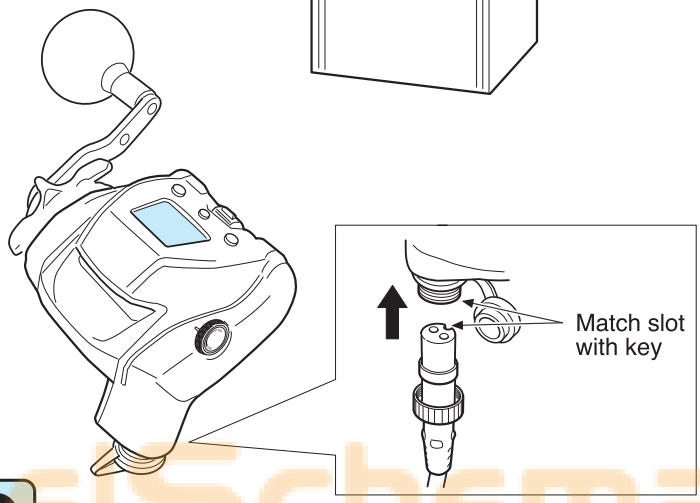

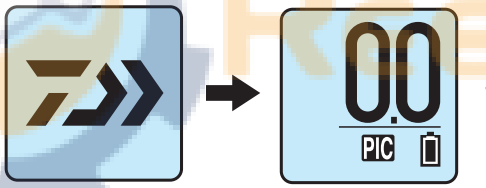

(Screen shown when the unit is turned ON)

(Screen showing the Water Depth)

Beep ! Alarm sound

ReelSchematic

Attention

When changing batteries, the display's back up memory stays active for about 15 minutes after the old battery is disconnected. Thus the above display startup sequence does not need to replay when the new battery is connected within the 15 minute time frame.

Power source

About the power source

This reel is designed to be compatible with direct current (DC) 12 Volt only. You may not use any power sources other than DC12V to power this reel (for example, AC240V from a household power supply and DC24V equipped on a boat).
The power source voltage on a boat tends to lose stability as it is largely influenced by a generator on board and wiring which may trigger the protective circuit causing sudden stop or intermittent operation of the reel. To maximize the reel performance, be sure to use the electric reel specific batteries.

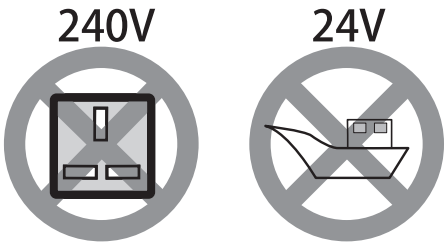

Attention

Make sure of the following before departure.
1. *Recharge the battery before your fishing trip. Over time, a battery can naturally discharge.*
2. *Confirm the boat can provide the proper power source (i.e. voltage, connector shape etc).*
3. *Corroded connections can prevent the flow of electric current. Remove any corrosion or dirt from the connectors.*

Battery level indicator

When the battery voltage is lowered while powered ON, the battery level indicator becomes as shown below.
When the voltage goes down to 10V or less, the winding power of the reel is restricted and the maximum performance cannot be gained.
If this indicator is blinking while the motor is not running, battery voltage may be low due to decreasing of the residual capacity of the battery. If it is blinking, replace the battery with a recharged one (If you use the on-board power supply, check the voltage and the terminal of your boat).

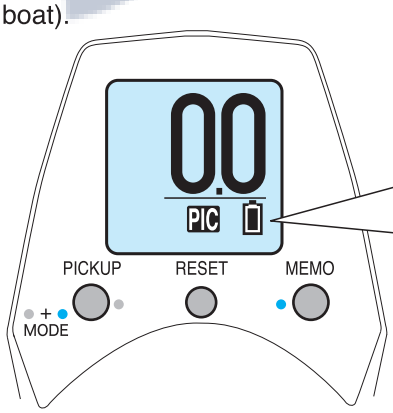

Battery level indicator		
Battery full capacity	Battery half capacity	Battery low capacity blinking
11V or higher	10 to 11V	Lower than 10V

*There may be a slight difference between the reel detection voltage and the actual voltage of the power supply.
*When the battery runs out and the counter display goes out, be sure not to operate your electric reel manually to wind the line and be sure to replace the battery with a recharged one before doing any operations (relating to fishing). Any manual operation in such condition may cause the water depth counter to go out of order, resulting in the tip of fishing rod being broken due to accidentally winding up all the line when you restart an electrical winding later with a replaced throwing.

ReelSchematic

Maintenance

About maintenance

This is a washable reel. Wash away salt residue and grit after fishing.

Maintenance procedure

1. Wash the reel with a dish washing detergent and a soft sponge. Do not use solvents.

*Do not use soap or other detergents. Other soaps or solutions may damage the reel both externally and internally.

*Recommended quantity: 1.5 ml per liter of water.

The solution may damage the outside coating of the reel and may breakdown the grease inside of the reel creating an overflow of grease.

2. Rinse detergent and dirt away with running water, rinsing the spool very well to get rid of salt. Use warm water, under 30 degrees centigrade.

3. Dry the reel well.

*Loosen the drag when stored.

*Be sure to remove water from inside the handle knob,
because water could build up there.

4. Feed oil.

Spray oil on the worm shaft.

*Recommended grease: Genuine reel guard grease
(product code: 04980020)
Get the specific spray from a fishing-tackle store.

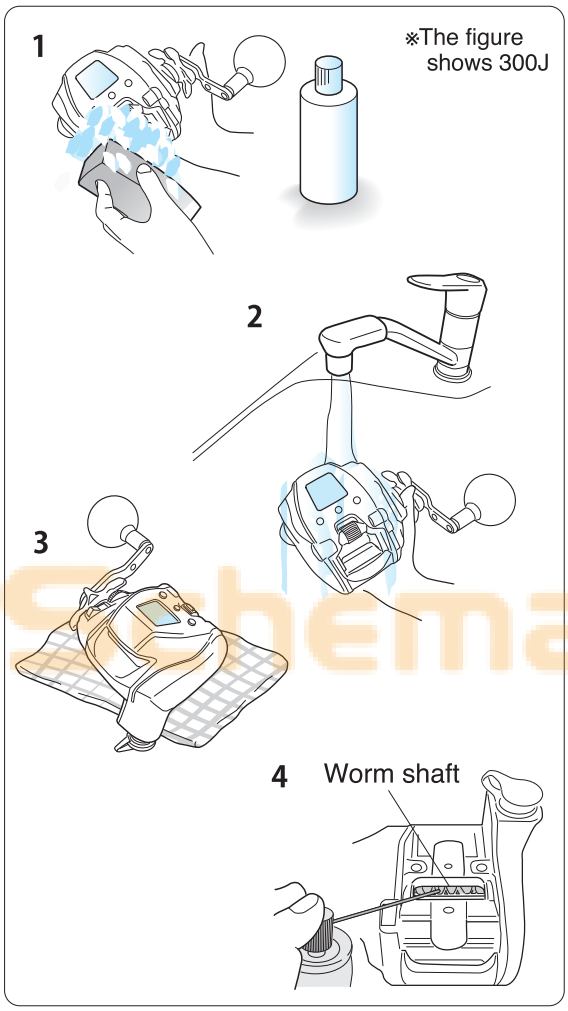

Attention

1.Do not wash with seawater or soak in water.
2.Do not use organic solvents such as benzene and thinner.
3.Do not use a steel brush or abrasive cleanser.
4.The fed oil may spring back and squirt. Do not peer down the worm shaft part.
5.Do not feed oil to water discharge hole.
6.Do not put magnetic force closer to the product main body.

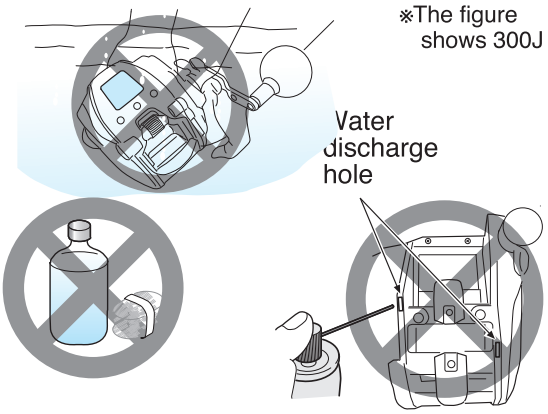

ReelSchematic

Maintenance

Handling and maintenance of the power cord

Follow the restrictions below to avoid troubles caused by disconnection of power cord and the like.
Be sure to use the specific power cord supplied with the reel unit.
*Note that the unit is not compatible with any other power cord.
*Do not modify the power cord. It may cause an unintended failure. Be sure to keep the power cord intact.



-Do not hang the reel by the power cord.

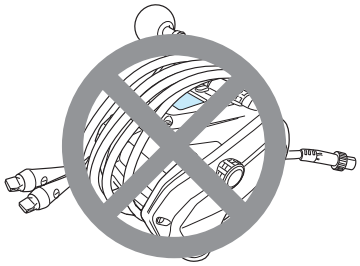

-Do not wind the power cord around the reel body with the connector inserted into the reel.

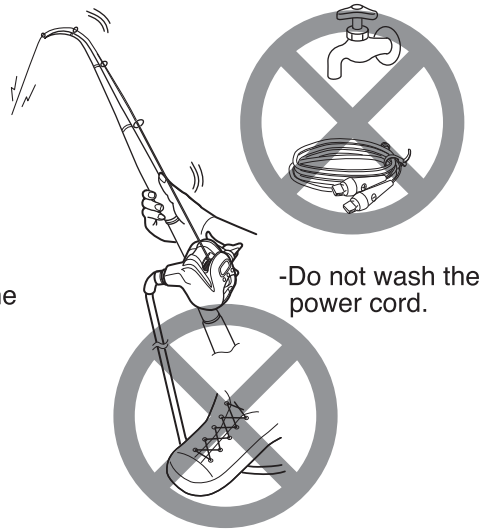

-Do not wash the power cord.

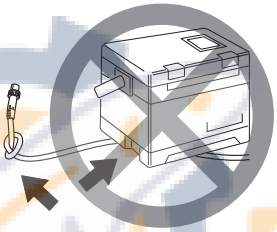

-Do not set heavy items on the power cord, or tie knots in the power cord.

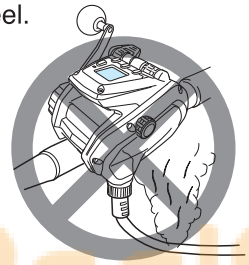

-If any abnormal events occur, including smoke and abnormal odor, stop the use of the power cord and remove it immediately from the battery.

-Note that the inner electric cable may be disconnected or broken despite of no visible damage on the appearance, if you step on the power cord, or if you pull the power cord strongly when it is trapped with cargoes, during use.

Maintenance of the power cord

-Wipe the power cord with a wet cloth and dry it well.
-Pay special attention to drying the tips, with cover removed.
-Grease the connector after it is dried.
*Recommended grease: SLPW connector grease 501 (Product code: 4386502)
-Disconnect the power cord from the reel before storing.

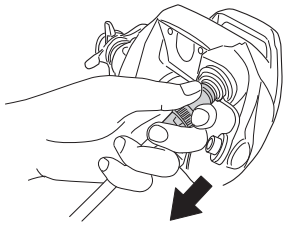

Hold the connector, not the power cord, to pull the power-cord from the reel.

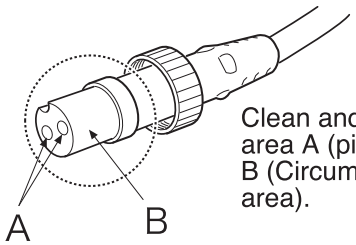

Clean and grease area A (pins) and area B (Circumferential area).

Other maintenance points

-This reel is a precision instrument that employs electric circuity and motor.
Do not disassemble the reel by yourself.
-Cover the power connector on the reel with its protection cap.
•An old cord may cause breakage, short-circuit, or trouble. We recommend to replace the cord every two years or every 60 times of use, in order to maintain the performance of the reel.

Names and functions of each part

※The figure shows 300J

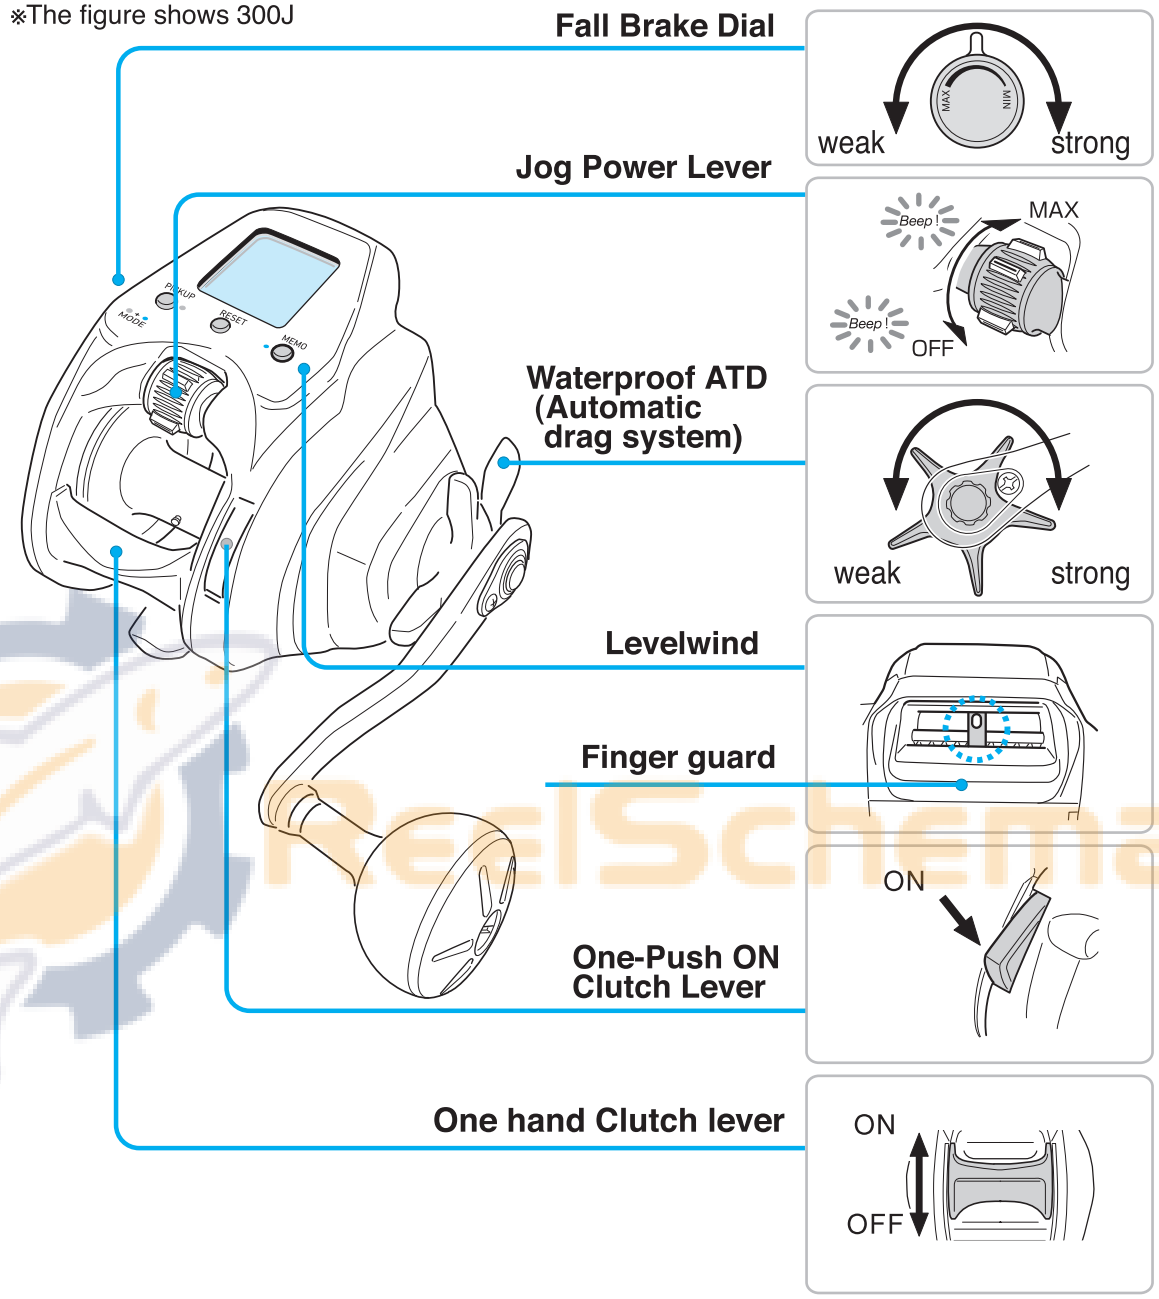

Accessories

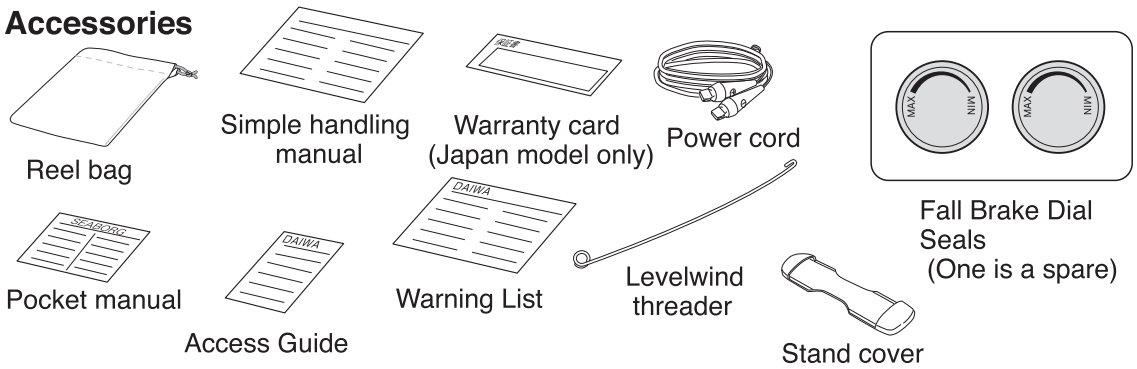

ReelSchematic

Names and functions of each part

Jog Power Lever

-Rotary lever can be rotated with your thumb.

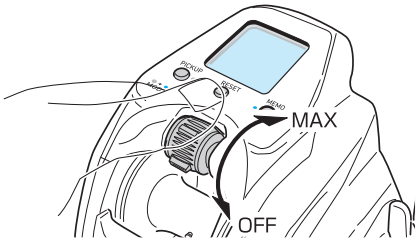

-You can freely adjust the winding power or the winding speed from OFF to MAX by using the lever.
-Turning the lever forward (toward MAX) will increase the winding power.
Tuning the lever back (toward OFF) will decrease the power.
-Check the position of the lever before you start winding. If it is not at OFF position, turn it back to OFF position (an audible alarm will sound to tell you that the lever has backed to the OFF position). Then, push the lever forward to start winding.
-Note that the lever does not accept your lever manipulation near the pre-set auto stop point for safety reasons.
-The displayed value for setting by the lever may fluctuate due to winding load fluctuation but it is not abnormal event.

Waterproof ATD (Automatic Drag System) *With a drag knob click system

-This is designed to provide a mechanism whereby adjusting the star drag allows the spool to slip against a strong pull to avoid line breakage.
1. Set the reel on the rod and put the line through the rod guide before adjusting the drag.
2. Adjust the tightness of the drag, with the clutch ON, manually pulling the line out from the reel. Normally, adjust the drag allowing the spool to slip before the line breakage (trace line).

One-Hand Clutch Lever

-You can disengage the clutch by slightly pressing down with your thumb.

◆While it is turned ON: Turn the handle to wind up the line.

◆While it is turned OFF: Spool is free. Turn the handle clockwise to turn ON the clutch.

One-Push ON Clutch Lever

-The clutch turns to ON by pressing the lever when the clutch is OFF.
-You can turn the clutch to ON quickly with your hand holding the rod.

Motor ON/OFF Interlocking Clutch

-The motor rotation stops when the clutch is turned OFF during electric winding (while the motor is rotating). The electric winding (motor rotation) automatically restarts when the clutch is turned ON again.
-This captures signals of sensitive hits and strikes such as fish-bite and squid-touch while the jig is falling.

Fall Brake Dial

-This brake system allows you to set instantly the falling speed of the rig by operating the dial. It also prevents backlash (twists caused by a slack line). Adjust the strength of the brake depending on how much the boat is swaying, how heavy the rig is, etc.

Levelwind

-The levelwind allows to ensure an even winding of the line on the spool that is passed through the guide.
*The line may be wound unevenly on the spool depending on the winding condition in some cases.

Accessories

-Power cord/Reel bag/Access Guide/ Warning List/Simple handling manual/ Warranty card (Japan model only)
* Three years warrantee only for the motor
-Pocket manual
(Jigging mode operation manual)
-Levelwind threader
It is used to put the line through the level wind.
-Fall Brake Dial Seals (One is a spare)
Enclosed Fall Brake Dial seals are provided for you to stick on the dial to mark the target value of the sinking speed at which you wish to set.

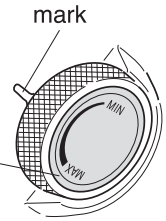

-Stand cover
Use it to protect the reel and the rod and prevent rattling with respect to the reel seat.

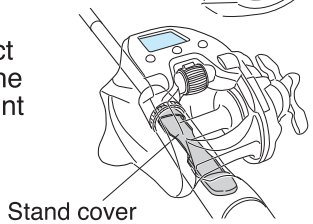

⚠ Attention

* *If the stand cover is attached, the reel will not be attached depending on the rod.*
* *If the stand cover is attached to a type of rods with a rotary installation base, the stand cover may be broken.*
* *Excessive tightening of the reel seat may cause the stand cover to be deformed and contact with the spool, resulting in decrease in the spool free performance (lowering of the terminal rig).*

Names of the buttons and the display

※The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

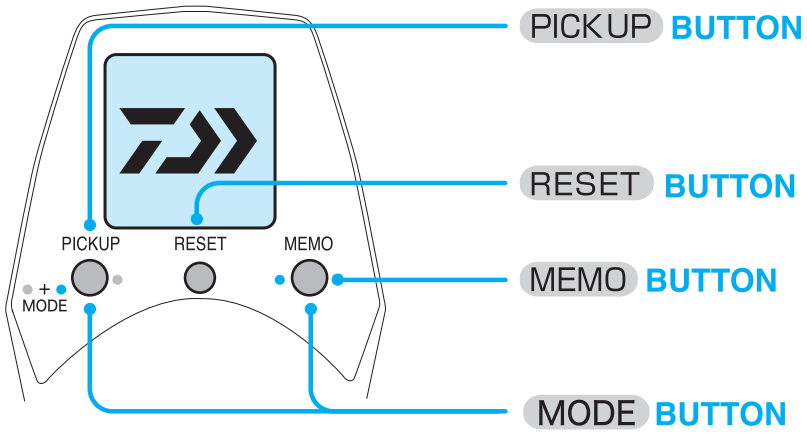

●RESET

-Press the RESET BUTTON once always before you start fishing.
The auto stop position is set based on the point where you pressed the RESET BUTTON.
-Pressing and holding this button for 2 seconds or more allows you to correct the data when the line has broken.

●MEMO

-This button is used to reset the inverse counter or resume the chumming timer.
-Pressing and holding this button allows you to set the auto stop point.
-This button acts as OK BUTTON in the Menu screen.

●PICKUP

-The button is used to execute Pickup, Pause and Jigging.
-This button acts as a ⮌ (RETURN) BUTTON in the Menu screen.

●MODE (Menu)

-Simultaneously pressing and holding both MEMO BUTTON and PICKUP BUTTON for 2 seconds or more will open the screen where you can set various convenient functions.

ReelSchematic

Functional setting [1. How to operate the Menu screen]

Setting of useful functions

-The Menu provides various useful functions for your fishing.
*Once you have set up a parameter, it is saved in the memory for your next fishing.
(Settings may not be saved in the memory if your turn off the power immediately after setting)

1.When the display shows 0.0 press and hold both MEMO BUTTON and PICK UP BUTTON simultaneously for 2 seconds to show the Menu screen.

※The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

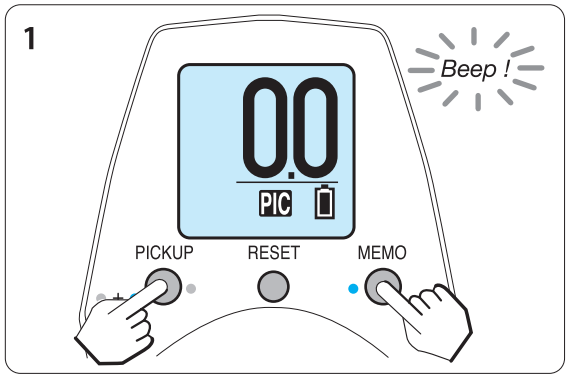

(Water Depth screen)

2.Select a parameter using the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON)
to go the screen for setting.

*For details on setting of each parameter, please refer to the following pages.

MEMO BUTTON +
PICK UP BUTTON (Press and hold)

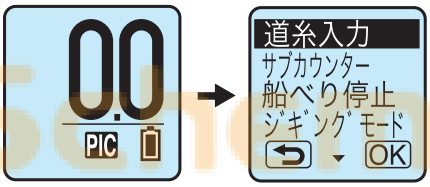

(Water Depth screen) (Menu screen)

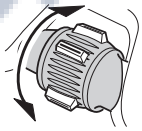

You can select your desired parameter using the Jog Power Lever.

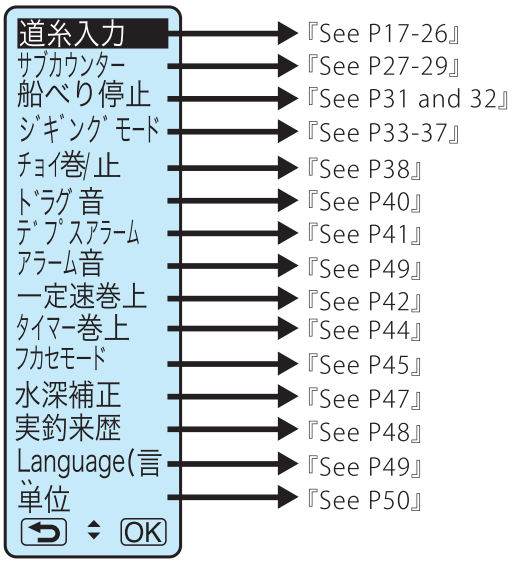

Functional setting [1. How to operate the Menu screen]

■ Operation in the Menu screen

Here, the Menu screen is used as an example to how to operate the screen.



OK **BUTTON**

Pressing MEMO **BUTTON** allows you to go to the next screen.

* OK (PICKUP **BUTTON**) for 300JL

If ▲ or ▼ is displayed, you can select any parameter by scrolling the screen with the Jog Power Lever.

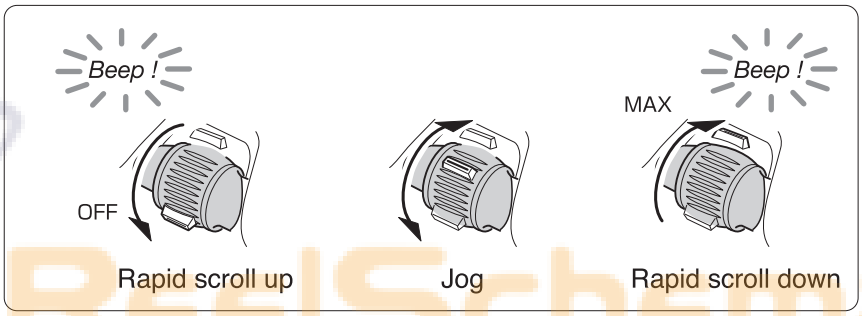

(RETURN) BUTTON

Pressing PICKUP **BUTTON** (* MEMO **BUTTON** for 300JL) allows you to return to the previous screen.

3. Once the settings have been completed, return to the Water Depth screen to start fishing.

ReelSchematic

Functional setting [2. Main line input]

P1 Line Input

This function is convenient when you know the length of the fishing line to be wound on the reel.
(The following example explains how to insert a PE 100lb-500m fishing line.)

⚠ Watch out for Burns!

An overly heated motor may cause the frame to become very hot, so do not touch it directly when inserting the main line. Insert the line while holding the frame with a wet towel, etc.

1.Pass the main line through the Level Wind and tie it to the spool.

*The enclosed threading pin facilitates the process.
*Make sure to tie the line to the line stopper to prevent the line from slipping on the spool.
*Tighten the drag.

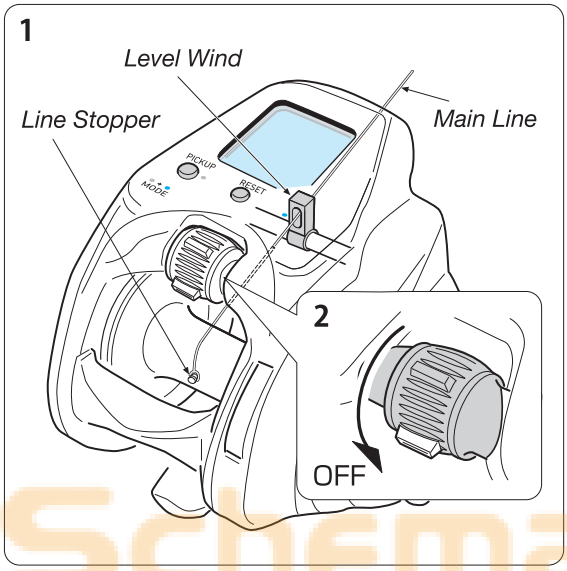

2. Return the Jog Power Lever to OFF.

3. Turn on the reel.

*Please refer to the page 8 “How to connect the power source” for the details of the connection method.



(The screen when the reel is switched on)

4. When 0.0 is displayed, press and hold the switches MEMO BUTTON and PICKUP BUTTON simultaneously for 2 seconds.

※The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

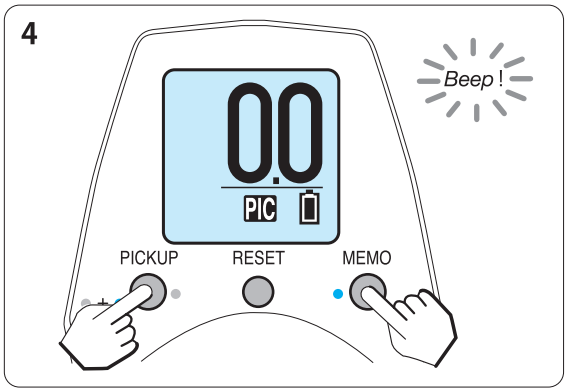

(Water Depth Screen)

ReelSchematic

Functional setting [2. Main line input]

P1 Line Input

5. Select “Line Input” with the Jog Power Lever and press
   300J OK (MEMO BUTTON)
   300JL OK (PICK UP BUTTON) .

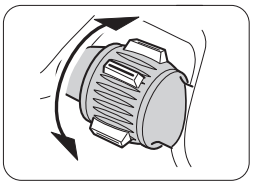

*By moving the Jog Power Lever, the selected item is highlighted on the screen.

*When the scrolling text《Do you wish to continue?》is displayed, press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON)
one more time.

6. Select “Line Input P1” and then press
   300J OK (MEMO BUTTON)
   300JL OK (PICK UP BUTTON) .

7. After adjusting the tension, turn the Jog Power Lever to the MAX position and then wind the main line.

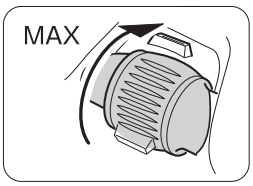

*While winding up the line, try to adjust the tension so that the mark ▼ stays around the screen center.

5



(Menu Screen)



6



(Line Input Screen)

7



(Tension Meter Screen)

Attention

-The reel may be damaged if the line touches the finger-guard or the frame. Keep the line from touching these components.
-Winding the line indoors for a prolonged period at a low speed with an elevated tension may cause the motor to overheat and thus fail. Please input by turning the Jog Power Lever to the MAX position. While actual fishing in outdoors, there is no need to worry about overheat problem because motor is cooled down by seawater, etc.

ReelSchematic

Functional setting [2. Main line input]

P1 Line Input

8. When winding is complete, turn the Jog Power Lever back to the OFF position and then press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON).

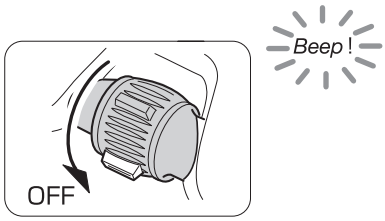

8

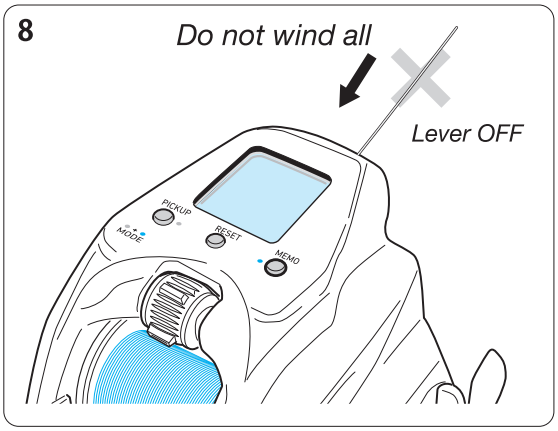

Attention

-Do not wind all the line. Before winding up all of the line, turn the Jog Power Level to the OFF position and then wind up the remaining line manually with the handle. Winding up all may cause an error with the counter.
-This winding method cannot be applied to lines thinner than PE 20lb.
-When winding a PE 20lb line, the line may enter the gap between the spool and the frame if wound close to the spool's outer diameter; so it is advisable to wind the line up to about 1mm inside the outer edge of the spool.

9. Select the line length with the Jog Power Lever and then press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON).
*The illustration shows a case of inserting 400m.
*The default value is set at 300m.
*The value can be set for every 10m.

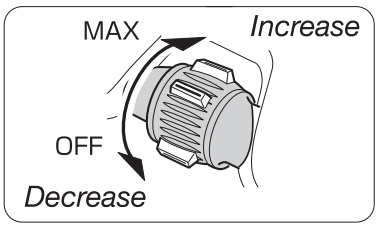

9



10. When "Complete" is displayed on the screen, press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON)
and the display will return to the water depth screen to complete inserting the line.

10



*When "Error" is displayed while inserting the line, press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON)
to return to the water depth screen and re-start the process from the beginning.



ReelSchematic

Functional setting [2. Main line input]

P2 Backing line input

Note that a 100 m or longer line of which length is known is necessary.

⚠ Watch out for Burns!

An overly heated motor may cause the frame to become very hot, so do not touch it directly when inserting the main line. Insert the line while holding the frame with a wet towel, etc.

1.Pass the main line through the Level Wind and tie it to the spool.

*The enclosed threading pin (See P12) facilitates the process.
*Make sure to tie the line to the line stopper to prevent the line from slipping on the spool.
*Tighten the drag.
*If you have already completed winding of the backing line, skip this step and go to the next step.

2. Return the Jog Power Lever to OFF.

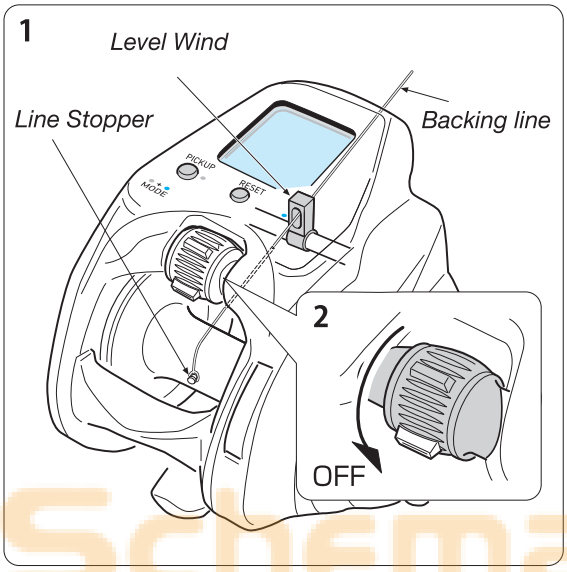

3. Turn on the reel.

*Please refer to the page 8 “How to connect Power Supply” for the details of the connection method.

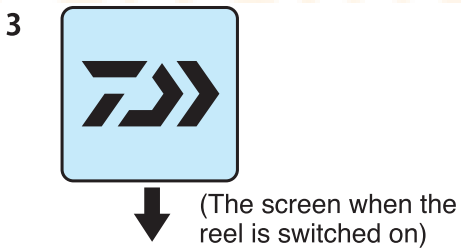

(The screen when the reel is switched on)

4. When 0.0 is displayed, press and hold the switches MEMO BUTTON and PICK UP BUTTON simultaneously for 2 seconds.

※The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

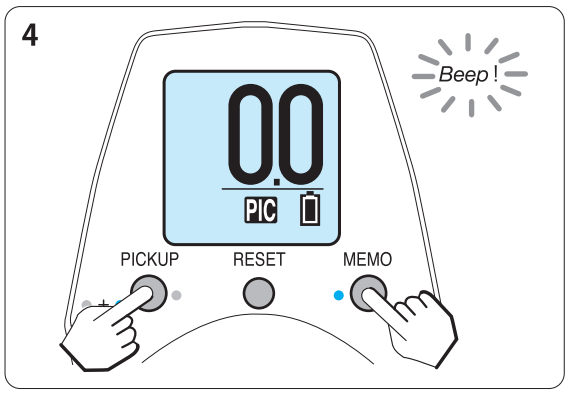

(Water Depth Screen)

ReelSchematic

Functional setting [2. Main line input]

P2 Backing line input

5. Select “Line Input” with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON) .

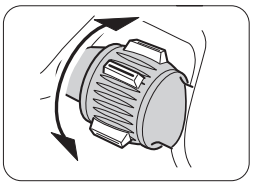

*By moving the Jog Power Lever, the selected item is highlighted on the screen.

*When the scrolling text《Do you wish to continue?》is displayed, press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON)
one more time.

6. Select “Backing line P2” and then press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON) .

*The screen automatically switches to “Speed Range”

7. Wind up the backing line. If winding of the backing line is completed, press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON) .

* If you have already completed winding of the backing line, skip this step and go to the next step by pressing
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON) .

8. Firmly tie the main line to the backing line.

9. After adjusting the tension, turn the Jog Power Lever to the MAX position. and wind the main line up until the remaining line is 100 m, as checking the line color.

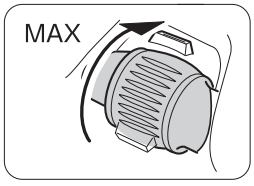

*While winding up the line, try to adjust the tension so that the mark ▼ stays around the screen center.

5



(Menu Screen)



6



(Screen to select Backing Line Input)

7



(Screen shown backing line winding)

8

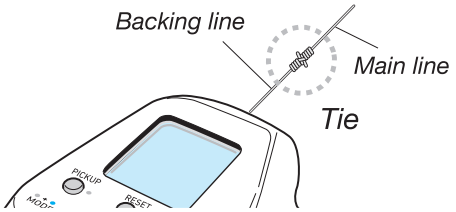

9



(Screen shown main line winding)

ReelSchematic

Functional setting [2. Main line input]

P2 Backing line input

Attention

-The reel may be damaged if the line touches the finger-guard or the frame. Keep the line from touching these components.
-Winding the line indoors for a prolonged period at a low speed with an elevated tension may cause the motor to overheat and thus fail. Please input by turning the Jog Power Lever to the MAX position. While actual fishing in outdoors, there is no need to worry about overheat problem because motor is cooled down by seawater, etc.

10. When winding is completed, turn the Jog Power Lever back to the OFF position and then press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON).

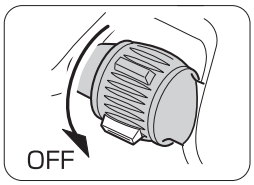



11. After adjusting the tension, turn the Jog Power Lever to the MAX position. Wind on another 50 m of line as checking the line color.

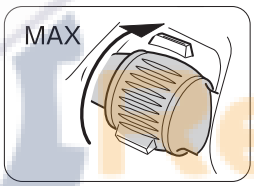

*While winding up the line, try to adjust the tension so that the mark ▼ stays around the screen center.

11



(Screen shown main line winding)

12. When winding is completed, turn the Jog Power Lever back to the OFF position and then press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON).

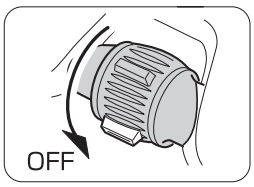



13. After adjusting the tension, turn the Jog Power Lever to the MAX position and wind the main line up to its end as checking the line color.

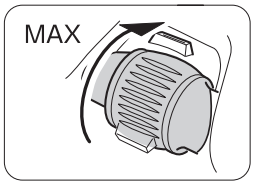

*While winding up the line, try to adjust the tension so that the mark ▼ stays around the screen center.

13

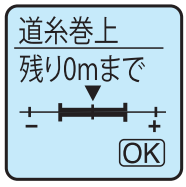

(Screen shown main line winding)

ReelSchematic

Functional setting [2. Main line input]

P2 Backing line input

Attention

-Do not wind all the line. Before winding up all of the line, turn the Jog Power Level to the OFF position and then wind up the remaining line manually with the handle. Winding up all may cause an error with the counter.
-This winding method cannot be applied to lines thinner than PE 20lb.
-When winding a PE 20lb line, the line may enter the gap between the spool and the frame if wound close to the spool's outer diameter; so it is advisable to wind the line up to about 1mm inside the outer edge of the spool.

14. When winding is completed, turn the Jog Power Lever back to the OFF position and then press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON).

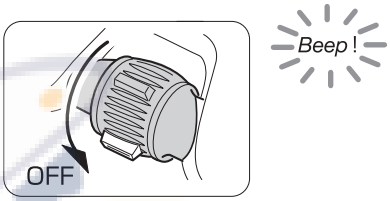

15. When "Complete" is displayed on the screen, press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON)
to return to the Water Depth screen and complete the data input of the line.

15



* If "Error" appears on the screen while inputting the line data, press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON)
to return to the Water Depth screen and re-start the process from the beginning.



ReelSchematic

Functional setting [2. Main line input]

P3 Line re-input

This option allows you to re-enter the line data, pulling out the line after it has been completely wound up onto the reel.
Note that it is necessary that you know the line length and that it is greaterthan 100 m.

1.Pass the main line through the Level Wind and tie it to the spool.

*The enclosed threading pin (See P12) facilitates the process.
*Make sure to tie the line to the line stopper to prevent the line from slipping on the spool.
*Tighten the drag.

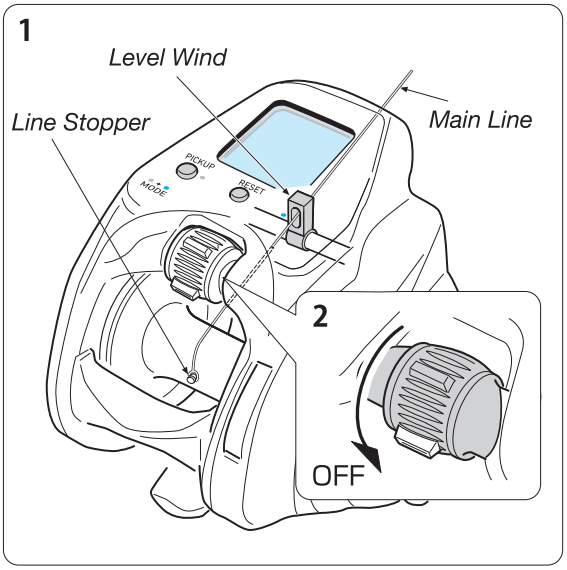

2. Return the Jog Power Lever to OFF.

3. Turn on the reel.

*Please refer to the page 8 “How to connect Power Supply” for the details of the connection method.



(The screen when the reel is switched on)

4. When 0.0 is displayed, press and hold the switches MEMO BUTTON and PICKUP BUTTON simultaneously for 2 seconds.

※The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

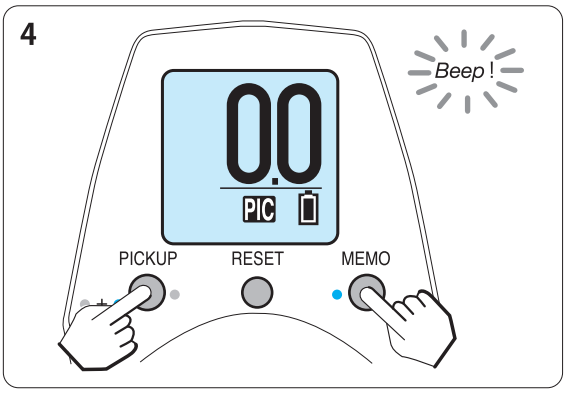

(Water Depth Screen)

ReelSchematic

Functional setting [2. Main line input]

P3 Line re-input

5. Select “Line Input” with the Jog Power Lever and press
   300J OK (MEMO BUTTON)
   300JL OK (PICK UP BUTTON).

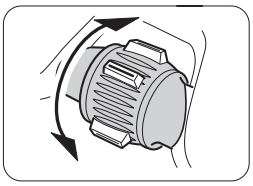

*By moving the Jog Power Lever, the selected item is highlighted on the screen.

*When the scrolling text《Do you wish to continue?》is displayed, press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON)
one more time.

6. Select “Line re-input P3” and then press
   300J OK (MEMO BUTTON)
   300JL OK (PICK UP BUTTON).

*The screen automatically switches to “Speed Range”

7. After adjusting the tension, turn the Jog Power Lever to the MAX position and then wind the main line.

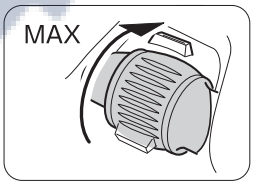

*While winding up the line, try to adjust the tension so that the mark ▼ stays around the screen center.

*When you have already completed winding the main line, simply press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON).

5



(Menu Screen)



6



(Line Input Screen)

7



(Tension Meter Screen)

Attention

-The reel may be damaged if the line touches the finger-guard or the frame. Keep the line from touching these components.
-Winding the line indoors for a prolonged period at a low speed with an elevated tension may cause the motor to overheat and thus fail. Please input by turning the Jog Power Lever to the MAX position. While actual fishing in outdoors, there is no need to worry about overheat problem because motor is cooled down by seawater, etc.

ReelSchematic

Functional setting [2. Main line input]

P3 Line re-input

8. When winding is completed, turn the Jog Power Lever back to the OFF position and then press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON) .

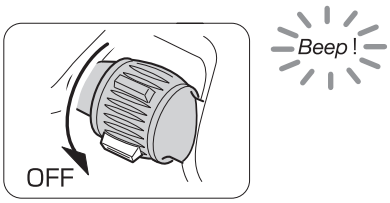

9. Pull 50 m of the line out of the reel as checking the line color and press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON) .

9



(Screen shown main line pulled out)

10. Pull another 50 m of the line out of the reel as checking the line color and press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON) .

10



(Screen shown main line pulled out)

11. When “Complete” is displayed on the screen, press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON)
to return to the Water Depth screen. Wind up the line that you pulled out from the reel. If you wound it up, the procedure is completed.

11



*If “Error” appears on the screen while inputting the line data, press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON) .
to return to the Water Depth screen and re-start the process from the beginning.



Attention

-Do not wind all the line. Before winding up all of the line, turn the Jog Power Level to the OFF position and then wind up the remaining line manually with the handle. Winding up all may cause an error with the counter.
-This winding method cannot be applied to lines thinner than PE 20lb.
-When winding a PE 20lb line, the line may enter the gap between the spool and the frame if wound close to the spool’s outer diameter; so it is advisable to wind the line up to about 1mm inside the outer edge of the spool.

ReelSchematic

Functional setting [3. Sub counter]

Sub counter can be displayed below the Water Depth counter.
You can select one from 3 options; i.e. “Inverse counter”, “Winding speed” and “Time to wind up”
*Sub counter is set to “No display” by default.

Inverse counter

You can easily identify a shelf in the strike zone for fishing with the distances from the boat and from the bottom by two counters.

1. Press and hold both MEMO **BUTTON** and PICK UP **BUTTON** simultaneously for 2 seconds to go to the Menu screen.

※The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

2. Select the option “Sub counter” with the Jog Power Lever and press
300J OK (MEMO **BUTTON**)
300JL OK (PICK UP **BUTTON**).
Then, select “Inverse counter” and press
300J OK (MEMO **BUTTON**)
300JL OK (PICK UP **BUTTON**).

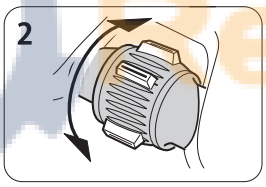

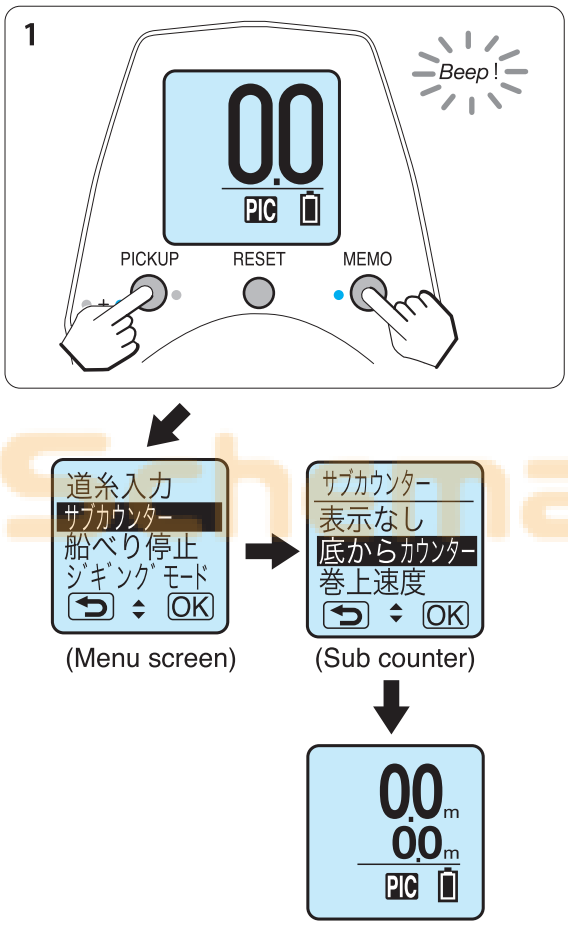

3. The Inverse counter will appear below the Water Depth counter.

4. When you press the MEMO **BUTTON** at the depth in the strike zone for fishing after lowering the terminal rig, including the bottom and your aiming shelf, the Inverse counter displays 0.0 as the reference point for showing the distance from such point.

Functional setting [3. Sub counter]

Winding speed

This option displays the winding speed actually measured while the electrical winding up is in action.

1. Press and hold both MEMO BUTTON and PICK UP BUTTON simultaneously for 2 seconds to go to the Menu screen.

※The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

2. Select the option “Sub counter” with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON)
Then, select “Winding speed display” and press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON).

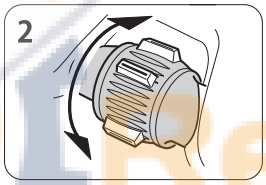

3. The winding speed will be displayed below the Water Depth counter.

*This is displayed only while electrical winding up is in action.

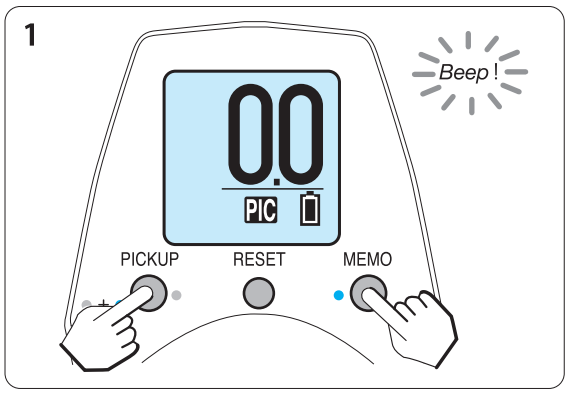

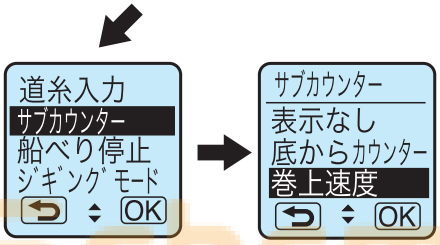

(Menu screen) (Sub counter)

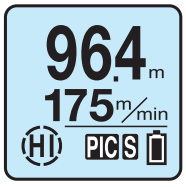

(Example of display)

ReelSchematic

Functional setting [3. Sub counter]

Time to wind up

This option displays the timer roughly indicating the remaining time to auto stop at the boat side.
*A gap in the time may be caused by the fluctuation of the actual winding speed.

1. Press and hold both MEMO BUTTON and PICK UP BUTTON simultaneously for 2 seconds to go to the Menu screen.

※The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

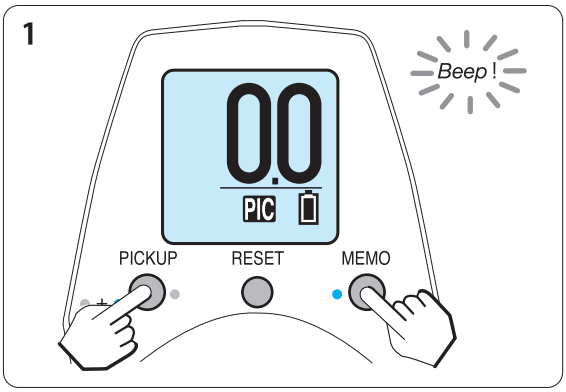

2. Select the option “Sub counter” with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON).
Then, select “Time to wind up” and press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON).

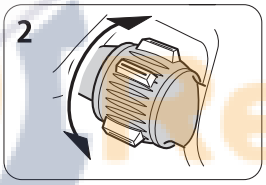

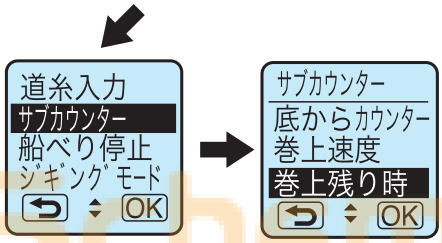

(Menu screen) (Sub counter)

3. The time to wind up will be displayed below the Water Depth counter.

*This is displayed only while electrical winding up is in action.



(Example of display)

Functional setting [4. Before start fishing]

Water surface zero setting

Before you start fishing, always perform this zero setting to identify a more accurate depth of the strike zone for fishing.

1. Connect the reel to the battery. Pass the line through all the guides, and prepare your terminal rig.

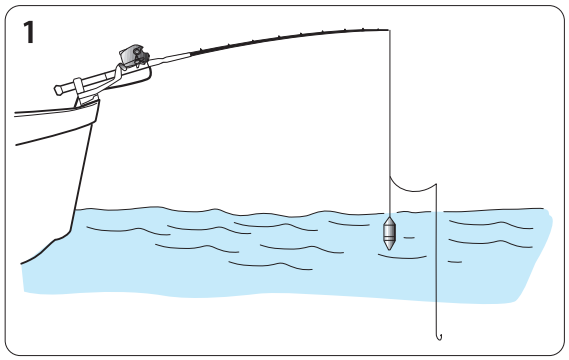

2. Lower the terminal rig to the water surface and press the RESET **BUTTON** .

The display resets to 0.0 and the indicator lamp S (auto stop) will turn on. Then the setup has been completed.
While electrical winding up is in action, winding will automatically stop at 2 m before auto stop at the boat side.

*If this "Water surface zero setting" is not made, winding will automatically stop at 5 m before the auto stop point for safety.
*After auto stop at the boat side, the Jog Power Lever will be disabled to wind up the line to prevent the rig from being accidentally wound up due to miss operation.

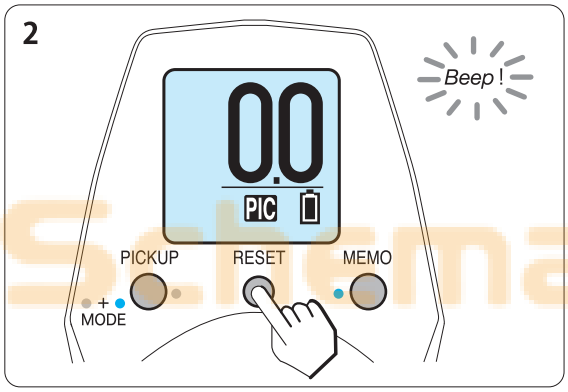

Attention

-When new line is wound up, or when line has been pulled under heavy tension, line stretch may cause a gap in the auto stop point at the boat side. Simply reset the surface setting to set it to zero.
-Depending upon the rolling of the boat or sinker weight, auto stop point can overrun slightly. Should this happen, increase the depth of the auto stop.
-Fishing at a depth over 328 ft (100 m) with a load largely fluctuating may cause a gap in the stop point. Thus, the terminal rig may be accidentally wound up and the rod may be broken. In such fishing, it is recommended to have sufficient margin in setting of auto stop point to avoid such events.

If the main line is broken

-Should your line break, revise data as follows.
Revise the data of the broken line. Wind the line to the rod tip while the reel is powered on. Then, press the RESET **BUTTON** for 2 seconds or more. When the display shows 0.0 , then your re-adjustment is completed.
*The line data will be overwritten (revised) by the procedure described above.
*Do not press and hold the RESET **BUTTON** , except for data correction of a broken line; it may cause an error in the counter.

Functional setting [5. Auto stop]

Adjustable auto stop setting

The auto stop point can be set to meet your own specific needs and ease your preparatory works such as checking and changing of baits and sinkers.

-You can set the auto stop point by setting the adjustable depth within the range 1 to 5 m from the point where you press RESET BUTTON (in 10 cm increments).
Especially in case of chumming, it is recommended to set the adjustable auto stop point so that a chumming bait sinker comes to your hand side when you raise your rod tip, for more convenient checking and changing of baits and sinkers.
Note that it is designed not to allow you to set the auto stop point to any value below 1 m for safety reasons.
-In the case when you feel the auto stop point comes down due to line stretch, simply reset the counter to zero at the water surface.
-Note that the Jog Power Lever may not be allowed to manipulate around the auto stop point for safety reasons.

There are two different ways to set the adjustable auto stop; setting in the Menu screen and setting in the Water Depth screen.

●Setting in the Menu screen

1. Press and hold both MEMO BUTTON and PICK UP BUTTON simultaneously for 2 seconds to go to the Menu screen.

※The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

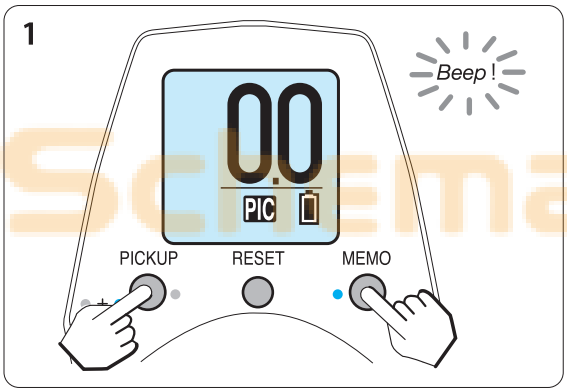

2. Select “Auto Stop” with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON).

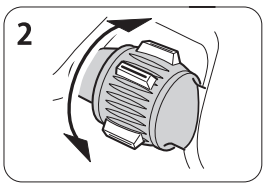

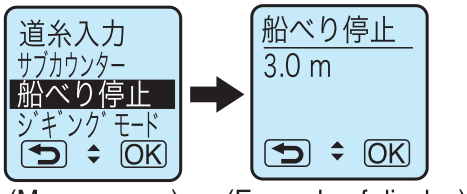

(Menu screen) (Example of display)

3. Then, select your desired auto stop point with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON)
to return to the Water Depth screen.

*You are not allowed to set the adjustable auto stop if you have not yet set the water surface zero setting. Be sure to carry out the water surface zero setting.

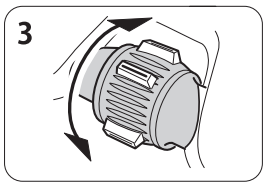

4. If you carry out electrical winding up after lowering the terminal rig, your terminal rig will automatically stop at the pre-set point.

Functional setting [5. Auto stop]

●Setting in the Water Depth screen

1. While the reel is powered on and your terminal rig is on the water surface, press the RESET **BUTTON** (water surface zero setting).

The display will show 0.0 .

※The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

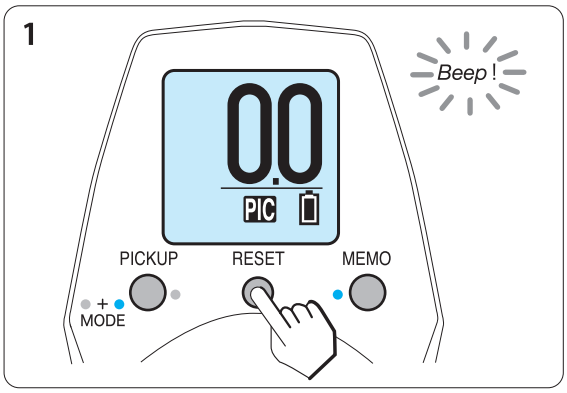

2. Raise your rod tip and pull the line out adjusting the line length from the rod tip so that you can reach the rig easily.

In the figure, its length is 1.5 m.

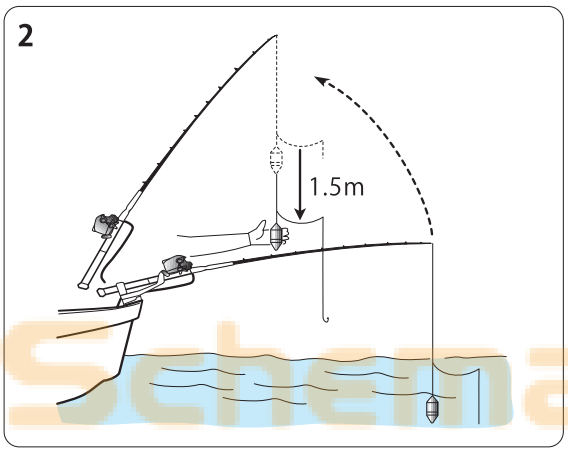

Use

Chumming

It is recommended to set the auto stop so that a chumming bait sinker comes to your hand side when you raise your rod tip, for more convenience for checking and changing of baits and sinkers.

3. When the line length has been properly adjusted, press and hold the MEMO **BUTTON** for about 2 seconds.

When the indicator lamp S (auto stop at boat) blinks, the setting is completed.
*Auto stop is set to 2.0 m by default.
(If RESET **BUTTON** is not pressed, the reel stops at 5.0 m)
*If the setting is completed, the indicator lamp S (auto stop at boat) will blink.

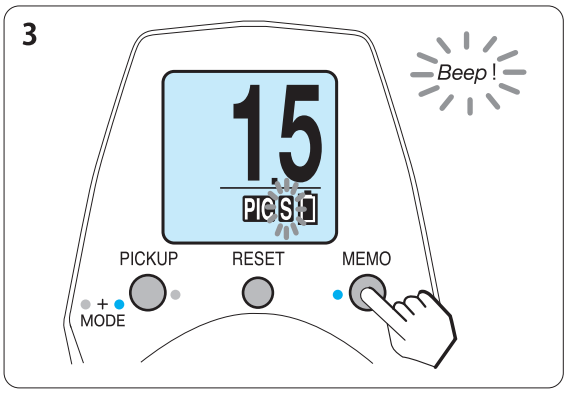

4. The electrical winding up automatically stops at the pre-set point. So, raise the rod tip to bring your terminal rig to your hand side.

ReelSchematic

Functional setting [6.Jigging mode]

Jigging mode

This is a useful function to allow the electric reel to start a lure action (luring fish).
Once you set this mode, you can start the Jigging mode by pressing PICKUP BUTTON .
The setting can be changed in detail to meet the needs of anglers.

How to set Jigging mode

1. Press and hold both MEMO BUTTON and PICKUP BUTTON simultaneously for 2 seconds to go to the Menu screen.

*The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

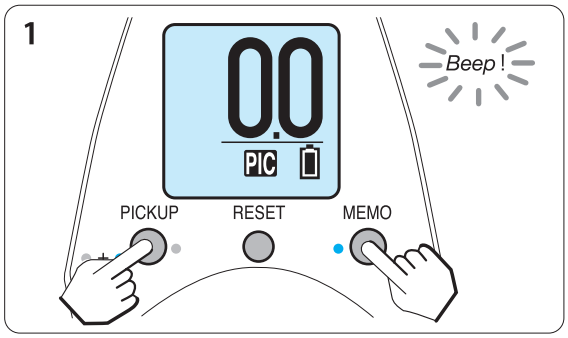

2. Select “Jigging mode” with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON) .

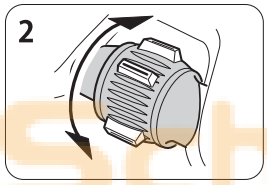



(Menu screen)

3. Select one of options of “One Pitch Jerk”, “One Pitch Pause”, “Combi Jerk” or “OFF”, with the Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON) .

*The default is set to OFF.

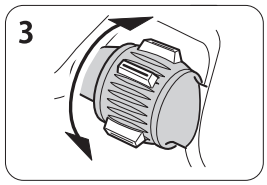



(Menu screen)

4. Select one of options of “Standard” or “Custom” and press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON) .

*Standard: Basic operation in each of Jigging mode.
*Custom: You can combine your desired Jerk Pattern for setting. (as described later)

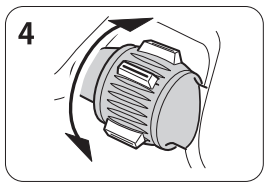



(Menu screen)

ReelSchematic

Functional setting [6.Jigging mode]

How to operate during actual fishing after setting the Jigging mode

1.Ensure that the indicator JIG is displayed on the counter.

1

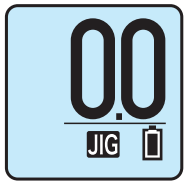

2.Turn OFF the clutch to drop your jig.

3.Press PICKUP BUTTON when feeding out your line 9.1 m or more. Or, press PICKUP BUTTON when your jig reaches to the bottom.

4.The indicator JIG on the counter starts blinking.

4

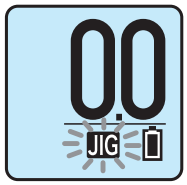

5.Turn ON the clutch to start Jigging mode.

6.Jigging mode stops when the line is wound up to the Jerk Range. Then, turn OFF the clutch and lower the jig again.

7.If you repeat the Jigging mode, press PICKUP BUTTON again.

Notes on Jigging mode

1.Jigging mode works up to the Auto Stop point.
2.When the clutch is turned OFF in the middle of the Jerk Range, the winding stops with the indicator JIG blinking continuously. When the clutch is turned ON again, Jigging mode restarts. But, if the winding is started from the point of the counter indication as 9.0 m or less, the indicator JIG does not blink and this mode is paused even when the clutch is turned OFF.
3.From the point of the counter indication as 9.0 m or less to the Auto Stop point, the wind-up speed will be less than [20].
4.Simultaneous setting of Jigging mode and PICKUP/PAUSE setting is not allowed. The mode you set later will be given priority.
JIG (Jigging mode), PIC (Pickup), or NO-PIC (Pause) will be displayed on the counter.

ReelSchematic

Functional setting [6.Jigging mode]

How to set Custom parameters for each Jerk mode

One Pitch Jerk

You can set “Jerk Length”, “Jerk Speed”, “Jerk Interval (winding stop time)”, and ”Jerk Range”.
* Each figure shown below shows the standard setting (default setting).



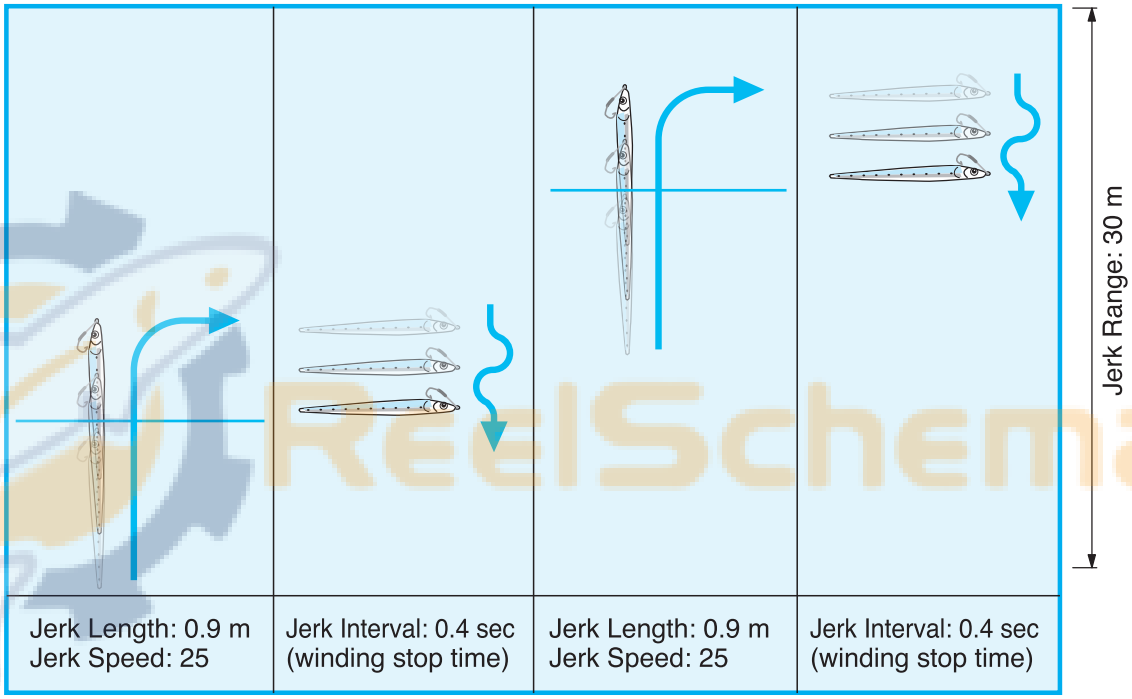

The setting screens appear subsequently as shown below.

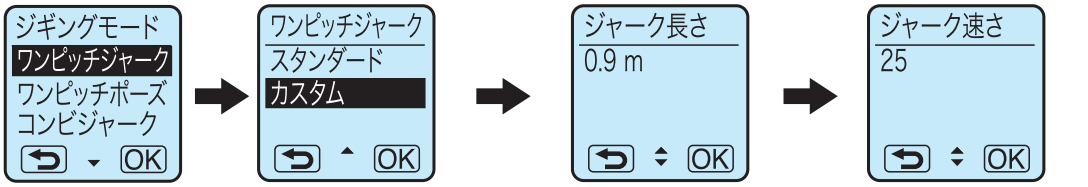

Set a value of 0.1 to 10.0 m in increments of 0.1 m.

Set a value of 1 to Hi.



Set a value of 0.1 to 10.0 sec in increments of 0.1 sec.

Set a value of OFF or 1 to 100 m in increments of 1 m.

Water Depth screen appears when completing the setting.

ReelSchematic

Functional setting [6.Jigging mode]

One Pitch Pause

Each setting of “Jerk Pattern (setting of number of steps)”, “Jerk Length”, “Jerk Speed”, “Jerk Interval (winding stop time)”, and ”Jerk Range”.
* Each figure shown below shows the standard setting (default setting).
* The setting of conventional “Jigging” is the same as this mode.

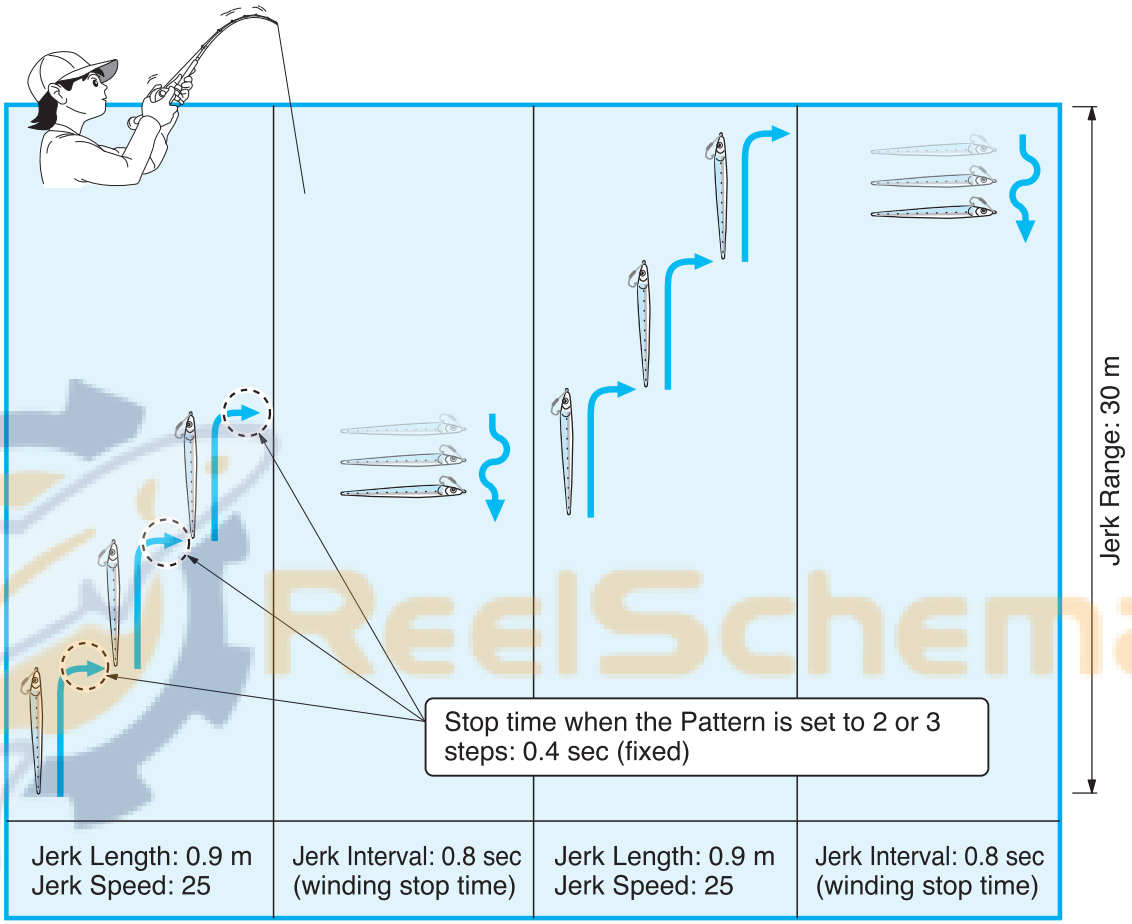

The setting screens appear subsequently as shown below.

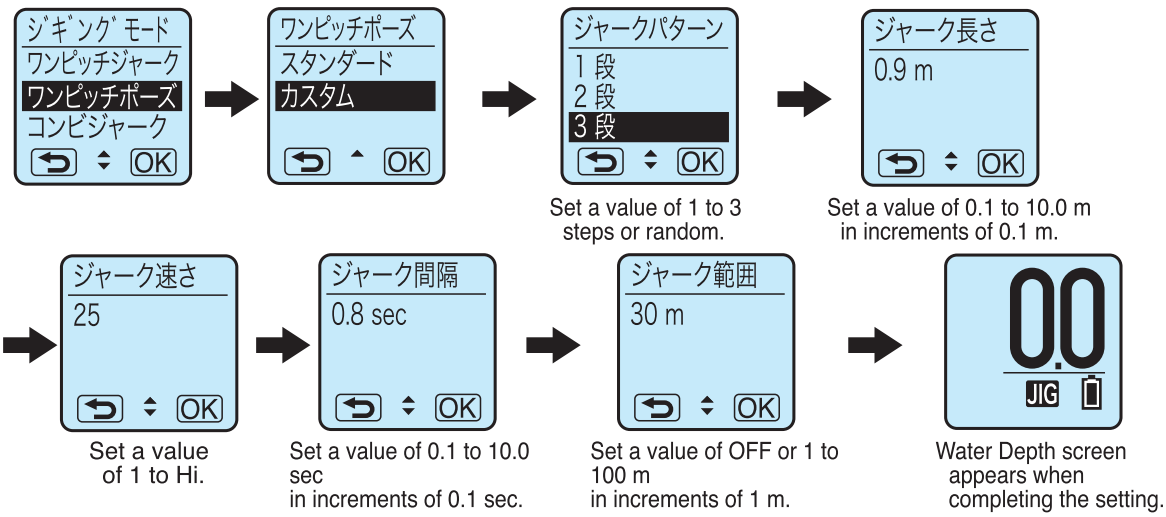

ReelSchematic

Functional setting [6.Jigging mode]

■ Combi Jerk

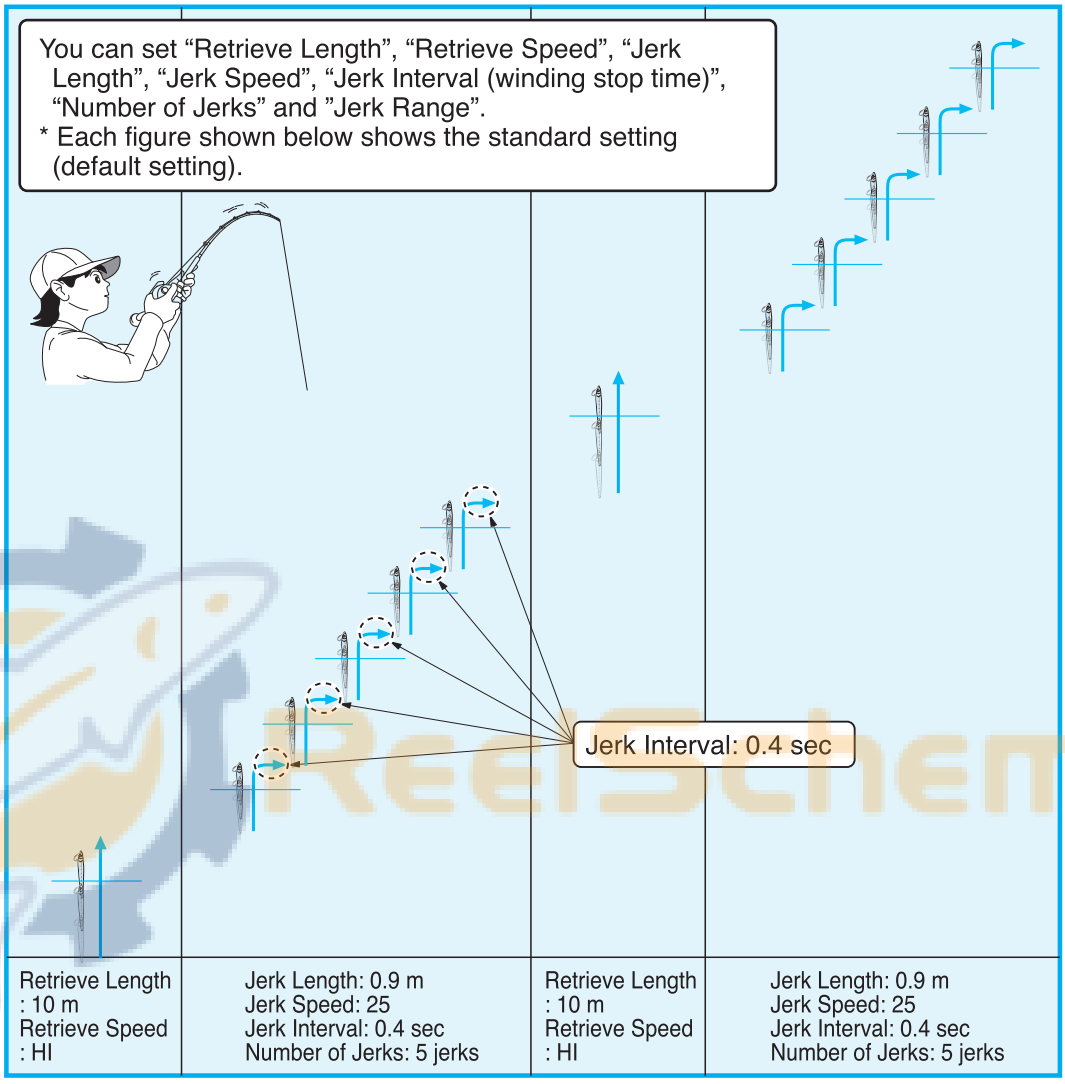

The setting screens appear subsequently as shown below.

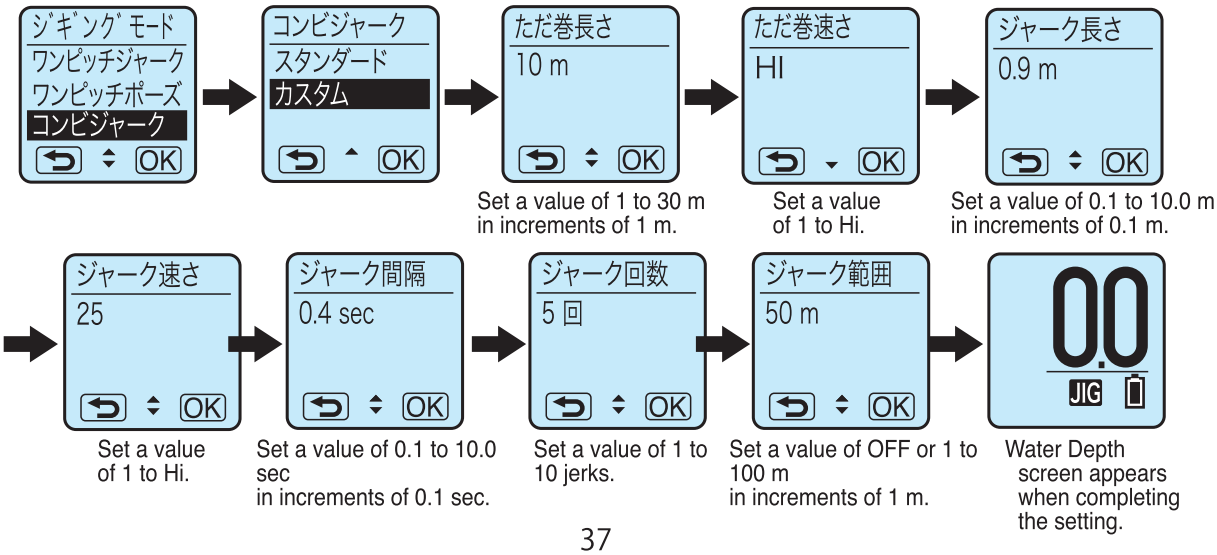

Functional setting [7. Pickup/Pause]

Pickup

This is a useful function to allow the electric reel to wind up the line only while you press and hold the PICK UP BUTTON. The default of pickup speed is set to 15. You can change it in the Menu screen.

Pause

This is a useful function to allow the electric reel to stop winding up the line only while you press and hold the PICK UP BUTTON. When you release the button, the reel restarts winding up at the speed specified for the Jog Power Lever.

How to set Pickup/Pause parameters

1. Press and hold both MEMO BUTTON and PICK UP BUTTON simultaneously for 2 seconds to go to the Menu screen.

※The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

2. Select “Pickup/Pause” with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON).

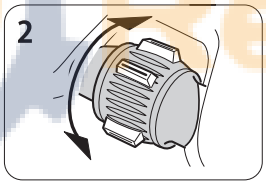

3. Set the speed with the Jog Power Lever.

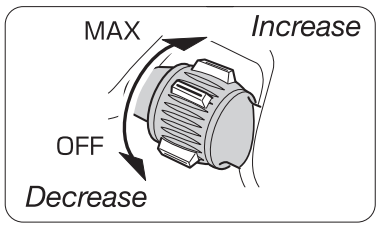

You can set a value of 1 to Hi.
(The figure shows the example of Pickup set to 15)

* If you select “Pickup” at the step “2” above, “step 3” and “step 4” is skipped and the screen returns to the Water Depth screen.

4. Press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON)
to complete the setting and return to Water Depth screen.

* You are not allowed to wind up the line within the range of “Auto Stop point + 3 m” for safety.

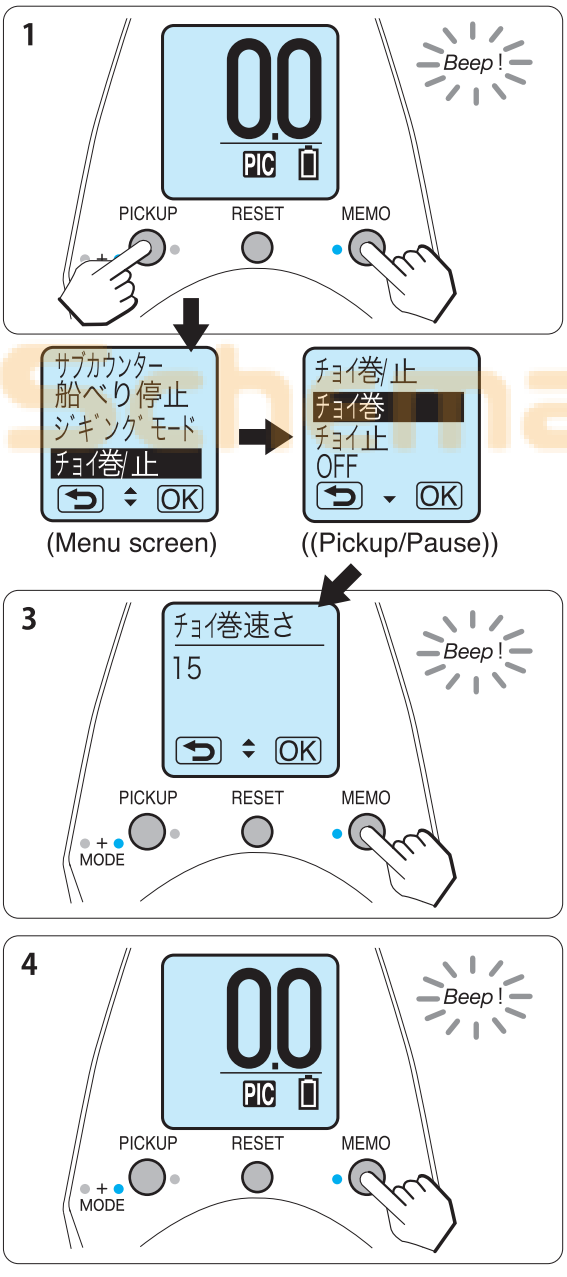

Functional setting [8. Motor ON/OFF Interlocking Clutch]

The motor rotation stops when the clutch is turned OFF during electric winding (while the motor is rotating). The electric winding (motor rotation) automatically restarts when the clutch is turned ON again. This captures sensitive signals of hits and strikes such as fish-bite and squid-touch while the jig is falling.

How to operate Motor ON/OFF Interlocking Clutch

1) Operation while the clutch is turned OFF (motor is stopped)

You can set the wind-up speed (1 to Hi) with the JOG Power Lever while the water depth is 9.1 m or more.
*The value shown at the left bottom of the counter screen blinks.
When the clutch is turned ON, electric winding is started at the set wind-up speed (motor rotation).

2) Operation while the clutch is OFF (motor rotation)

You can set the wind-up speed (1 to Hi) with the JOG Power Lever while the water depth is 9.1 m or more.
* The value shown at the left bottom of the counter screen blinks.
* Electric wind-up is performed at the set wind-up speed (motor rotation).
When the clutch is turned OFF, electric winding stops (motor stop).
You can alternately and repeatedly turn the clutch ON (motor rotation) or OFF (motor stop).

⚠ WARNING <Warning for your use of the product>

•Your fingers may be pinched or rolled in while the clutch is turned ON. Immediately turn OFF the Lever to stop the operation.

⚠ CAUTION <Caution for your use of the product>

**Do not turn the clutch ON while the line is tangled around the rod tip. Otherwise, the rod tip may be broken.*
**Do not turn the clutch ON while the line is backlashed. Otherwise your reel may be broken.*

⚠ CAUTION <Caution for your operation>

**When the line is wound up to the point of water depth less than 9.0 m while repeating the winding, the wind-up speed will be reset.*
In such case, set it again.
**The set wind-up speed is disabled during the operation in Jigging mode or Pickup mode.*

Functional setting [9. Drag Sound]

This is a function to alert you by electronic beep when the drag is pulled out.
You can select one from three types of alarm sounds and OFF.
It is set to “Pattern 1” (High-tone) by default.

Options for Drag Sound

Pattern 1: High-tone
Pattern 2: Middle tone
Pattern 3: Low-tone
OFF: No alarm beeping

How to set Drag Sound

1. Press and hold both MEMO BUTTON and PICKUP BUTTON simultaneously for 2 seconds to go to the Menu screen.

*The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

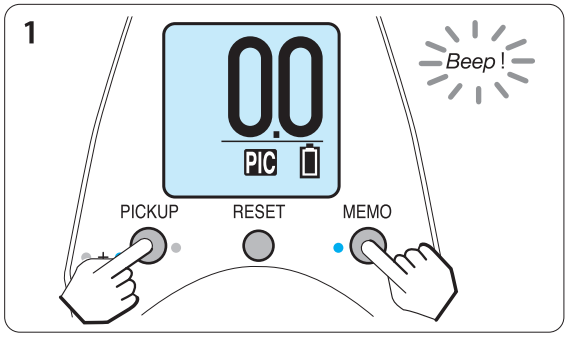

2. Select “Drag Sound” with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON).

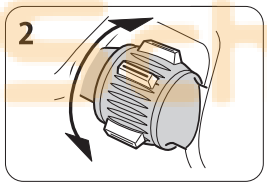



(Menu screen)

3. 3. Select one of options for “Drag Sound” and press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON).

*It is set to “Pattern 1” by default.

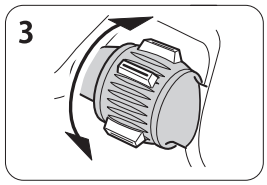



(Menu screen)

Functional setting [10. Depth Alarm]

This is a function to inform you the water depth counted every 10 m by alarm beeping.
You can select the alarm setting for both Fall (FL) and Wind-up (UP).
* It is set to “FL 1” and “UP 1” by default.

Options for Alarm Sound

You can select one of four options for Alarm Sound including alarm beep OFF.
(1)FL/UP 0: Alarm beep OFF
(2)FL/UP 1: One beep repeated every 10 m of water depth
(3)FL/UP 3: One to three beeps repeated every 10 m of water depth
(4)FL/UP 5: One to five beeps repeated every 10 m of water depth
The options (1) to (4) can be set for each of Fall and Wind-up to ON or OFF.

How to set Depth Alarm

1. Press and hold both MEMO BUTTON and PICKUP BUTTON simultaneously for 2 seconds to go to the Menu screen.

*The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

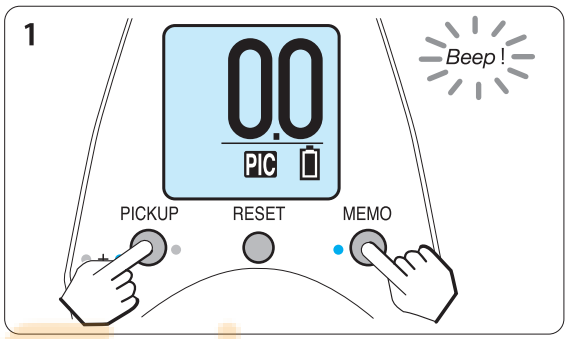

2. Select “Depth Alarm” with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON).

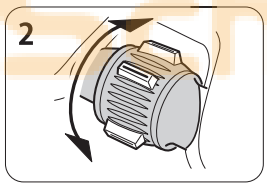



(Menu screen)

3. Select “ON” under “Depth Alarm” with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON).
** It is set to “ON” by default.

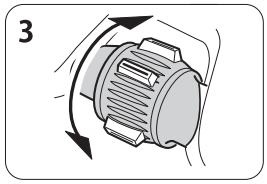



(Menu screen)

4. Select one of options for “Depth Alarm (Fall)” and press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON).
** It is set to “FL 1” by default.

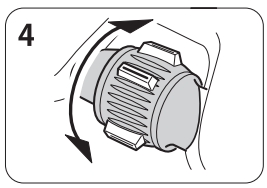

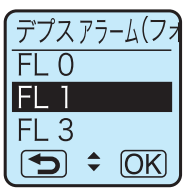

(Menu screen)

5. Select one of options for “Depth Alarm (Wind-up)” and press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON).
** It is set to “UP 1” by default.

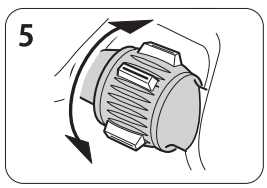

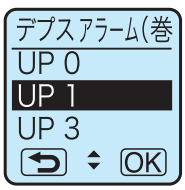

(Menu screen)

ReelSchematic

Functional setting [11. Constant Speed Winding mode]

Constant Speed Winding mode

In this Constant Speed Winding mode, your line is wound up at the preset speed regardless of any load applied to the reel, while the winding speed normally slows down when a load is applied to the reel.
*Operation may become unstable depending on the condition of the sea or the movement of fish. In such case, cancel this mode.

1. Press and hold both MEMO BUTTON and and PICK UP BUTTON simultaneously for 2 seconds to display the MENU screen.

※The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

2. Select "Constant Speed Winding" with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON).
Then, select "ON" with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON).

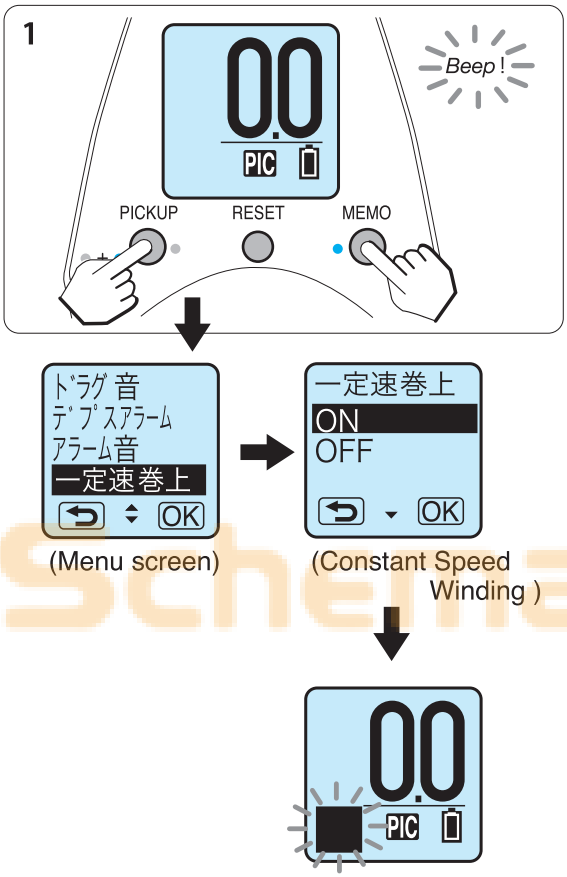

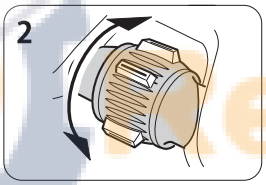

■ will appear at the lower left of the screen.

3. Adjust the Winding Speed you desire to keep with the Jog Power Lever and release your finger from the Jog Power Lever to complete the setting.
After a while, automatic control starts to keep the preset speed.

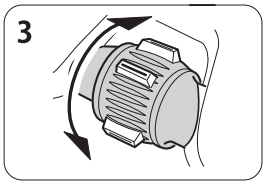

*The operating range is 1 to 30 on the scale of the Power Lever.
*While the Power Lever is set to (HI), Constant Speed Winding is disabled.
*If the load fluctuation is very large or if drag is set to relatively loose, operating the Jog Power Lever may cause the output to suddenly become larger or smaller. It is not abnormal.

ReelSchematic

Functional setting [12. Chumming Timer]

Chumming Timer

The display shows precisely the time having elapsed every since the rig was dropped.
It is very helpful to determine the pace for checking and changing of baits and sinkers.

-The display shows the time having elapsed since lowering of the rig started. You can roughly estimate the timing to chum or collect the rig.

-The Chumming Timer automatically starts from 7.0 m displayed on the water surface counter after throwing your terminal rig into the water.

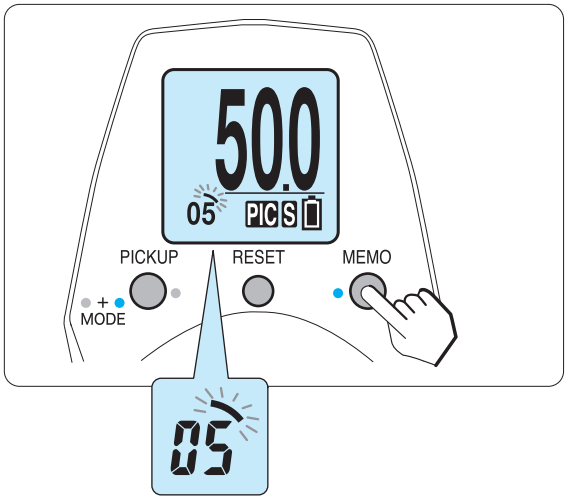

*The time is indicated in seconds if the remaining time is less than 60 seconds It is indicated in minutes if the remaining time is not less than 1 minute.
*The timer function may not be reset.
*For proper use of the timer, your next terminal rig feeding shall be made only after winding it up to the auto stop position at the boat side.

Attention

If you press the MEMO **BUTTON** *while chumming is in process, the timer indication will start from* 0 .

ReelSchematic

Functional setting [13. ChummingTimer winding]

Chumming Timer Winding

Professional fishing techniques of checking and changing of baits and sinkers for all levels including beginners! Once you have set the waiting time simply, the reel automatically starts winding up. You can enjoy fishing more effectively and easily.

-If you have set the waiting time for a single chumming to 5 minutes, the reel will automatically start winding up at a high speed to allow you to check and change baits and sinkers after preset 5 minutes have passed.

1. Press and hold both MEMO **BUTTON** and PICK UP **BUTTON** simultaneously for 2 seconds to go to the Menu screen.

※The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

2. Select the “Timer Winding” with the Jog Power Lever and press
300J OK (MEMO **BUTTON**)
300JL OK (PICK UP **BUTTON**).

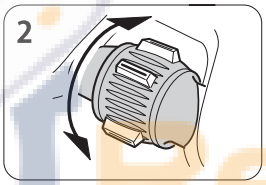

3. Select the waiting time (in minute) for checking and changing of baits and sinkers with the Jog Power Lever.

Turn the Jog Power Lever upward to increase the value. Or, turn it downward to decrease the value. (In the figure, the waiting time is set to 5 minutes)

4. Press
300J OK (MEMO **BUTTON**)
300JL OK (PICK UP **BUTTON**).
If the screen returns to the “Water Depth screen”, then the setting is completed.

The indicator T (Timer) will light up on the screen.

5. The reel will automatically starts winding up the rig at its maximum speed when the preset time has elapsed while the clutch is powered on after lowering the terminal rig.

-An audible alarm will sound before the reel starts winding.
-If the clutch is powered OFF, the reel will not start automatic winding up.
-The chumming timer automatically starts when the depth counter determined the depth 7.0 m. But, you can reset the timer and restart it by pressing MEMO **BUTTON** .

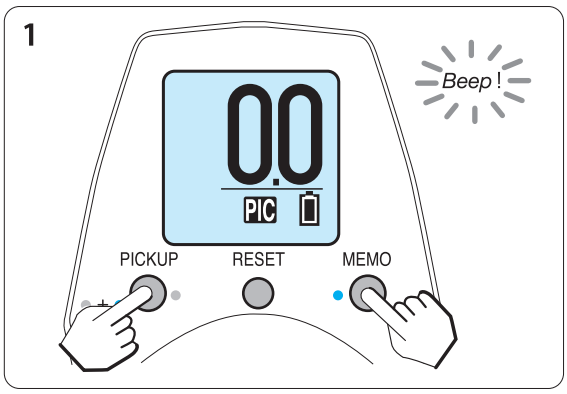

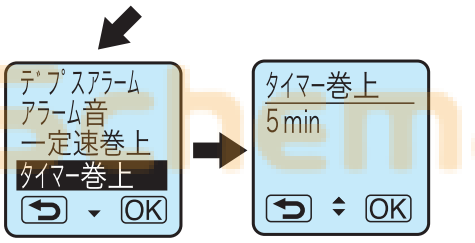

(Menu screen) (Example of display)

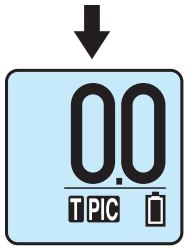

-For proper use of Timer winding function, press MEMO **BUTTON** when your terminal rig has reached the strike zone.

ReelSchematic

Functional setting [14. Drift mode]

How to use drift mode

1. Press and hold both MEMO BUTTON and PICKUP BUTTON simultaneously for 2 seconds to go to the Menu screen.

※The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

2. Select "Drift" mode with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON).
Then, select "ON" with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON).

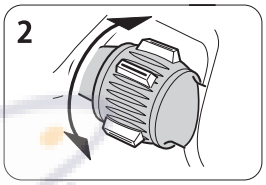

3. Select the Bite Alarm ON or OFF with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON).

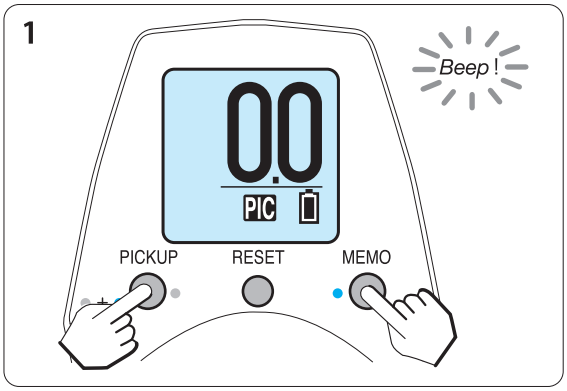

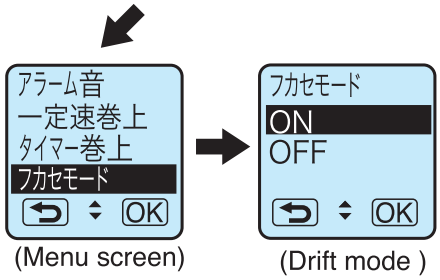

(Menu screen) (Drift mode)



(Hit Alarm)

When the reel detects a move quicker than the preset sensitivity, the hit alarm goes off and informs you with the sound that there was a hit, allowing you to know that a fish hit it while you were not looking at it.

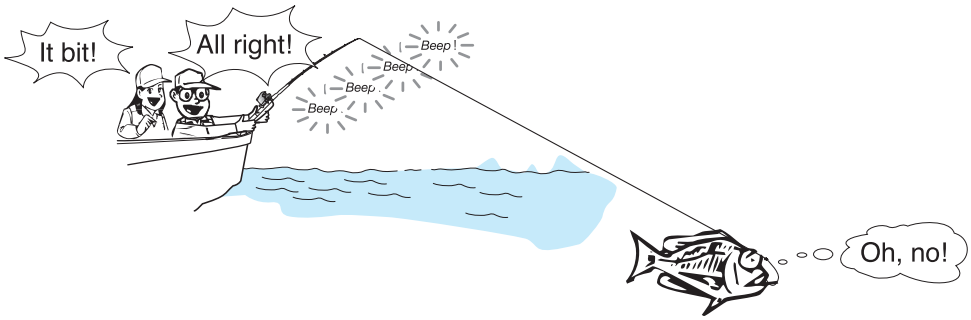

*The alarm does not go off when it is turned off.

ReelSchematic

Functional setting [14. Drift mode]

4. Select Bite Sensitivity with the Jog Power lever and press
   300J OK (MEMO BUTTON)
   300JL OK (PICK UP BUTTON) .

-You can set the sensitivity level to detect a bite.
 Adjust the sensitivity level according to the sea condition such as tide speed and wave size.

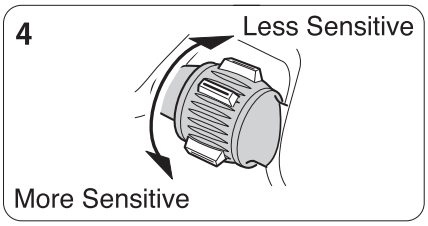



(Example of display)

← Increase its sensitivity
(The alarm goes off more easily.)

Decrease its sensitivity →
(The alarm goes off less easily.)

(Settings) 1 2 5 10
Default Setting

-The setting range is 1 to 10.

5. Select Drift Click ON or OFF with Jog Power Lever and press
   300J OK (MEMO BUTTON)
   300JL OK (PICK UP BUTTON) .
   to complete the setting.

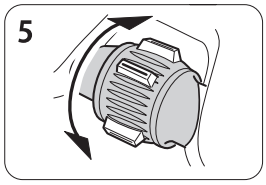



(Example of display)

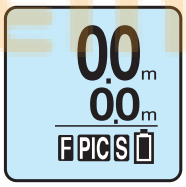

-If Drift Click is set to ON, the alarm sounds every time when 1 m of the line goes out so that you can recognize the water flow (line feeding speed) by the sound.
-It starts from the water depth of 7 m.
-When the setting of the Drift mode is completed, F is displayed on the water depth screen.
-When the Drift mode has been set, the water depth will be automatically displayed in two vertical layers.
*When it is in the status of Drift mode ON, any setting changes of the sub-counter is not reflected to the screen, even if you change it from the menu screen.

Fishing Zone memory

-This function automatically memorize the fishing zone where the Bite Alarm sounded. Even if you make haste to operate the rod, you can confirm a fishing zone because the Inverse Counter blinks and indicates the fishing zone where the Bite Alarm sounded.
*When you press the MEMO BUTTON , the depth of the fishing zone memorized in the Fishing Zone memory is converted and displayed as 0.0 .
*When the zone is located shallower than the memorized zone, the data is not updated until the reel stops at the boat side.

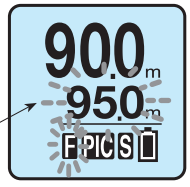

<Example of Fishing Zone memory>

(This shows that the line is temporarily wound up by 5.0 m from the depth of 95.0 m where the alarm sounds.)

Functional setting [15.Water depth recalibration]

Water depth recalibration

You can recalibrate the counter if it does not match the depth identified by the color markings on your line.

Use

You can recalibrate the counter while you are fishing!

(Example) To recalibrate the counter to 100 m to comply with the depth identified as just 100 m by the color of the line, though the counter shows 103 m.

1. When the water depth to be corrected is displayed, press and hold both MEMO BUTTON and PICKUP BUTTON simultaneously for 2 seconds to go to the Menu screen.

※The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

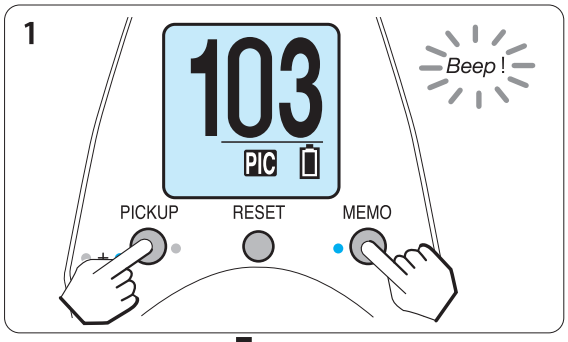

2. Select the “Water depth recalibration” with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON).

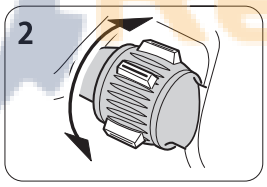



(Menu screen)

*The scrolling text《Do you wish to continue?》is displayed. If you confirm the choice, press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON)
again.
*Any correction cannot be made if the water depth is less than 10.0 m.



3. Select your desired water depth with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON)
to return to the Water Depth screen.



(Example of display)

4. Now, the water depth has been corrected.



Functional setting [16. Actual fishing history]

Actual fishing history

You can check the total winding distance and the total hours of fishing using the electric reel.

1. Press and hold both MEMO BUTTON and PICKUP BUTTON simultaneously for 2 seconds to go to the Menu screen.

※The figure shows 300J
(in the case of 300JL, the buttons PICK UP and MEMO are reversely allocated).

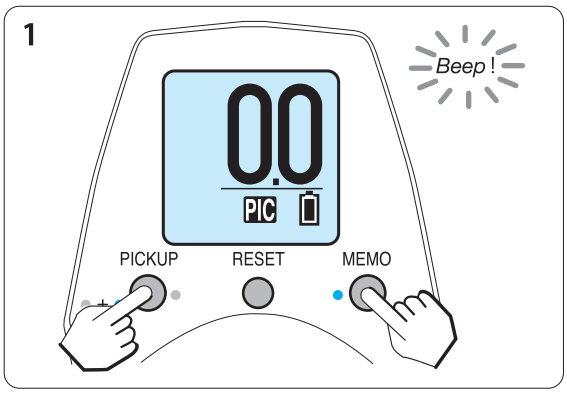

2. Select the “Actual fishing history” with the Jog Power Lever and press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON).

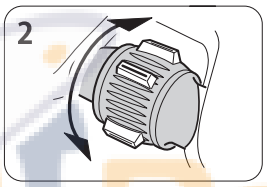

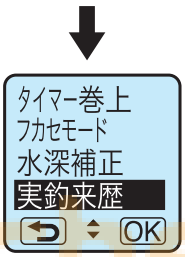

(Menu screen)

3. You can check the total winding distance and the total hours of fishing using the electric reel. Press
300J OK (MEMO BUTTON)
300JL OK (PICKUP BUTTON)
to return to the Water Depth screen.



(Example of display)

ReelSchematic

Functional setting [17. Other useful functions]

Various alarms

Many kinds of information are indicated by audible alarms such as auto stop alarm and range memory alarm.



Jog Power Lever alarm

-When you place the Jog Power Lever at MAX or OFF position, an alarm beeps to tell you its position.

Auto stop alarm

-While winding up, an alarm shortly beeps starting 6 m below the auto stop point, at two meter intervals, to tell you that the rig is coming closer to the auto stop point. When it reached the auto stop point, an alarm sounds for longer.

Range memory alarm

-While lowering your rig back into the strike zone, an alarm shortly beeps starting 10 m above the memorized depth range of the strike zone, at 2 m intervals, to tell you that the rig is reaching closer to the strike zone. When the rig reached the strike zone, an alarm sounds for longer.

*This zone memory alarm is designed not to sound unless the line has been wound more than 6 m above the memorized depth and the line is fed again for the purpose of preventing the alarm from frequently sounding while seeking the strike zone.

-Fishing Zone alarm is enabled by setting "Inverse counter" from the "Sub counter" menu to set it.

Switch alarm

-Each time a button is pressed, a beep is sounded to allow you to confirm that you have surely pressed a button (You can set this alarm to OFF in the setting of functions from the Menu screen).

Excessive voltage alarm

-If you connected a power source with a voltage higher than the acceptable range, a continuous alarm will sound to warn you to stop operation. DO NOT operate the reel with such battery.

Timer winding alarm

-This alarm sounds to tell you before starting a timer winding.

Alarm sound ON/OFF setting

You can set the alarm sound to OFF.

-It is set to ON by default.
-Once the alarm sound has been set to OFF, the alarm will no longer sound even if you have pressed buttons or have used the power lever for operation.
-Bite Alarm, Drift click, and Drag sound will not be turned off in the Drift mode, even if alarm sound has been set to OFF.

1.Select “Alarm sound” in the Menu screen.
2.Select OFF with the Jog Power Lever.
3.Press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON).
If the screen returns to the “Water Depth screen”, then the setting is completed.

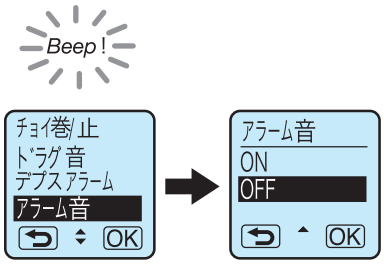

Functional setting [17. Other useful functions]

Language setting

You can select the language to be displayed on the LCD screen from Japanese, English, Traditional Chinese, or Korean.

1.Select “Language” in the Menu screen.
2.Select your desired language with the Jog Power Lever.
3.Press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON).
If the screen returns to the “Water Depth screen”, then the setting is completed.

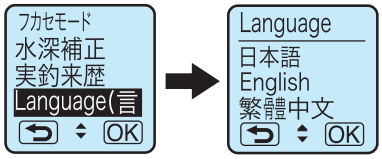

Unit setting

You can select “m” (meter) or “ft” (feet) for a unit to be used for the length.
*Note that the unit is represented in “m” (in meters) only when entering a value in “Main line input” even if “ft” (in feet) has been set for the unit.

1.Select “Unit” in the Menu screen.
2.Select your desired language with the Jog Power Lever.
3.Press
300J OK (MEMO BUTTON)
300JL OK (PICK UP BUTTON).
If the screen returns to the “Water Depth screen”, then the setting is completed.

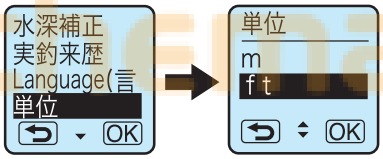

Counter lamp

The lamp built in the counter always lights up.

-While the reel is powered ON, backlighting of the display always provides easier reading for fishing in the dark.

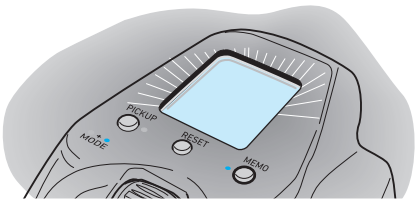

Circuit breaker display

-When an excessive heavy load is applied on the reel or an excessive temperature rise is detected, the circuit breaker will be tripped and the winding operation will be stopped to prevent damage to the reel body. It stops for 5 seconds if an excessive load is applied, or for 15 seconds if an excessive temperature rise occurs.

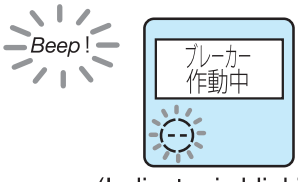

(Indicator is blinking)

Functional setting [18. How to remove the handle knob]

1. Holding the handle knob with your hand, loosen the handle knob cap by turning it counter-clockwise to loosen using a coin and remove it.

*Be sure to fit a coin properly onto the groove on the handle knob cap before turning it. Otherwise, the handle knob cap will be damaged while turning it.

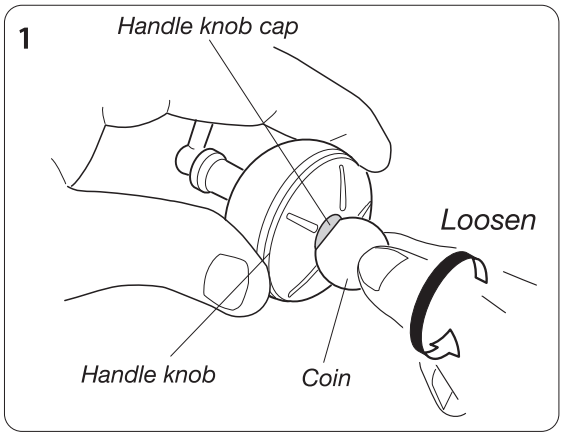

2. Loosen and remove the screw fixed inside of the knob using a screw driver.

*Note that the screw is coated with a slack preventing agent and it is hardly loosened. Be careful not to damage the screw head.

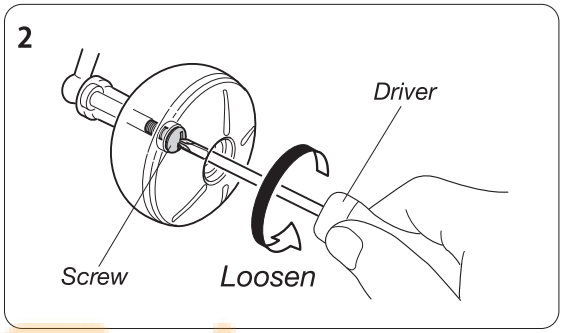

3. The handle knob is composed of as shown in the figure.

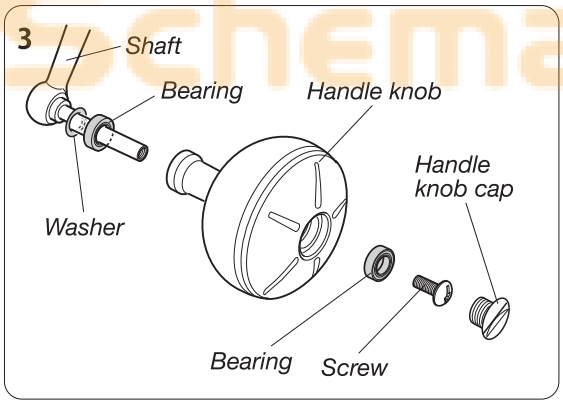

ReelSchematic

Functional setting [19. How to change the Handle Arm length]

1. Holding the handle arm with your hand, loosen (turn counter-clockwise) the two screws on the handle lock plate with a flat head screwdriver and remove them.

*The handle arm is fixed to 75 mm length by factory default
*Be sure to engage the head of the screwdriver securely into the groove on the handle lock plate screw before turning it. Otherwise, the handle lock plate screw will be damaged while turning it.

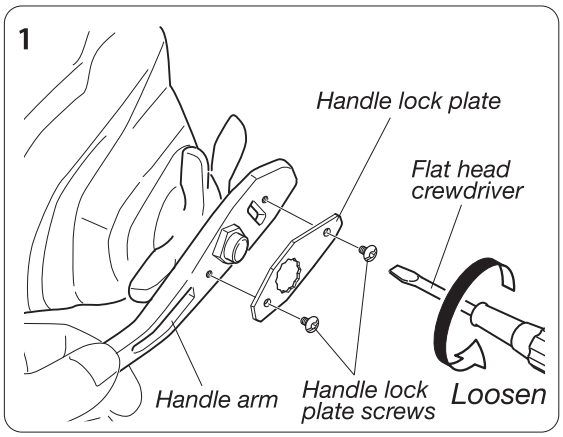

2. Loosen the handle nut with a wrench (12mm) and remove it.

*For the model 300J, turn the handle nut counter-clockwise (left) to loosen.
*For the model 300JL, turn the handle nut clockwise (right) to loosen.

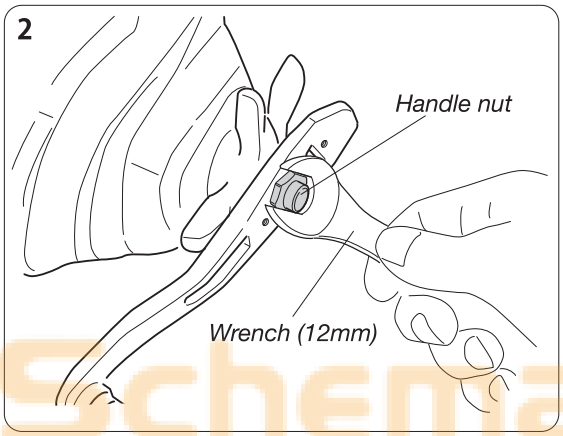

3. Pull the handle arm out from the gear shaft and insert it to the hole for your desired handle arm length.

*Shorter: 75 mm (default when product is shipped)
*Longer: 85 mm

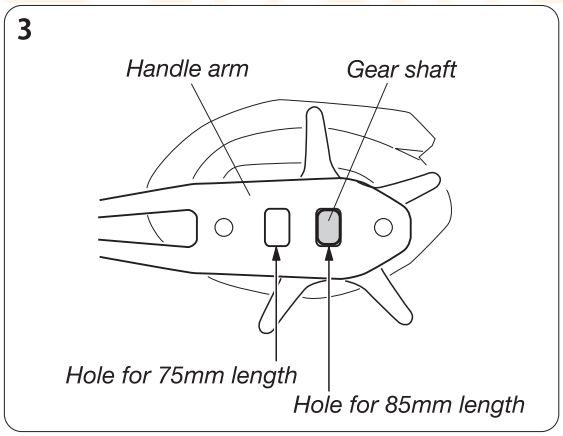

4. Tighten the handle nut with the wrench (12mm) to fix it.

*For the model 300J, turn the handle nut clockwise (right) to tighten.
*For the model 300JL, turn the handle nut counter-clockwise (left) to tighten.
*Be sure to tighten the handle nut firmly so that the handle is fixed securely without rattling.

5. Holding the handle arm with your hand, tighten the two handle lock plate screws with the flat head screwdriver to fix the handle lock plate.

*Be sure to engage the head of the screwdriver securely into the groove on the handle lock plate screw before turning it. Otherwise, the handle lock plate screw will be damaged while turning it.

ReelSchematic

Reel Specifications

Reel Specification list

SEABORG G300J/JL

Product name			300J：00810024 / 300JL：00810025
Gear ratio(manual winding)			6.0:1
Weight (g)			575
Max Drag power (kg)			16
Line Capacity (m) *"Bright" refers to our product "Tana Sensor Bright (PE)".	Bright (model-m)	2	700
		3	400
		4	300
		5	230
	Nylon (lb-m)	5	280
		6	200
Number of ball bearings (Ball / Roller)			18/1
Power-supply voltage			DC12V～16.8V
Maximum winding power *1 (Kg)			49
Normal winding speed (with 1kg load) *2(m/min)			146
AFS standard winding power *3(Kg)			14
JAFS standard winding speed *3(m/min)			190
Current (A)	No load		3.5
	Stall		5.5
	Max		25
Speed shifting	No load		0 – 190 m / min (continuous shifting)
Compatible battery			DAIWA Super Lithium Series DAIWA Tough Battery Series

*1:Maximum winding power: Reference value of shaft torque at supply voltage 13V （Kg＝Kgf- cm）
*2:Normal winding speed: Average winding speed of 100 m line with 1kg load at supply voltage 13V
*3:JAFS standard winding speed / winding speed = Regulation of JFTMA (Japan Fishing Tackle Manufacturer's Association), actual measurement value at supply voltage 13V

*The line winding capacity is listed for your reference only and it depends on the manufacturer, the item, and the tension.

Counter display

Depth display range	Upper counter: 0.0 to 3,000 m Lower counter: - 3,000 m to 3,000 m
Usable temp. range	-10 to +60 (degrees centigrade)

*The specifications are subject to change without prior notice for product improvement.

ReelSchematic

Parts List

SEABORG G300J/JL

※The figure shows 300J

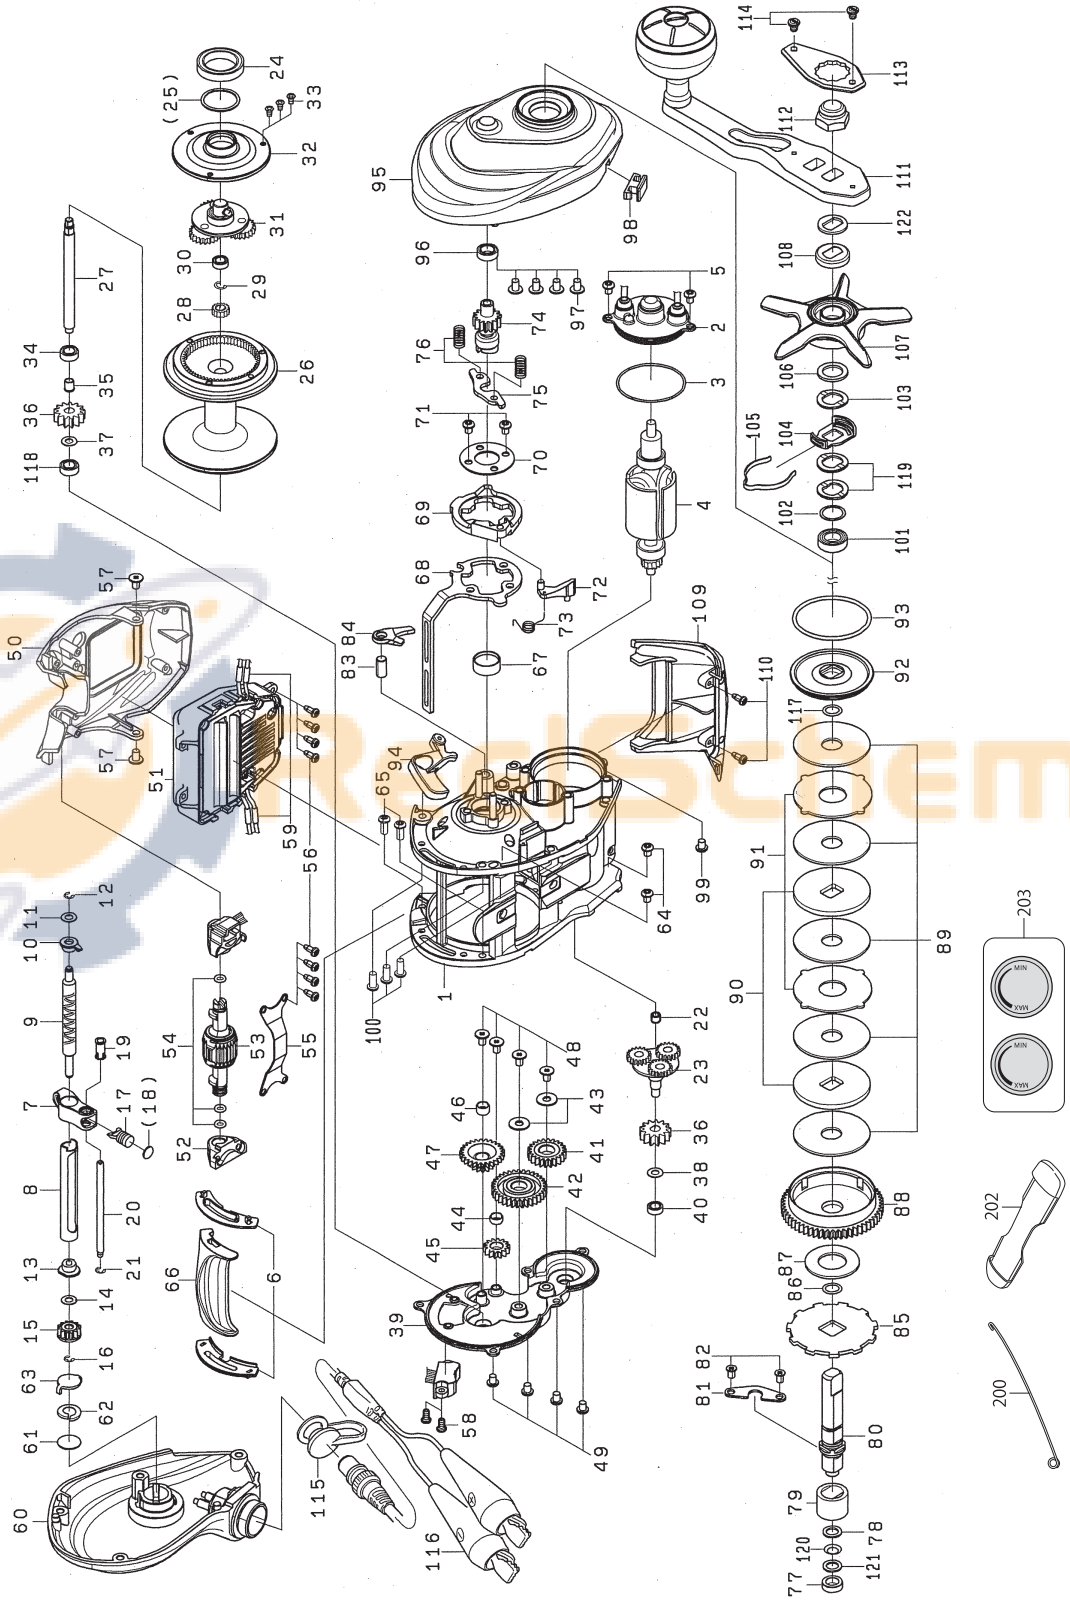

Parts List

SEABORG G300J/JL

No,	Parts Name		No,	Parts Name	
	300J	300JL		300J	300JL
1	FRAME	FRAME	65	LS PLATE SCREW (B)	RS PLATE SCREW (B)
2	MOTOR HOLDER	MOTOR HOLDER	66	CLUTCH LEVER (A)	CLUTCH LEVER (A)
3	MOTOR HOLDER O RING	MOTOR HOLDER O RING	67	CLUTCH CAM BEARING	CLUTCH CAM BEARING
4	MOTOR	MOTOR	68	CLUTCH CAM PLATE (A)	CLUTCH CAM PLATE (A)
5	MOTOR HOLDER SCREW	MOTOR HOLDER SCREW	69	CLUTCH CAM	CLUTCH CAM
6	CLUTCH LEVER PLATE	CLUTCH LEVER PLATE	70	CLUTCH CAM PLATE (B)	CLUTCH CAM PLATE (B)
7	LEVEL WIND	LEVEL WIND	71	CLUTCH CAM PLATE SCREW	CLUTCH CAM PLATE SCREW
8	WORM SHIELD	WORM SHIELD	72	KICK LEVER	KICK LEVER
9	WORM SHAFT	WORM SHAFT	73	KICK LEVER SPRING	KICK LEVER SPRING
10	WORM SHAFT COLLAR (A)	WORM SHAFT COLLAR (A)	74	PINION	PINION
11	WORM SHAFT WASHER	WORM SHAFT WASHER	75	CLUTCH PLATE	CLUTCH PLATE
12	WORM SHAFT RETAINER	WORM SHAFT RETAINER	76	CLUTCH PLATE SPRING	CLUTCH PLATE SPRING
13	WORM SHAFT COLLAR (B)	WORM SHAFT COLLAR (B)	77	GEAR SHAFT COLLAR	GEAR SHAFT COLLAR
14	WORM SHAFT GEAR WASHER	WORM SHAFT GEAR WASHER	78	GEAR SHAFT WASHER (A)	GEAR SHAFT WASHER (A)
15	WORM SHAFT GEAR	WORM SHAFT GEAR	79	DRAG COLLAR	DRAG COLLAR
16	WORM SHAFT RETAINER	WORM SHAFT RETAINER	80	GEAR SHAFT	GEAR SHAFT
17	PAWL	PAWL	81	GEAR SHAFT PLATE	GEAR SHAFT PLATE
18	PAWL WASHER	PAWL WASHER	82	GEAR SHAFT PLATE SCREW	GEAR SHAFT PLATE SCREW
19	LEVELWIND POST COLLAR	LEVELWIND POST COLLAR	83	STOPPER PIN	STOPPER PIN
20	LEVELWIND POST	LEVELWIND POST	84	STOPPER	STOPPER
21	LEVELWIND POST RETAINER	LEVELWIND POST RETAINER	85	RATCHET	RATCHET
22	MOTOR GEAR COLLAR	MOTOR GEAR COLLAR	86	GEAR SHAFT O RING	GEAR SHAFT O RING
23	MOTOR GEAR	MOTOR GEAR	87	DRIVE GEAR WASHER	DRIVE GEAR WASHER
24	SPOOL PLATE BALL BEARING	SPOOL PLATE BALL BEARING	88	DRIVE GEAR	DRIVE GEAR
25	SPOOL PLATE BALL BEARING WASHER	SPOOL PLATE BALL BEARING WASHER	89	DRAG WASHER	DRAG WASHER
26	SPOOL	SPOOL	90	DRAG DISC WASHER	DRAG DISC WASHER
27	SPOOL SHAFT	SPOOL SHAFT	91	DRAG LIP WASHER	DRAG LIP WASHER
28	SPOOL SHAFT GEAR	SPOOL SHAFT GEAR	92	DRAG DISK COLLAR	DRAG DISK COLLAR
29	SPOOL SHAFT GEAR RETAINER	SPOOL SHAFT GEAR RETAINER	93	DRAG DISK COLLAR O RING	DRAG DISK COLLAR O RING
30	SPOOL SHAFT BALL BEARING	SPOOL SHAFT BALL BEARING	94	CLUTCH LEVER	CLUTCH LEVER
31	SPOOL GEAR	SPOOL GEAR	95	RS PLATE	LS PLATE
32	SPOOL PLATE	SPOOL PLATE	96	PINION BALL BEARING	PINION BALL BEARING
33	SPOOL PLATE SCREW	SPOOL PLATE SCREW	97	PINION BALL BEARING SCREW	PINION BALL BEARING SCREW
34	SPOOL BALL BEARING (MAG)	SPOOL BALL BEARING (MAG)	98	LINE STOPPER	LINE STOPPER
35	SPOOL SHAFT COLLAR	SPOOL SHAFT COLLAR	99	RS PLATE SCREW (A)	LS PLATE SCREW (A)
36	IDLE GEAR(A)	IDLE GEAR(A)	100	RS PLATE SCREW (B)	LS PLATE SCREW (B)
37	SPOOL SHAFT BEARING WASHER	SPOOL SHAFT BEARING WASHER	101	HANDLE BALL BEARING	HANDLE BALL BEARING
38	IDLE GEAR WASHER	IDLE GEAR WASHER	102	HANDLE BEARING WASHER(A)	HANDLE BEARING WASHER(A)
39	SETPLATE	SETPLATE	103	DRAG SPRING WASHER(A)	DRAG SPRING WASHER(A)
40	IDLE GEAR BALL BEARING	IDLE GEAR BALL BEARING	104	DRAG HOLDER	DRAG HOLDER
41	IDLE GEAR (B)	IDLE GEAR (B)	105	DRAG LEAF SPRING	DRAG LEAF SPRING
42	IDLE GEAR (C)	IDLE GEAR (C)	106	STAR DRAG WASHER	STAR DRAG WASHER
43	IDLE GEAR WASHER	IDLE GEAR WASHER	107	STAR DRAG	STAR DRAG
44	IDLE GEAR (D) COLLAR	IDLE GEAR (D) COLLAR	108	HANDLE COLLAR	HANDLE COLLAR
45	IDLE GEAR (D)	IDLE GEAR (D)	109	FINGER COVER	FINGER COVER
46	IDLE GEAR (E) COLLAR	IDLE GEAR (E) COLLAR	110	FINGER COVER SCREW	FINGER COVER SCREW
47	IDLE GEAR (E)	IDLE GEAR (E)	111	HANDLE	HANDLE
48	IDLE GEAR SCREW	IDLE GEAR SCREW	112	HANDLE NUT	HANDLE NUT
49	SETPLATE SCREW	SETPLATE SCREW	113	HANDLE LOCK PLATE	HANDLE LOCK PLATE
50	IC MODULE COVER	IC MODULE COVER	114	HANDLE LOCK PLATE SCREW	HANDLE LOCK PLATE SCREW
51	IC MODULE	IC MODULE	115	CONNECTOR CAP	CONNECTOR CAP
52	JOG POWER LEVER HOLDER	JOG POWER LEVER HOLDER	116	CORD	CORD
53	JOG POWER LEVER	JOG POWER LEVER	117	GEAR SHAFT O RING	GEAR SHAFT O RING
54	JOG POWER LEVER O RING	JOG POWER LEVER O RING	118	SPOOL SHAFT BALL BEARING	SPOOL SHAFT BALL BEARING
55	JOG POWER LEVER PLATE	JOG POWER LEVER PLATE	119	DRAG SPRING WASHER(B)	DRAG SPRING WASHER(B)
56	COVER PLATE SCREW	COVER PLATE SCREW	120	GEAR SHAFT WASHER (B)	GEAR SHAFT WASHER (B)
57	IC MODULE COVER ACREW	IC MODULE COVER ACREW	121	GEAR SHAFT WASHER (C)	GEAR SHAFT WASHER (C)
58	SENSOR SCREW	SENSOR SCREW	122	HANDLE WASHER	HANDLE WASHER
59	CORD COVER	CORD COVER	200	LINE THROUGH	LINE THROUGH
60	LS PLATE	RS PLATE	201	REEL BAG L	REEL BAG L
61	MECHANICAL BRAKE KNOB WASHER (A)	MECHANICAL BRAKE KNOB WASHER (A)	202	STAND COVER	STAND COVER
62	MECHANICAL BRAKE KNOB WASHER	MECHANICAL BRAKE KNOB WASHER	203	STICKER	STICKER
63	MECHANICAL BRAKE KNOB WASHER (B)	MECHANICAL BRAKE KNOB WASHER (B)	204	MANUAL (sold separately)	MANUAL (sold separately)
64	LS PLATE SCREW (A)	RS PLATE SCREW (A)			

There may sometimes be a difference between the purchased reel and the Dismantled Parts Chart or the parts list above due to the adjustment process etc. We appreciate your understanding.

Trouble shooting

Symptom	Possible causes	To do	Ref. page
Motor does not respond to the power lever.	The counter displays 2.0 m.	It is a normal function to avoid over winding.	P30
	Did not pull the lever to OFF position.	Pull the lever to OFF and then move forward again to start winding.	P13
	Unstable power source.	Use another power source, such as electric reel specific batteries.	P9
	The clutch has been turned OFF.	Turn ON the clutch to restart winding-up.	P39
Counter display does not appear.	Battery charge is low.	Recharge the battery.	P9
	Cord worn or corroded.	Replace the cord.	P11
	Incorrect battery connection.	Connect clips correctly without + / - reverse connection.	P8
Auto stop function does not work.	Did not press RESET BUTTON at surface.	Set the surface depth to zero after setting rig.	P30
	Error for sinker weight or rocking of the boat.	Adjust settings of auto stop function.	P31
	Line is elongated.	Reset the depth counter at the surface.	P30
There are counter errors.	Line length has increased due to stretching.	Re-enter line data.	P17~26
		Recalibrate the water depth.	P47
	Line was wound while powered off during fishing.	Re-enter line data.	P17~26
	RESET BUTTON was pressed and held while feeding the line.	Re-enter line data.	
Pickup does not respond.	Speed has been set to “0” (zero).	Go to the Menu screen to set the Jigging again.	P38
	Distance is already below +3 m from auto stop.	Designed not to wind in this range for safety.	P38
The Jigging mode (PICKUP) button is pressed but Jigging does not start.	The clutch has been turned OFF.	Turn On the clutch to operate in the Jigging mode.	P33~37
	Distance is already below +3 m from auto stop.	Designed not to wind in this range for safety.	
	Pickup mode is selected.	Select Jigging mode in the MENU screen.	

*Contact your dealer if the reel does not function properly despite the above details being con firmed, in the event of other problems arising, and to order parts.

ReelSchematic

アフターサービスについて

本製品は当社の厳重な検査を経て出荷されたものですが、万一、故障が生じ修理が必要な場合、あるいは部品御注文の際はお買い求めの販売店、または下記のお客様センターまでお問い合わせください。なお、修理品は部品代のほか手数料をいただきますのでご了承ください。

お客様センター（無料）　携帯電話からもご利用できます

TEL　0120-506-204

受付時間：9:00～17:00　（土・日・祝祭日は除く）

ホームページ上からもご確認、お問い合わせできます

www.daiwa.com/jp/

グローブライド株式会社

〒203-8511 東京都東久留米市前沢3-14-16