DAIWA

BAITCASTING REEL

Please order by parts number, not key number
Veuillez indiquer le numéro de la pièce (Non "Key" No.)

STEEZATW1016H/1016SH

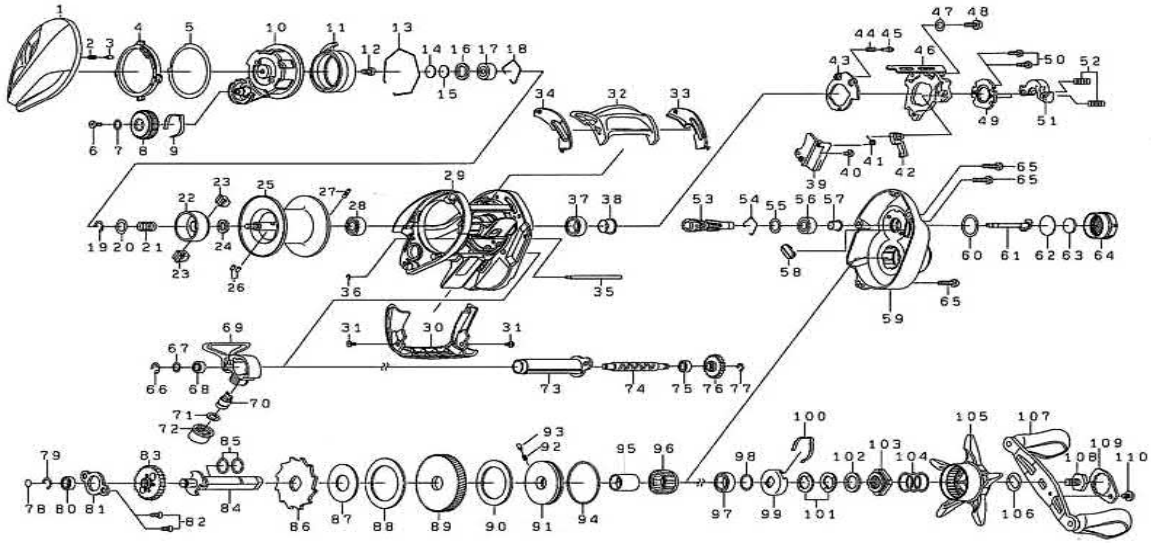

Key No.	Part No.	Part Name
1	J45-8301	LEFT SIDE PLATE
2	J28-6201	LEVER PLATE SPRING
3	J28-6301	LEVER PLATE PIN
4	J44-3301	LEVER PLATE (A)
5	J28-6101	LEVER PLATE (B)
6	G94-0402	BRAKE DIAL SCREW
7	H15-9201	BRAKE DIAL WASHER
8	J28-2603	BRAKE DIAL
9	H66-3401	BRAKE DIAL LEAF SPRING
10	J44-3101	SET PLATE ASSEMBLY
11	J29-6701	MAG HOLDER
12	H66-6002	SET PLATE SCREW
13	J31-5701	MAG HOLDER RETAINER
14	375-7404	L/S BB WASHER (A)
15	375-7411	L/S BB WASHER (B)
16	G18-5101	L/S BB WASHER ©
17	G51-1506	L/S BALL BEARING
18	F03-2201	L/S BEARING RETAINER
19	320-8202	SPOOL SPRING RETAINER
20	G15-0301	SPOOL SPRING WASHER
21	H53-7301	SPOOL SPRING
22	H16-7801	SPOOL INDUCT ROTOR
23	H45-4901	SPOOL COLLAR
24	F57-4303	SPOOL WASHER
19-28	Z02-3246	SPOOL ASSEMBLY
26	H66-5301	SPOOL HOLDER PIN
27	J25-2301	SPOOL PIN
28	G49-8511	SPOOL BALL BEARING
29	J44-1901	FRAME
30	J28-1802	FRONT PLATE
31	H53-1508	FRONT PLATE SCREW
32	J44-2301	CLUTCH LEVER
33	J44-2101	CLUTCH LEVER "
34	J44-2201	CLUTCH LEVER (L)
35	J28-1902	STABILIZER BAR
36	H70-4101	STABILIZER BAR RETAINER
37	G43-1002	CLUTCH CAM BALL BEARING
38	H26-6601	CLUTCH CAM BEARING COLLAR
39	J28-0501	KICK LEVER PLATE (A)
40	H53-1508	KICK LEVER PLATE SCREW
41	J40-7701	KICK LEVER PLATE SPRING
42	J28-0801	KICK LEVER
43	J28-0401	CLUTCH CAM PLATE
44	H92-8801	CLUTCH CAM PLATE SPRING
45	J05-5201	CLUTCH CAMPLATE PIN
46	J29-6001	CLUTCH CAM
47	H15-9201	CLUTCH CAM PLATE WASHER (A)
48	352-2510	CLUTCH CAM PLATE SCREW
49	H65-9101	KICK LEVER PLATE (B)
50	B03-2904	KICK LEVER PLATE (B) SCREW
51	H92-9001	PINION YOKE
52	J31-3901	PINION YOKE SPRING
53+89	Z02-3243	PINION + DRIVE GEAR UNIT
54	H44-8401	PINION BB RETAINER
55	J07-3501	PINION BB WASHER
56	J01-9301	PINION BALL BEARING
57	H15-9502	PINION BEARIG COLLAR
58	H44-0201	CLUTCH CAM SP COVER PLATE
59	J44-1601	RIGHT SIDE PLATE
60	J27-9701	SPOOL ADJ. CAP O'RING
61	J19-8801	PINION SHAFT
62	H16-1001	SPOOL ADJ. CAP WASHER (A)
63	B17-5503	SPOOL ADJ. CAP WASHER (B)
64	J27-9602	CAST CONTROL CAP
65	G04-0822	R/S PLATE SCREW
66	320-5901	WORM SHAFT RETAINER
67	B41-1702	WORM SHAFT WASHER
68	G46-9001	WORM SHAFT BEARING
69	J44-2501	LEVEL WIND
70	121-4212	OSC PAWL
71	373-1303	OSC PAWL WASHER
72	F40-2801	OSC PAWL HOLDER NUT
73	J28-1501	WORM SHAFT GUARD
74	J24-3601	WORM SHAFT
75	G46-9001	WORM SHAFT BEARING
76	J28-1401	WORM SHAFT GEAR
77	B33-9801	WORM SHAFT GEAR RETAINER
78	G09-9801	DRIVE SHAFT WASHER
79	320-8002	DRIVE SHAFT RETAINER
80	G46-6201	DRIVE SHAFT BALL BEARING
81	J28-1101	DRIVE SHAFT PLATE (A)
82	E13-4509	DRIVE SHAFT PLATE SCREW
83	J28-1001	WORM GEAR
84	J44-2401	DRIVE SHAFT
85	F65-7801	DRIVE SHAFT O'RING
86	H66-0901	RATCHET
87	H66-1101	RATCHET WASHER
88	H66-1001	DRIVE GEAR WASHER
90	H35-9001	DRAG WASHER
91	J44-3001	DRAG DISK WASHER
92	J41-0801	DRAG DISK WASHER PIN SPRING
93	J41-0901	DRAG DISK WASHER PIN
94	J45-8101	DRAG DISK WASHER O'RING
95	G01-1401	DRIVE SHAFT COLLAR
96	G81-9801	ROLLER CLUTCH
97	G43-1002	BALL BEARING
98	B55-3801	BALL BEARING WASHER
99	F02-8203	CLICK LEAF SPRING HOLDER
100	F03-2401	CLICK LEAF SPRING
101	150-8901	SPRING WASHER
102	H92-9501	STAR DRAG WASHER
103	J14-1001	DRAG NUT
104	J01-1901	DRAG NUT SPRING
105	J14-0004	STAR DRAG
106	F57-6601	HANDLE WASHER
107	J45-8201	HANDLE
108	J29-5502	HANDLE SCREW
109	H83-4508	HANDLE NUT PLATE
110	G83-5501	HANDLE NUT PLATE SCREW

SPECIAL PARTS STEEZATW1016SH

Key No.	Part No.	Part Name
53+89	Z02-3312	PINION + DRIVE GEAR UNIT
59	J44-1602	LEFT SIDE PLATE
109	H83-4504	HANDLE NUT PLATE

ReelSchematic