www.reelschematic.com

Printing a GPSMAP® 4000/5000 Series Flush Mount Template in Adobe Acrobat

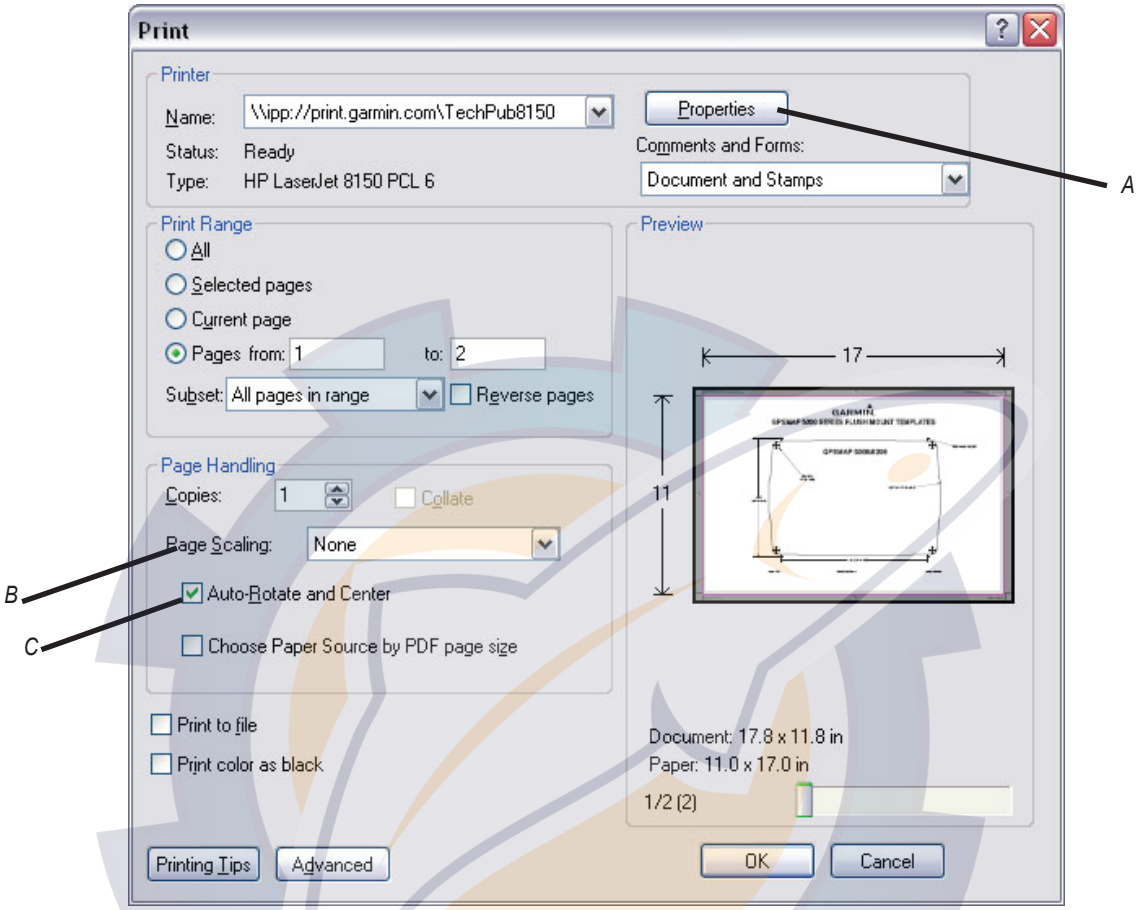

Adobe Acrobat Print Dialog Box

Notes:

(A) You must print the template on 11″x17″ paper. This is normally selected in the 'Printer Properties', and will differ by manufacturer.

- If your printer is not capable of printing on 11″x17″ paper, or you do not have 11″x17″ paper, you must print this template at an office services store or similar location that has the ability to print on 11″x17″ paper.

(B) You must set the 'Page Scaling' setting to 'None'.

(C) Select 'Auto-Rotate and Center' to make sure the template prints in the correct orientation.

Important Information:

- Before cutting the mounting surface, measure the printout to make sure it printed at the correct size. Both the length and width measurements are noted on the template. **Verify both the length and width measurements before cutting**.
- When cutting the Flush Mount template, cut **inside the line**, then sand and/or file the mounting surface to ensure a good fit.

www.reelschematic.com

GARMIN™

GPSMAP® 4008/4208 FLUSH MOUNT TEMPLATE

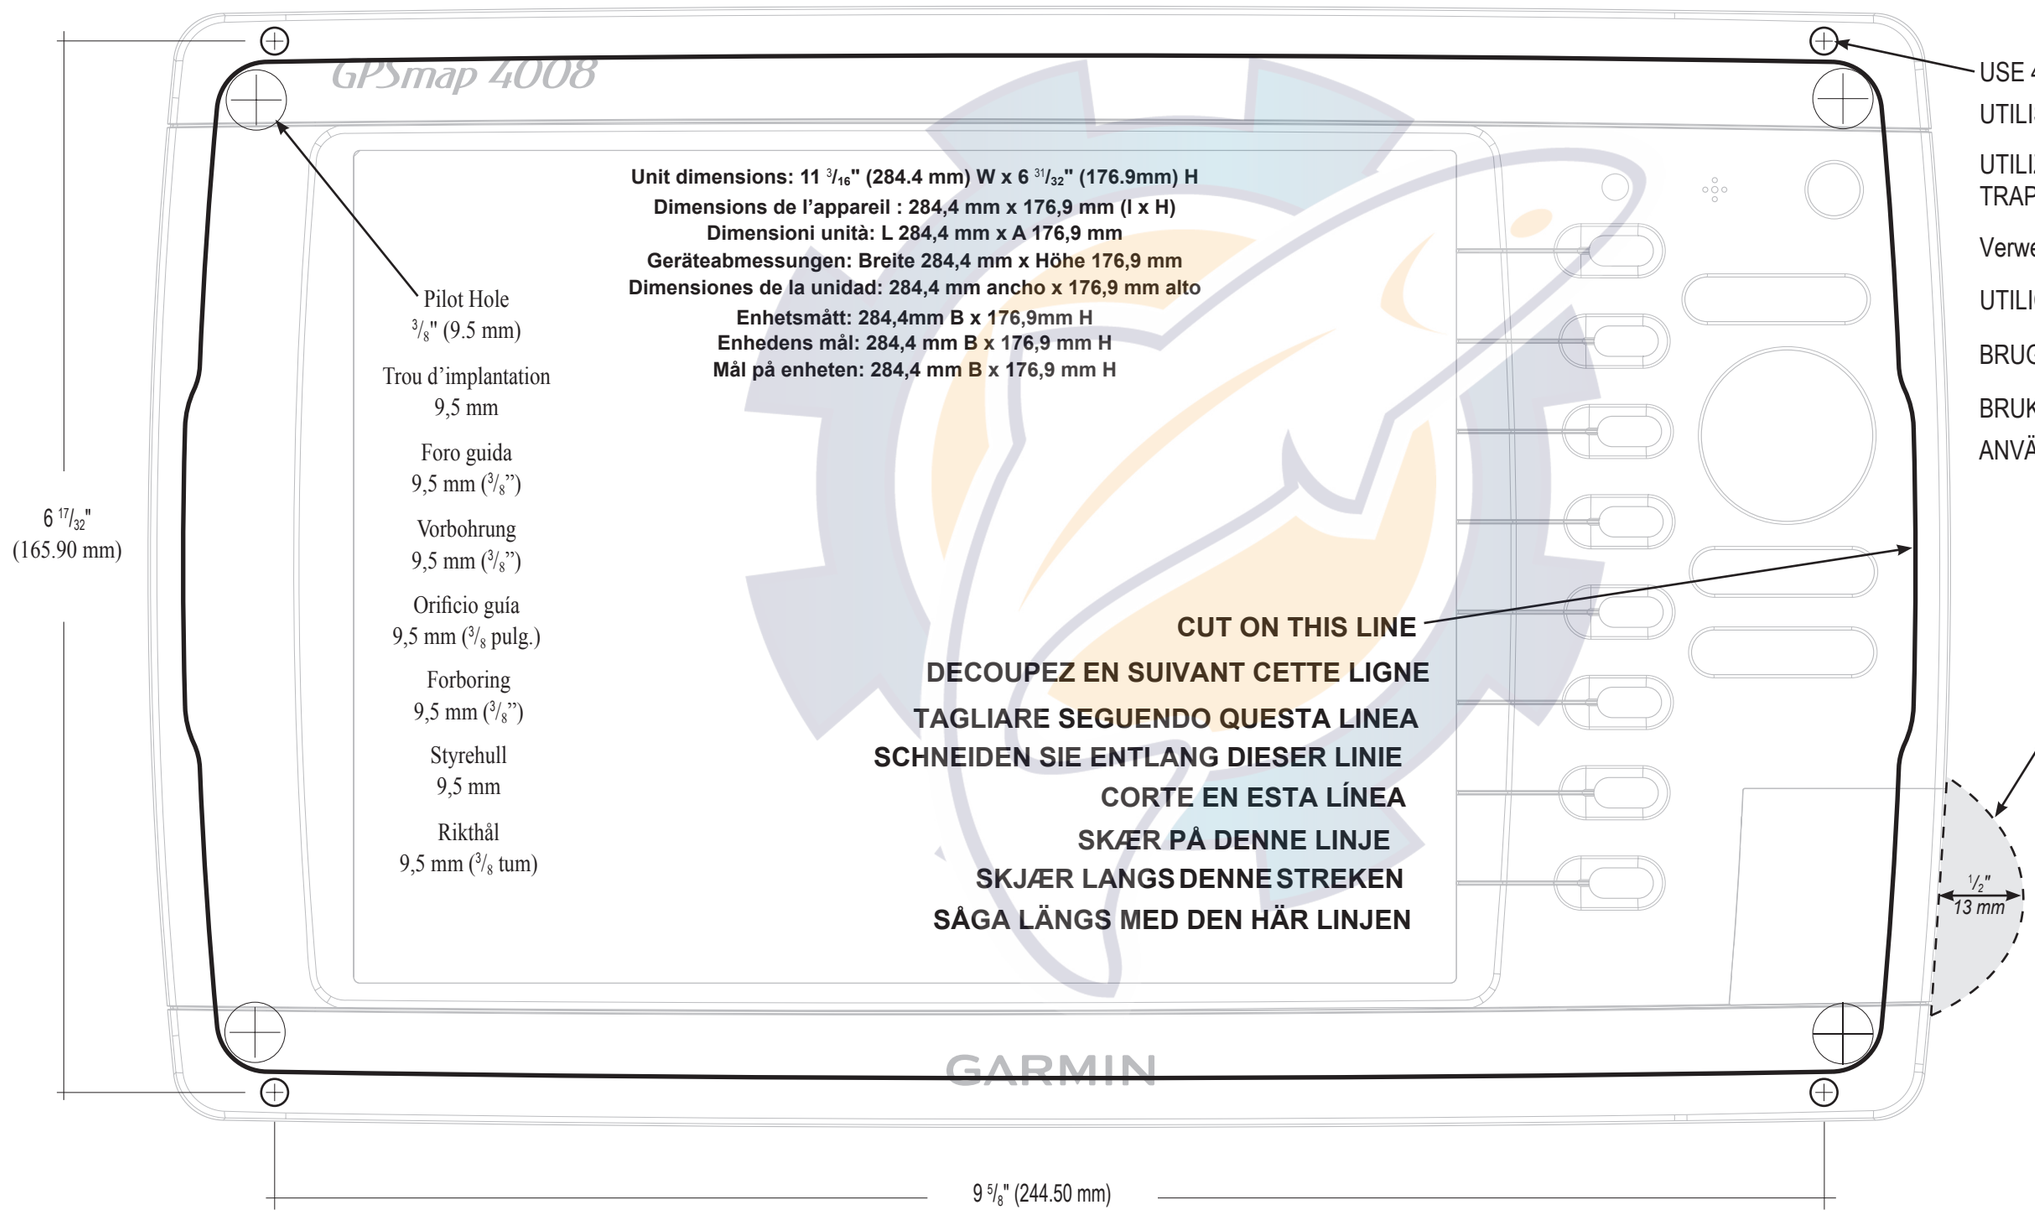

USE 4 mm DRILL BIT

UTILISATION d'un FORET de 4 mm

UTILIZZARE UNA PUNTA DA TRAPANO DA 4 mm

Verwenden Sie einen 4 mm-Bohrer

UTILICE UNA BROCA DE 4 mm

BRUG ET 4 mm BOREHOVED

BRUK EN 4 mm BIT

ANVÄND EN 4 mm BORRSPETS

Recommended clearance for SD card door

Débattement recommandé pour le cache de la carte SD

Spazio libero consigliato per lo sportello della scheda SD

Empfohlener Abstand für SD-Speicherkartenabdeckung

Se recomienda despejar la puerta de la tarjeta SD

Rekommenderat utrymme för SD-kortlucka

Anbefalet fri plads til SD-kortlåg

Anbefalt klaring for SD-kortdekselet

August 2007 190-00779-03 Rev. B Printed in Taiwan