PARTS DIAGRAM TE1161PT / TE1171PT

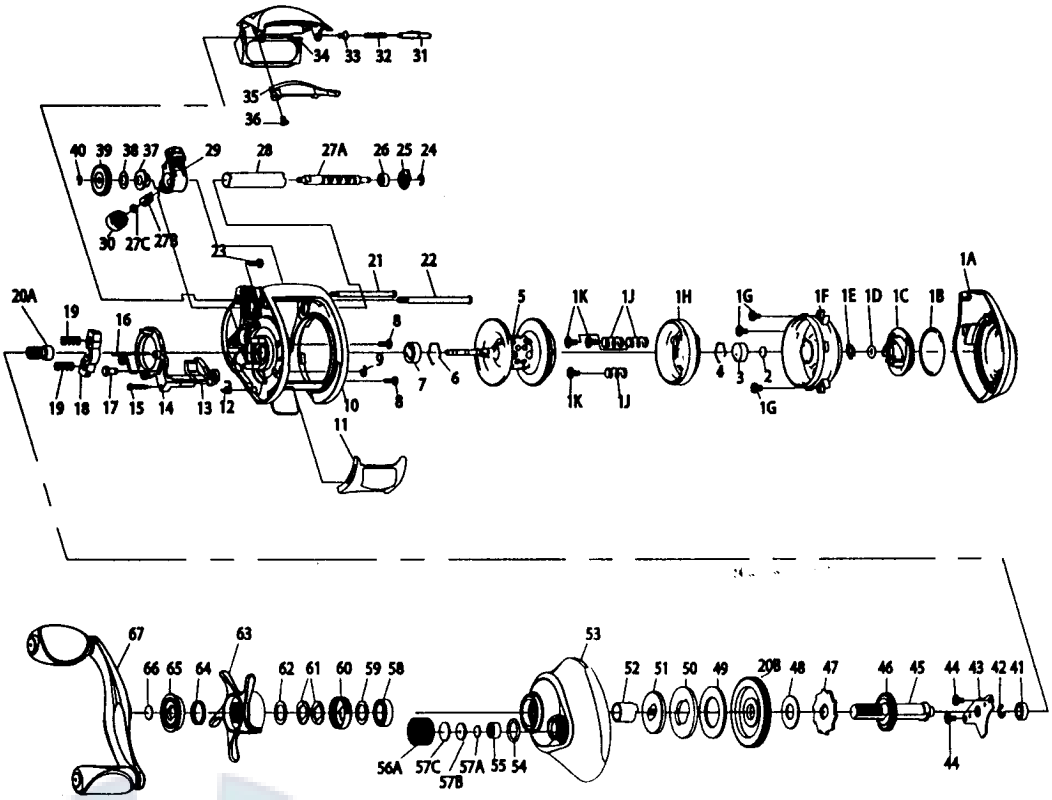

PARTS LIST-TE1160PT / TE1170PT/ TE1161PT / TE1171PT

Key	Description	Part No. 1160PT	1170PT	1161PT	1171PT
1	Palm Side Cover Kit	UX4023-03	UX4023-04	VX4023-03	VX4023-02
	1A - Palm Side Cover Assembly				
	1B - Centrifugal Dial Washer				
	1C - Centrifugal Dial Assembly				
	1D - Centrifugal Dial Friction Ring				
	1E - Centrifugal Dial Spring				
	1F - Spool Cover				
	1G - Spool Cover Screw				
	1H - Brake Ring Assembly				
	1J - Brake Ring Slider Spring				
	1K - Brake Ring Retainer Screw				
	2 Spool Tension Shim				
	3 Spool Shaft Ball Bearing (Palm)				
	4 Clip Ring				
2	Spool Tension Shim	QW032-04	QW032-04	QW032-04	QW032-04
3	Spool Shaft Ball Bearing (Palm)	QV017-01	QV017-01	QV017-01	QV017-01
4	Clip Ring	HV080-01	HV080-01	HV080-01	HV080-01
5	Spool Assembly	UX321-03	UX321-04	UX321-07	UX321-06
6	Clip Ring	EX080-01	EX080-01	EX080-01	EX080-01
7	Spool Shaft Ball Bearing (Gear)	EX017-02	EX017-02	EX017-02	EX017-02
8	Gear Side Cover Screw - B	QW053-01	QW053-01	QW053-01	QW053-01
9	E-Clip	NX092-01	NX092-01	NX092-01	NX092-01
10	Frame	UX001-03	UX001-04	VX001-03	VX001-02
11	Thumb Bar	UX009-01	UX009-01	VX009-01	VX009-01
12	Kick Lever Spring	GX097-01	GX097-01	MX097-01	MX097-01
13	Kick Lever	UX077-01	UX077-01	VX077-01	VX077-01
14	Release Slider	UX039-01	UX039-01	VX039-01	VX039-01
15	Thumb Bar Screw	ZW053-01	ZW053-01	ZW053-01	ZW053-01
16	Release Slider Spring	CX104-01	CX104-01	RX104-01	RX104-01
17	Release Slider Guide Pin	UX102-01	UX102-01	UX102-01	UX102-01
18	Pinion Yoke	GX025-01	GX025-01	MX025-01	MX025-01
19	Yoke Spring	GX040-01	GX040-01	GX040-01	GX040-01
20	Gear Kit	UX4011-01	VX4011-01	UX4011-02	VX4011-02
	20A - Pinion Gear Assembly				
	20B - Drive Gear				
21	Stabilizer Bar - B	UX061-01	UX061-01	UX061-01	UX061-01
22	Stabilizer Bar - A	VX061-01	VX061-01	VX061-01	VX061-01
23	Gear Side Cover Screw - A	BX123-01	BX123-01	BX123-01	BX123-01
24	E-Clip	NX092-01	NX092-01	NX092-01	NX092-01
25	Bearing Retainer	CX067-01	CX067-01	CX067-01	CX067-01
26	Worm Shaft Ball Bearing	XX117-01	XX117-01	XX117-01	XX117-01
27	Worm Shaft Kit Include	HV4072-02	HV4072-02	HV4072-02	HV4072-02
	27A - Worm Shaft				
	27B - Line Guide Pawl				
	27C - Carrier Washer				

Key	Description	Part No. 1160PT	1170PT	1161PT	1171PT
28	Worm Shaft Guide	UX016-01	UX016-01	UX016-01	UX016-01
29	Line Guide Carrier	UX047-01	UX047-01	UX047-01	UX047-01
30	Line Guide Carrier Screw	ZW007-02	ZW007-02	ZW007-02	ZW007-02
31	Side Cover Locking Lever	YX119-02	YX119-02	TX119-02	TX119-02
32	Side Cvr Locking Lever Spring	ZW096-01	ZW096-01	ZW096-01	ZW096-01
33	Hood Screw	HX107-01	HX107-01	HX107-01	HX107-01
34	Hood	UX027-02	UX027-03	VX027-03	VX027-02
35	Front Support	UX099-01	UX099-02	VX099-02	VX099-01
36	Front Support Screw	HX107-01	HX107-01	HX107-01	HX107-01
37	Worm Shaft Bushing (Gear)	HV068-01	HV068-01	HV068-01	HV068-01
38	O/S Pinion Gear Washer	EX035-01	EX035-01	EX035-01	EX035-01
39	O/S Pinion Gear	UX085-01	UX085-01	UX085-01	UX085-01
40	E-Clip	NX090-01	NX090-01	NX090-01	NX090-01
41	Crank Shaft Bearing - Lower	SW017-01	SW017-01	SW017-01	SW017-01
42	E-Clip	QW120-01	QW120-01	QW120-01	QW120-01
43	Crank Shaft Retainer	UX002-01	UX002-01	UX002-01	UX002-01
44	Crank Shaft Retainer Screw	JX107-01	JX107-01	JX107-01	JX107-01
45	Crank Shaft	UX008-01	UX008-01	UX008-02	UX008-02
46	O/S Drive Gear	UX112-01	UX112-01	UX112-01	UX112-01
47	Trip Ratchet	EX083-01	EX083-01	EX083-01	EX083-01
48	Trip Ratchet Washer	QW111-01	QW111-01	QW111-01	QW111-01
49	Drag Disc	UX059-01	UX059-01	UX059-01	UX059-01
50	Drag Key Washer	UX045-01	UX045-01	UX045-01	UX045-01
51	Link	UX036-01	UX036-01	UX036-01	UX036-01
52	One Way Bearing Sleeve	UX052-01	UX052-01	UX052-01	UX052-01
53	Gear Side Cover Assembly	UX324-03	UX324-04	VX324-03	VX324-02
54	Tension Knob O-Ring	QW101-01	QW101-01	QW101-01	QW101-01
55	Tension Knob Ball Bearing	SW117-01	SW117-01	SW117-01	SW117-01
56	Spool Tension Kit	CX4033-04	CX4033-05	UX4033-04	UX4033-05
	56A - Spool Tension Knob Assembly				
57	Spool Tension Washer Kit	QW4032-01	QW4032-01	QW4032-01	QW4032-01
	57A - Spool Tension Washer				
	57B - Spool Tension Collar				
	57C - Spool Cushion Washer				
58	Crank Shaft Ball Bearing	TW058-01	TW058-01	TW058-01	TW058-01
59	Star Drag Washer	ZW032-01	ZW032-01	ZW032-01	ZW032-01
60	Drag Click Spring Assembly	YX4114-01	YX4114-01	YX4114-01	YX4114-01
61	Spring "D" Washer	JX046-01	JX046-01	JX046-01	JX046-01
62	Star Drag Washer	ZW032-01	ZW032-01	ZW032-01	ZW032-01
63	Star Drag	UX055-02	UX055-02	VX355-02	VX355-02
64	Handle Ratchet Spring	UX040-01	UX040-01	UX040-01	UX040-01
65	Handle Ratchet	UX054-01	UX054-01	VX054-01	VX054-01
66	Handle Washer	UX032-01	UX032-01	UX032-01	UX032-01
67	Handle Assembly	UX318-02	UX318-02	VX318-02	VX318-02