
Assembly Instructions for the Scotty No. 257 Triple Rod Holder

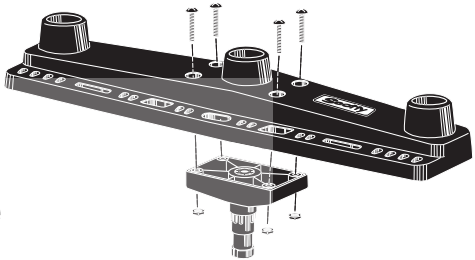

Attach the center mounting post to the underside of the Triple Rod Holder Board using the 1/4" machine screws and nylock nuts provided.

*Note: When fastening the Scotty No. 241 mounting bracket to your boat, ensure that the "Scotty" logo reads upright when looking from inboard (see diagram). This ensures secure locking of the mounting post.

