


1900 211

MC-52

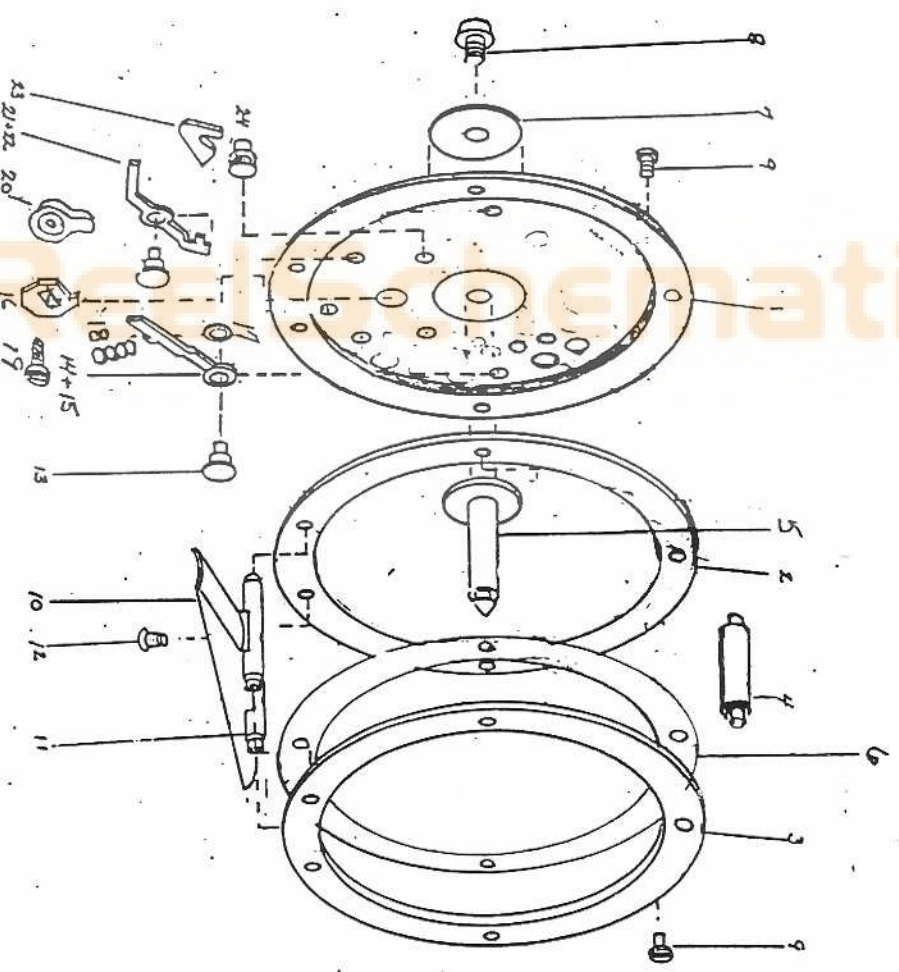

1	2	3	4	5	6	7	8	9	10	11	12	13
BACK-S-I-MC 56	LINE GUIDE 195	TOP RIM 197	HEEL POST 156	SPINDLE 450-P	LINE GUIDE 196	SPINDLE CAP 455	SPINDLE SCREW 838-S	HEEL FOOT 740	HEEL FOOT POST	OLIVE SCREW 201	LEVER STUD 750	
QUAN: 1	1	1	5	1	1	1	1	1	2	2	2	2

15	16	17	18	19	20	21	22	23	24	25
RATCHET LEVER 755L	CAM #150	STUD WASHER #749	SPRING #510S	CAM SCREW #139	CAM KNOB #146	RATCHET LEVER 754	RATCHET LEVER 754L	RATCHET PAWL 756	RATCHET PAWL STIP 751	
QUAN: 1	1	3	1	1	1	1	1	1	1	

THE 744 WILL HAVE TO BE USED TO MAKE THIS PART UNTIL 740 IS AVAILABLE.