

Canoe Anchor Installation Instructions

K-01.1331.2028A

Old Town[®]
GENUINE WATERCRAFT SINCE 1898

ADVENTURE
LIVES HERE.

Thank you for choosing adventure.

<u>Table of Contents</u>	<u>Pg</u>
1. a. What's in the box? b. Safety Information	1
2. Anchor Flush Mount Installation	2
3. Folding Anchor Installation	3

800-343-1555 | OLDTOWNCANOE.COM






Always wear Safety Glasses when handling tools and equipment!




Before getting started please read all instructions thoroughly to prevent injury or death.

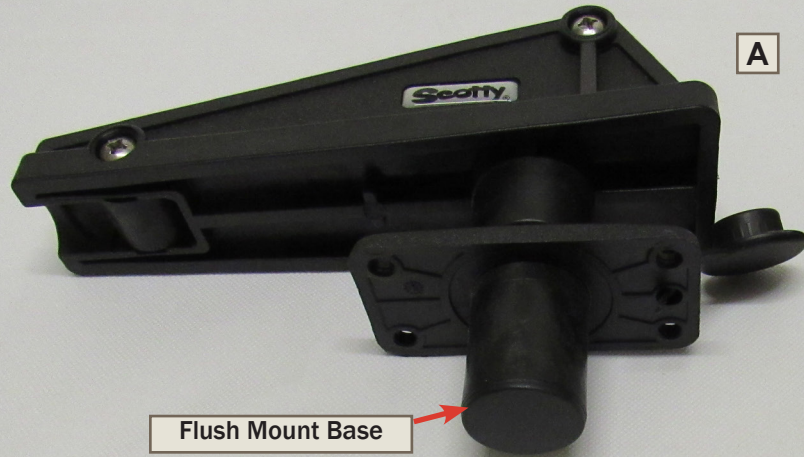

A




E

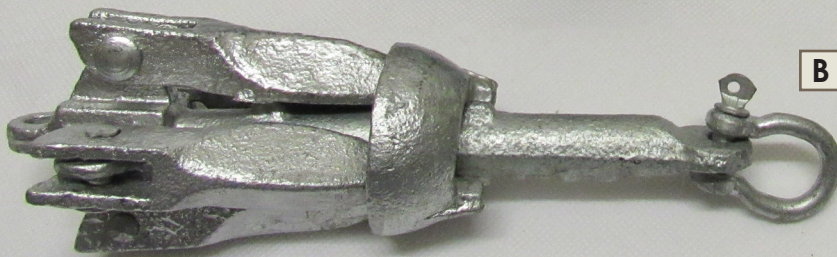

B



D

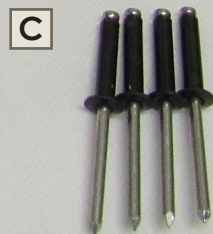


C


Ref.	Part	Part Number	Qty.
A	Anchor Lock Flush Mount	01.1332.2714	1
B	1.5lb Folding Anchor	01.1332.2709	1
C	AA611D Rivet	01.1315.1564	4
D	3/16" Backup Deck Washer	01.1315.1568	4
E	3mm Black Nylon Rope	01.1315.0455	30

✓	TOOLS REQUIRED:
	Safety Glasses
	Drill
	13/64" Drill Bit
	1-3/8" Hole Saw
	Rivet Gun
	Tape Measure
	Marking Pencil


2 | Anchor Flush Mount Installation

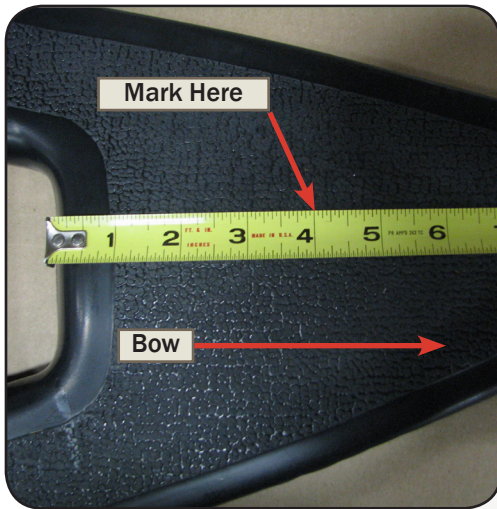


1. Position the canoe in an upright and flat position. Measure 4" toward the bow from the handle opening.

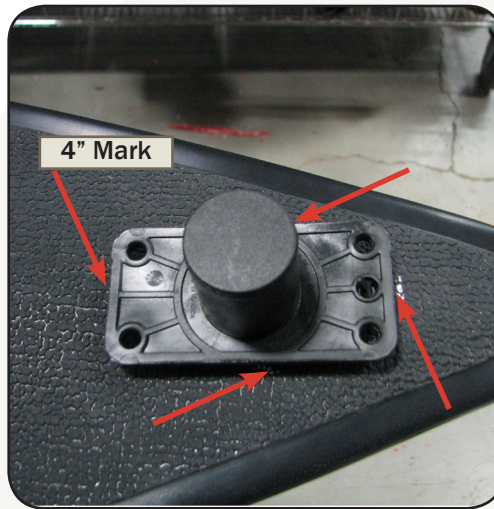

2. Locate the base attached to the Anchor Flush Mount(A). Pull and twist off to use as a jig. Align the mount upside down and forward of the 4" mark. Mark the three remaining sides.

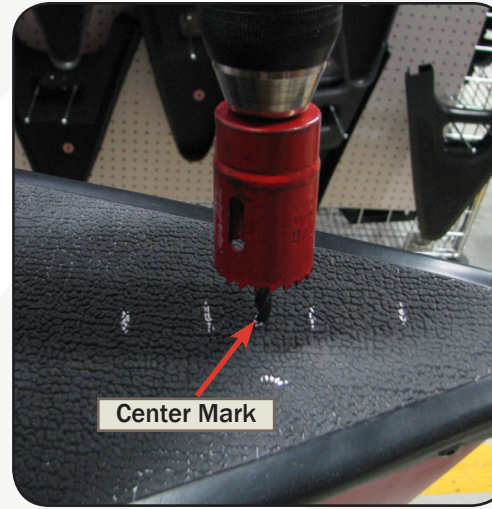

3. Find the center of the four marks and mark that center point. Use the 1-3/8" hole saw to drill out the center hole.

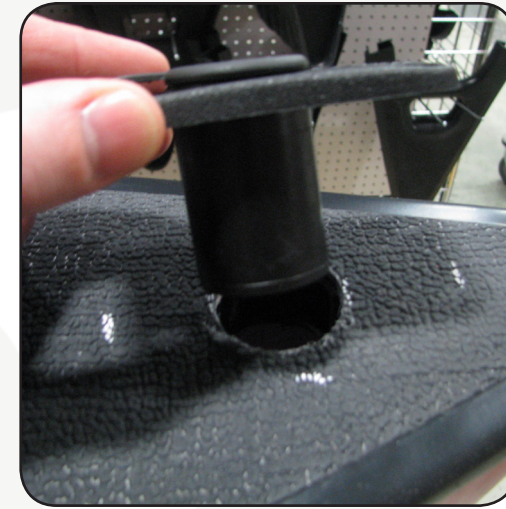

4. Insert the Anchor Lock Flush Mount(A) into the newly drilled hole.



5. Use the 13/64" drill bit to drill out the four holes in the flush mount for the AA611D Rivets(C).





6. Insert the Rivets(C) and add Backup Deck Washers(D) to the underside of each rivet. Holding the washers in place, pop each rivet with a rivet gun.



7. Secure the Anchor Lock Flush Mount(A) into its base.


Continue on to page 4 for Anchor Installation.

4 | Folding Anchor Installation

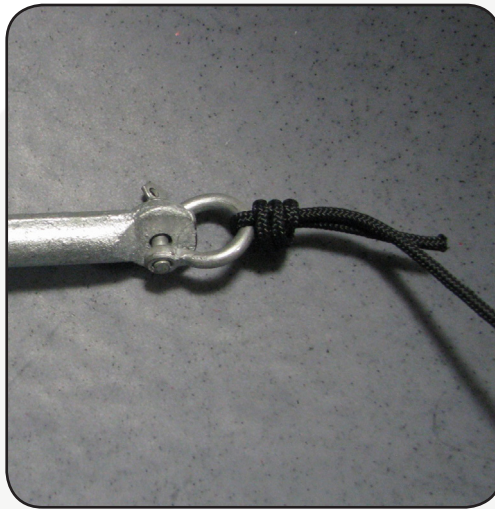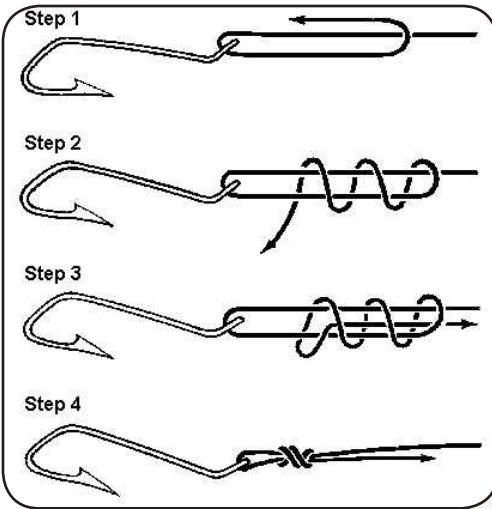


8a. Collect the folding Anchor(B) and 3mm Nylon Rope(E). Following the above steps, tie a Barrel Knot to secure the rope to the anchor.

8b. The Anchor(B) and Rope(E) will look this like.

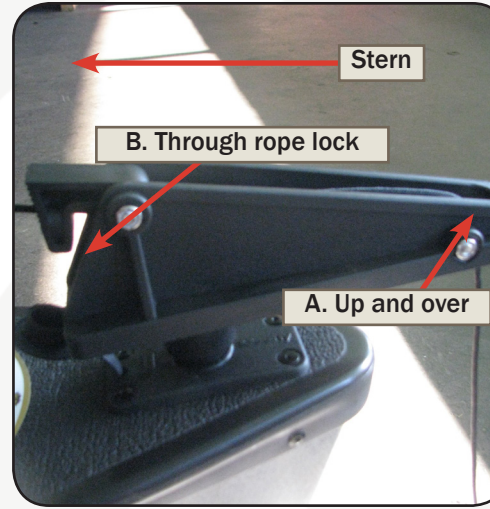

9. Feed the free end of the Rope(E) through the bottom of the Flush Mount(A), up and over the roller toward the back of the boat, then through the rope lock as shown.

Note: Tie a stopper knot in the free end of the rope to prevent the anchor from pulling free.

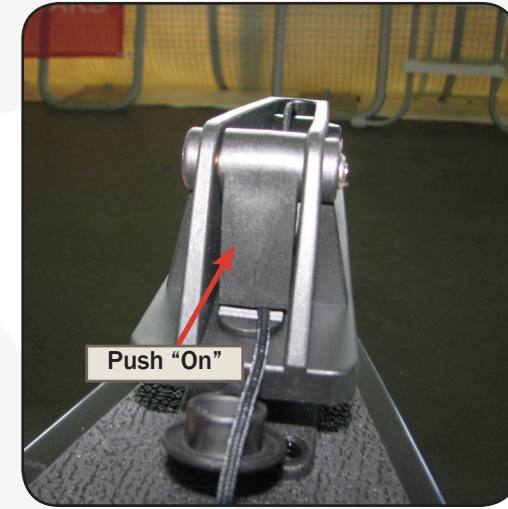

10. Secure the rope and anchor in place by pushing the Rope Lock to the "On" position.