

# Otter<sup>®</sup>

## Hideout Skirt Extension Installation Instructions


1. Remove plastic trim lock on the sides of the shelter if they are already attached. Trim lock at the back of the shelter should remain attached or be installed if not already done so.



2. Lay trim lock on a flat surface so the opening is facing upward and the outside face is towards you. Lay fabric skirt extension over the top of the trim lock and 1-2 inches from the end as shown. The inside coated surface should face upward.



3. Use a Phillips screwdriver to push the fabric down into the opening of the trim lock.

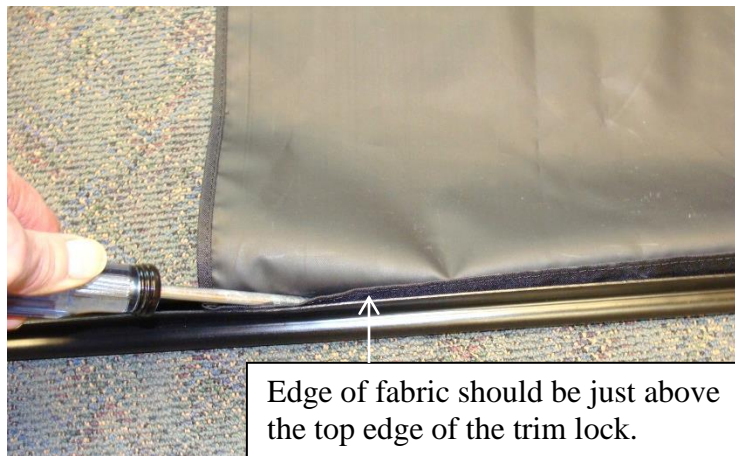


4. Attach trim lock with skirt extension over the existing skirt and shelter fabric and onto the lip of the sled. Secure with the screws that came with the trim lock kit.







5. Optional inside front skirt. There are two skirt pieces that may be attached on the inside of house. Start at the corner of the sled arm using the trim lock to secure the fabric skirt to the sled.  
**Note: Trimlock will install much easier at room temperature when it is more flexible.**

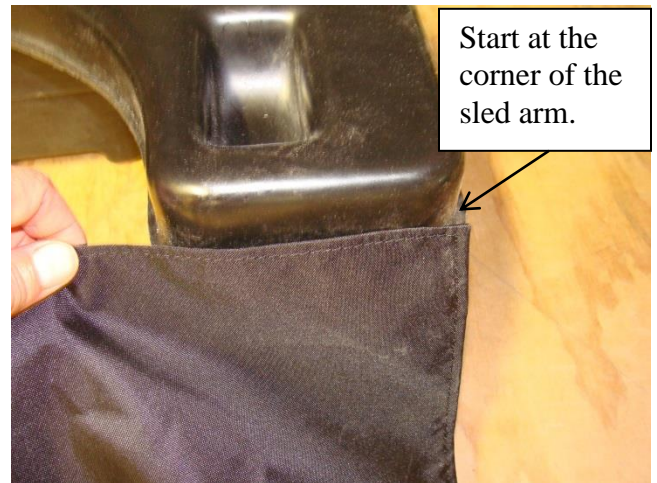

6. Use your fingers and hands to squeeze the trim lock onto the sled lip. If necessary the trim lock may be tapped into place with a hammer or mallet. Work your way through the corners and curves to the center. Secure with screws that came with the trim lock kit.

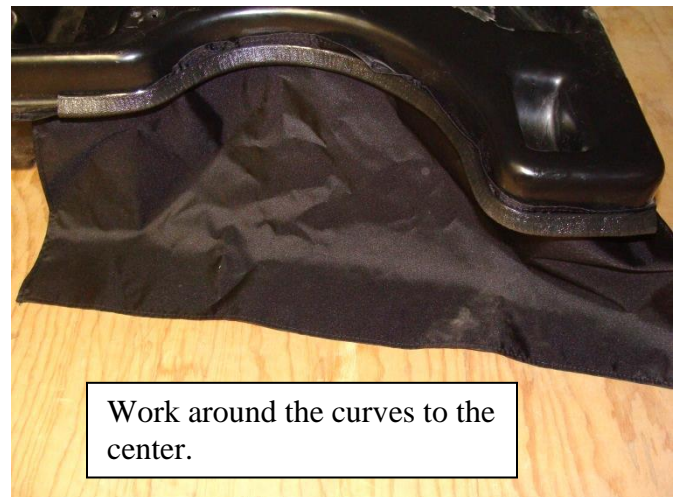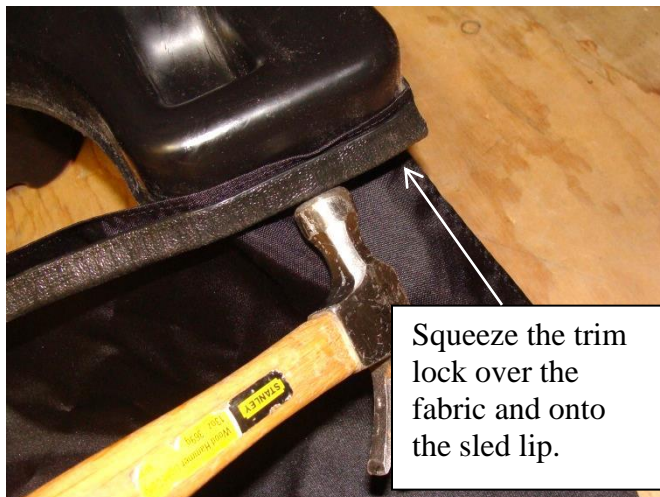

7. Repeat on the other side. The trim lock should meet in the center and the fabric should overlap slightly. Secure with screws.

