


Abel Trout & Creek Reel

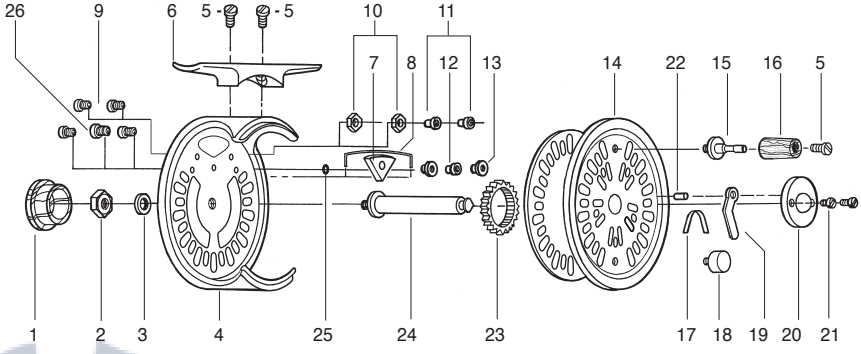

To Change Spool and Adjust Drag

1. Release Spool Mechanism with finger pressure at spool, and at the same time, pull spool outward from frame. (Besure line and leader is fully retrieved).
2. To set-up click drag for right-hand retrieve; with reel foot on top:

   A. With a small screwdriver, toothpick or finger, move Right Hex Cam Adjuster to a light setting. (Light setting position is with the Thin hex side against the pawl spring.)

   B. Move the Left Hex Cam Adjuster to heavy setting. (Heavy setting position is with the Thick hex side against the pawl spring.)



3. To set click drag for left-hand retrieve, reverse above process.
4. Vary drag and incoming click setting to meet your own needs by flipping the two Hex Cams to any of the six positions. thereby giving you virtually infinite incoming and outgoing line control.
5. You can remove and bend Pawl Spring to increase range of drag.

No.	Part Name
1.	Plug
2.	Lock Nut
3.	Washer
4.	Frame
5.	Pan Head Screw
6.	Foot
7.	Pawl
8.	Pawl Spring
9.	Cam Mounting Screw
10.	Hex Cam
11.	Cam Retainer
12.	Pawl Retainer
13.	Spring Retainer
14.	Spool
15.	Handle Post
16.	Handle
17.	Latch Spring
18.	Counter Weight
19.	Latch
20.	Housing, Latch
21.	Latch Mounting Screw
22.	Latch Pin
23.	Gear
24.	Main Shaft
25.	Spacer
26.	Pawl Screw

Easy Care Instructions

(Abe Lube Kit recommended)

1. Keep pawl springs, gear and pawl coated with medium to heavy all-purpose grease.
2. Apply a light grease to the main shaft and handle as needed.
3. Always remove sand and grit after use.
4. Rinse reel in warm, soapy water after each exposure to saltwater. Use a small, soft brush to remove salt residue from hard to reach places-screws, holes, etc. Please Note > Abel Creek Reels are made primarily for fresh-water use and are not warranted for long-term use in salt-water.
5. Store in protective reel case both on and off the rod.
6. Abel will clean and service your reel for $20 plus $7 Shipping and handing. We recommend 5-10 years intervals.

Abel®