
www.reelschematic.com

MotorGuide REPAIR PARTS

Model: POWER plus

QS43V

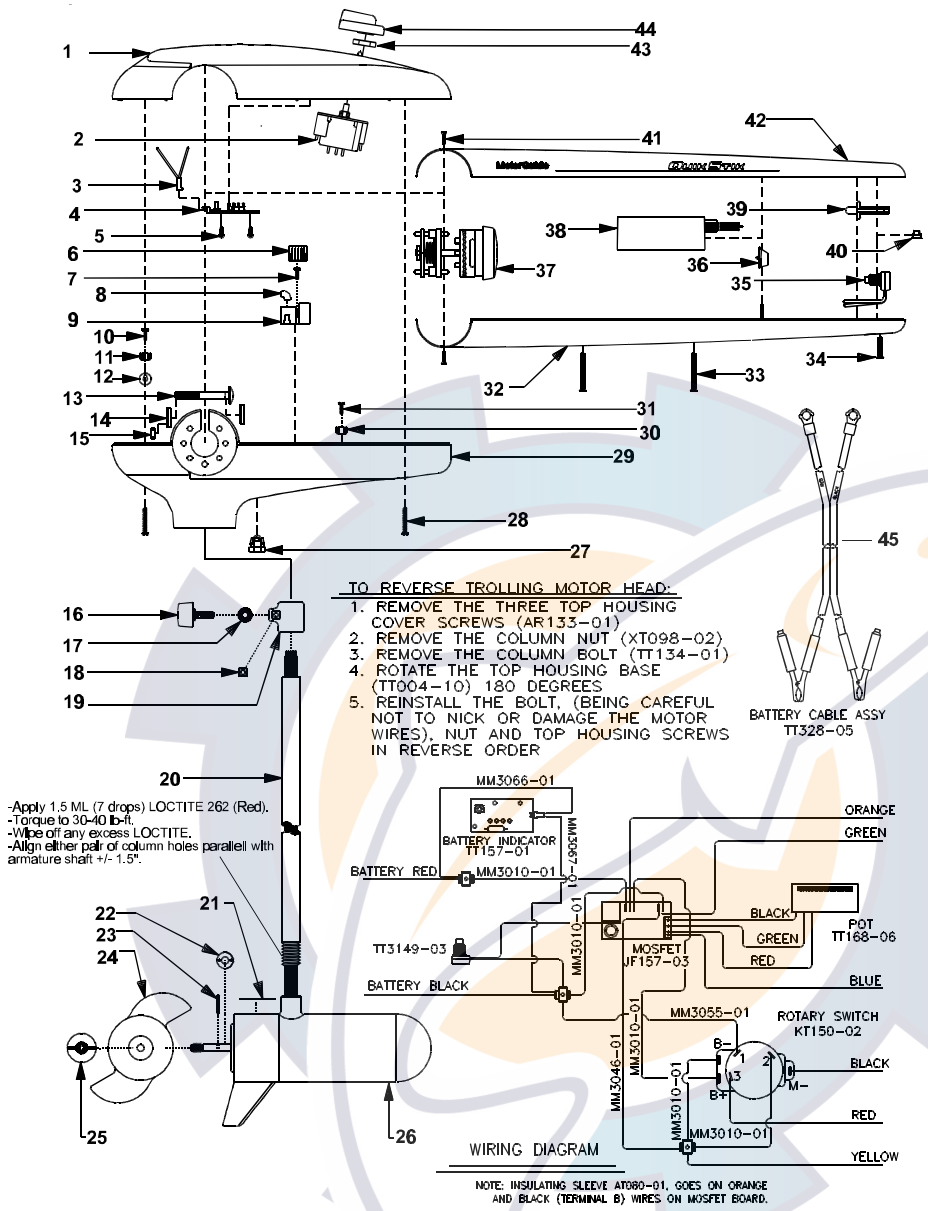

SPECIFICATIONS:

Year of Intro	1998
Thrust	43LBS
Volts	12VDC
Amp Draw	0 to 48 amps
Mount	09 Transom
Speeds	Variable

QUICK REFERENCE PARTS GUIDE:

Rotary Switch	KT150-02
ON/OFF Switch	TT3149-03
DA Board	JF157-03
MOSFET	JF096-07
Motor Seal Kit	6220
Slide Pot	TT168-06

PARTS ORDERING & TECH ASSISTANCE

MotorGuide Consumer Relations
Phone 918-831-6989
Fax 800-982-8093

Send Returned Goods to:
MotorGuide
605 Hwy 12 West
Starkville, MS 39760

Returned Goods must be accompanied with a Returned Goods Authorization. Contact MotorGuide Consumer Relations to obtain RGA.

KEY#	PART#	DESCRIPTION
1	TT053-10	COVER 5 SPD QS GENERIC
2	KT150-02	ROTARY SWITCH
3	WF329-01	CONNECTOR\JUMPER ASY
4	TT157-01	BATTERY LEVEL INDICATOR
5	AF141-01	SELF TAPPING SCREW
6	AP029-01	AMP CONNECTOR
7	AF141-01	SELF TAPPING SCREW
8	AT080-01	INSULATING SLEEVE
9	JF157-03	12V DURA AMP BOARD
10	GR133-01	310 X 1\2 SCREW
11	FT160-03	TERMINAL (4 PRONG)
12	TT098-03	ON SERT PAL NUT
13	TT134-01	BOLT
14	TT171-04	CURVED WASHER
15	XT098-02	NYLON LOCK NUT
16	AR082-02	BAR KNOB DEPTH ADJUST
17	AR171-01	COLUMN CLAMP WASHER
18	FR098-01	COLUMN SUPPORT NUT
19	AR051-01	DEPTH ADJUST COLLAR
20	TT049-04	COLUMN 30"
	FR049-15	COLUMN 42"
21	ET060-04	LOWER UNIT DECAL
22	AR175-01	MONOFILIMENT WASHER
23	BR102-01	PROP PIN
24	AF124-10	3 BLADE PROP
25	AR099-01	PROP NUT

KEY#	PART#	DESCRIPTION
26	KF397-03	LOWER UNIT
27	GR019-01	BATTERY CABLE BUSHING
28	AR133-01	8 X 1 3\8 SCREW
29	TT004-10	T\H BASE GENERIC
30	FT160-03	TERMINAL 4 PRONG
31	GR133-01	310 X 1\2 SCREW
32	TT072-05	LOWER HANDLE QS BLACK
33	TT133-03	#6 X 1" SCREW
34	TT133-02	#6 X .75 SCREW
35	TT3149-03	ON\OFF SWITCH ASY
36	TT3001-03	ACTUATOR ASY
37	TT372-04	HANDLE CLUTCH ASY
38	TT168-06	POTENTIOMETER
39	TT001-04	ACTUATOR ON\OFF
40	TT177-02	SWITCH BOOT
41	TT133-01	#6 X .437 SCREW
42	TT072-12	UPPER HANDLE
43	AT098-01	PAL NUT
44	TT082-06	ROTARY KNOB
45	TT328-05	BATTERY CABLE ASY


PARTS NOT ILLUSTRATED

TT056-08	DECAL
MM5604	OWNERS MANUAL

www.reelschematic.com

LOWER UNIT BREAKDOWN

Model:
QS43V

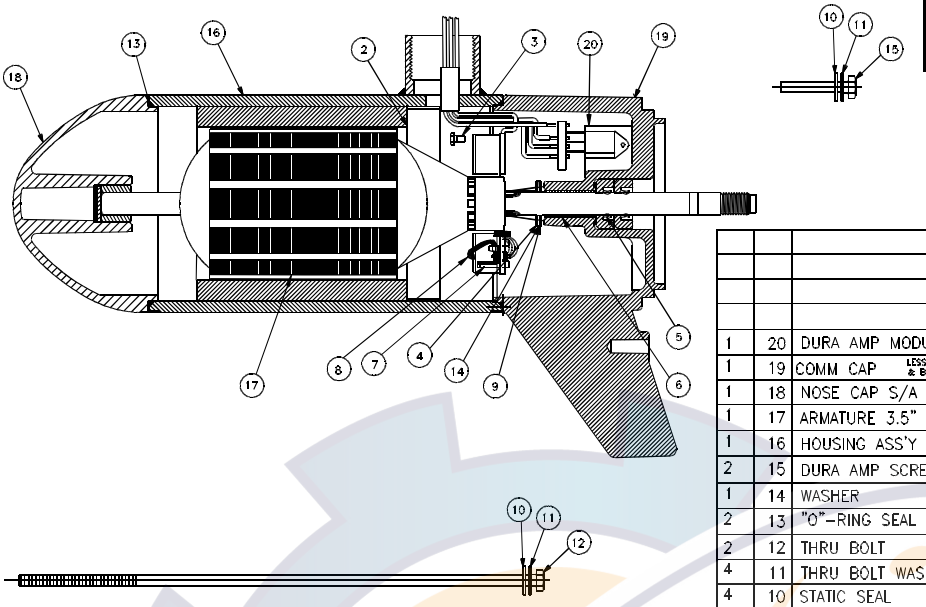

3.5"-37# DURA AMP MOTOR

REPAIR PARTS LIST

NO. REQ'D	ITEM NO.	DESCRIPTION	PART NO.
1	20	DURA AMP MODULE	JF096-07
1	19	COMM CAP LESS MOSFET & BRUSH ASS'Y	JF3205-04DSAW
1	18	NOSE CAP S/A	JF3212-01BSAW
1	17	ARMATURE 3.5"	KF3207-01
1	16	HOUSING ASS'Y	KF3210-01BSAW
2	15	DURA AMP SCREW	MR229-01
1	14	WASHER	MR227-01
2	13	"O"-RING SEAL	MR217-01
2	12	THRU BOLT	MR218-01
4	11	THRU BOLT WASHER	MR216-01
4	10	STATIC SEAL	MR222-01
1	9	NYLATRON WASHER	MR226-01
1	8	BRUSH ASS'Y-LESS SPRING	JF3201-01
2	7	BRUSH SPRINGS	MR214-02
1	6	BEARING	MR206-01
2	5	SHAFT SEAL	MR223-01
1	4	"E" RING	MR219-02
2	3	BRUSH CARD SCREW	MR228-01
1	2	RETAINER	JF233-01
X	1	3.5"-37# D.A. MOTOR	KF097-03

WIRING

